



# Asus ROG Strix GL702VM-BHI7N09 Screen Replacement

This guide explains how to remove the screen of the Asus ROG Strix GL702VM-BHI7N09 for replacement.

Written By: Zach Langer



---

## INTRODUCTION

This guide explains how to remove the screen of the Asus ROG Strix GL702VM-BHI7N09 for replacement. This replacement involves numerous screws and snap seals that add to the time it takes to replace; however, it is not a very difficult replacement.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Back Panel



- Flip the laptop over to the back panel, with the serial numbers facing up.
- Using a Phillips #1 screwdriver, remove the ten 12 mm screws from the back panel.

## Step 2



 The snap seals don't need a lot of pressure to open, and may break if forced. Be gentle with the opening tool.

- Wedge the sharp edge of the plastic opening tool into the seam between the back panel and the rest of the laptop, then gently pry the panel up.
- ⓘ There will be a snapping sound as you remove the back panel, but that is just the seal loosening.
- Continue breaking the seals by sliding the plastic opening tool around the entire laptop under the seam until the back panel is free.
- Once you have broken all the seals, carefully lift the panel off.

### Step 3 — Screen



- Using a Phillips #1 screwdriver, remove the two 6 mm screws that hold the hinge.

### Step 4




- Repeat Step 3 on the opposite hinge.

## Step 5



- Using a Phillips #1 screwdriver, remove the one 4 mm screw from the motherboard to release the Intel chip.

## Step 6

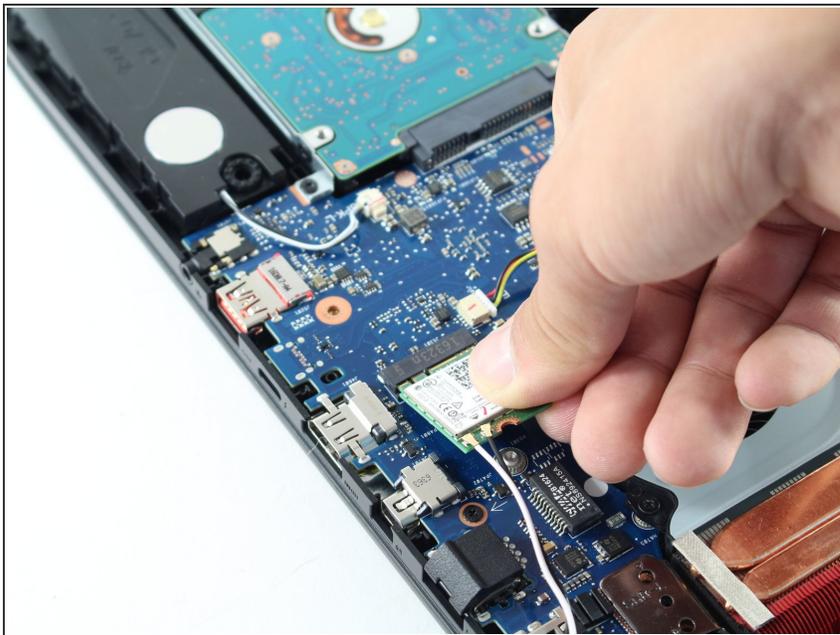

- Disconnect the chip from the motherboard by pulling it gently toward the laptop hinges.

## Step 7




- Disconnect the black wire adjacent to the fan from the motherboard by gently pulling it upward.
- ⓘ You may hear some small clicks, but don't worry; it's just the pins disconnecting.

## Step 8




- While holding down the screen, lift the base of the laptop to an angle between 45 and 90 degrees.
- Remove the screen from the base by gently pulling the base in the direction of the screen, parallel to the ground.

## Step 9

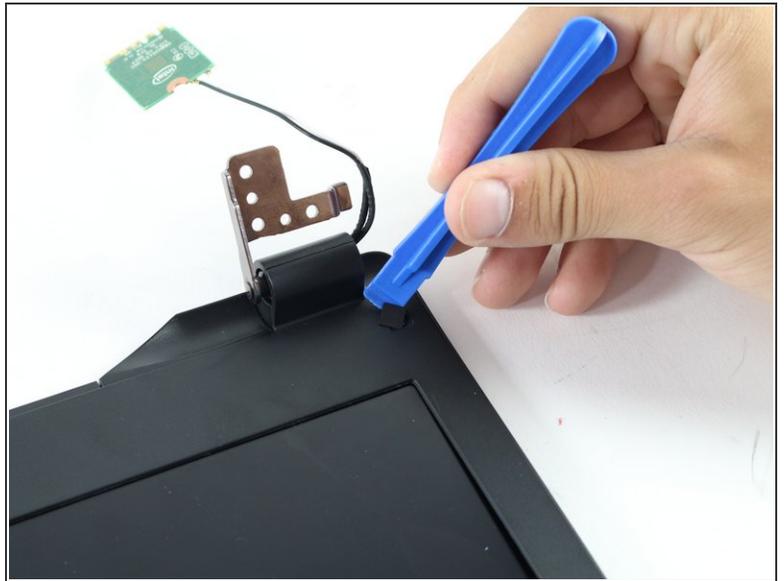

- Using the blue plastic opening tool, pry up the squares that cover two screws on the front of the screen.

## Step 10

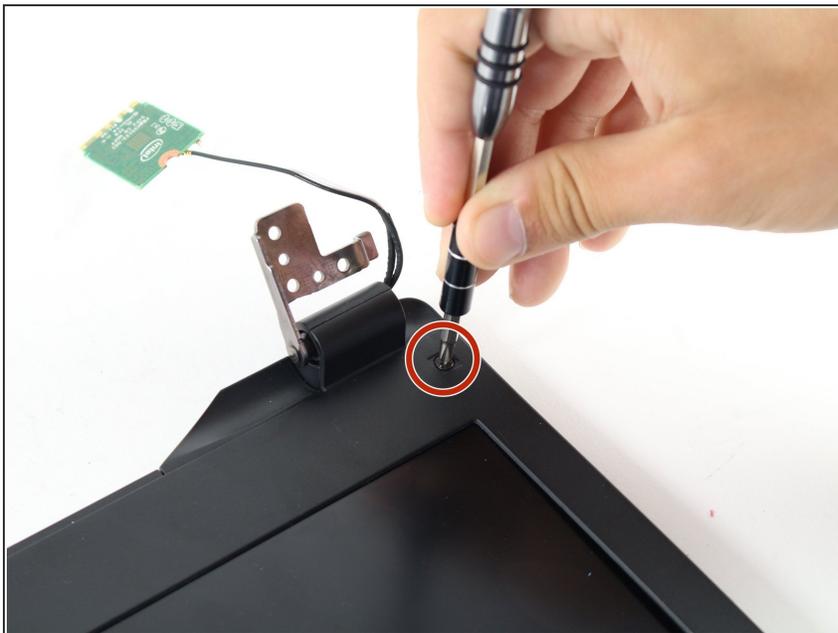

- Using the Phillips #1 screwdriver, remove the 5 mm screws from both sides of the screen.

## Step 11



**⚠** Slowly use the opening tool, as it is easy to break the snap seals.

- Use the plastic opening tool to pry the plastic covering away from the screen, it does not matter where you start.
- ⓘ You will hear some snapping and loud cracks as you release the case, but that is completely normal.
- ⓘ There may be some adhesive near the bottom of the screen, but it should be easy to remove by peeling it with the plastic opening tool.

## Step 12



- Using the Phillips #1 screwdriver, remove the four 4 mm screws along the edge.

## Step 13



**!** When lifting, be sure to not strain the wires on the left side of the photo, as that could lead to a malfunction in the wires.

- Simultaneously lift and turn over the screen.

**i** The purpose of this step is to expose the connection from the wires to the screen.

## Step 14



- Gently peel off the tape over the wire connection.
  - ⓘ If you can't grip it, try using the opening tool to lift up an edge of the tape.
- Disconnect the wire by pulling it directly away from the screen.
- ⓘ The screen is now fully disconnected and can be removed from its case.

To reassemble your device, follow these instructions in reverse order.