




# Acer Chromebook 15 C910-C453 Battery Replacement

This guide will show you step-by-step how to remove and replace the battery in the Acer Chromebook 15 C910-C453.

Written By: Jacob Rakestraw

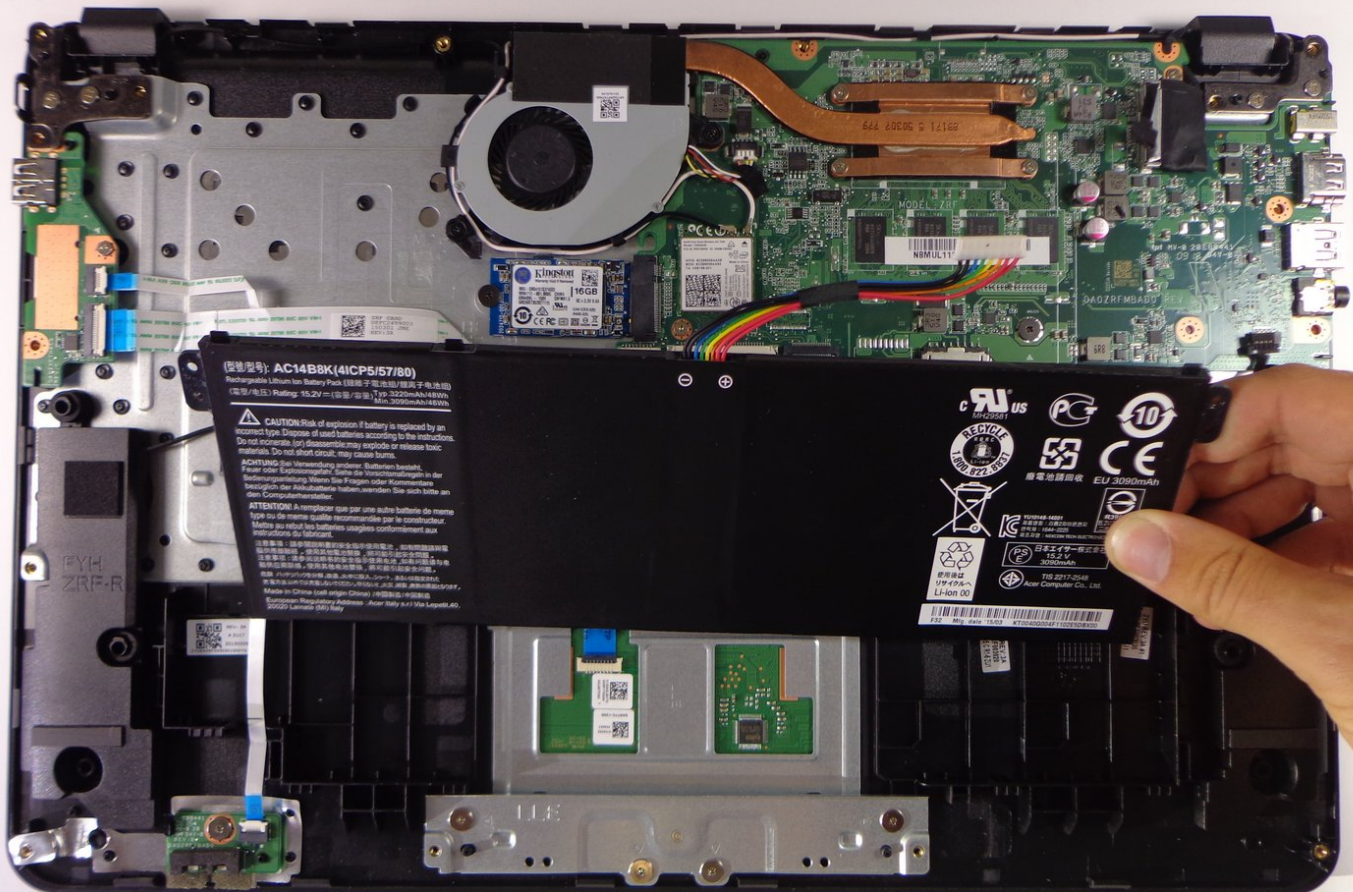

# INTRODUCTION

Use this guide to replace the battery in the Acer Chromebook 15 C910-C453.



## TOOLS:


- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)
- [Spudger](#) (1)



## PARTS:

- [36Wh Acer Chromebook 15 CB3-531-C4A5 CB3-531-C2ZV Battery](#) (1)

## Step 1 — Battery

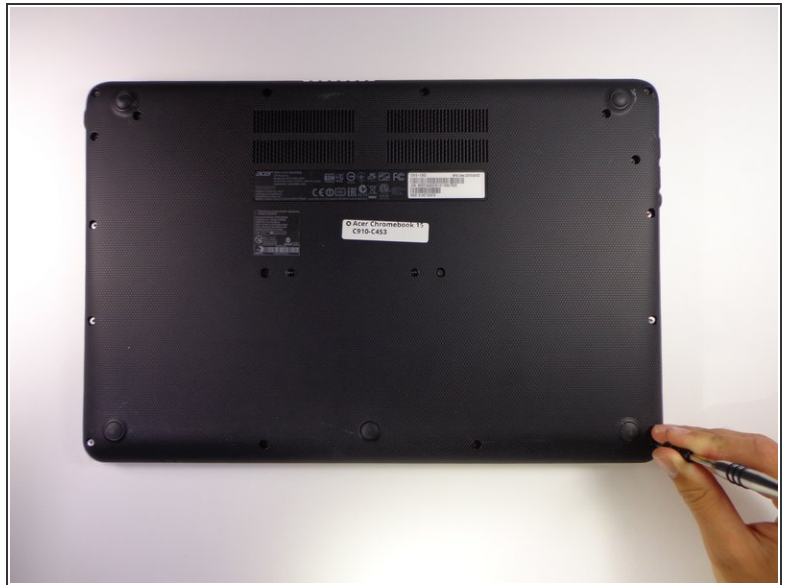

- Turn the Chromebook onto its backside and unscrew the the following Phillips #1 screws:
  - Sixteen 5mm Phillips screws located around the border.
  - Two 5mm Phillips screws located in center.



## Step 2



- Remove the back cover by carefully prying each side with an iFixit Opening Tool.
- Set aside back cover.





## Step 3

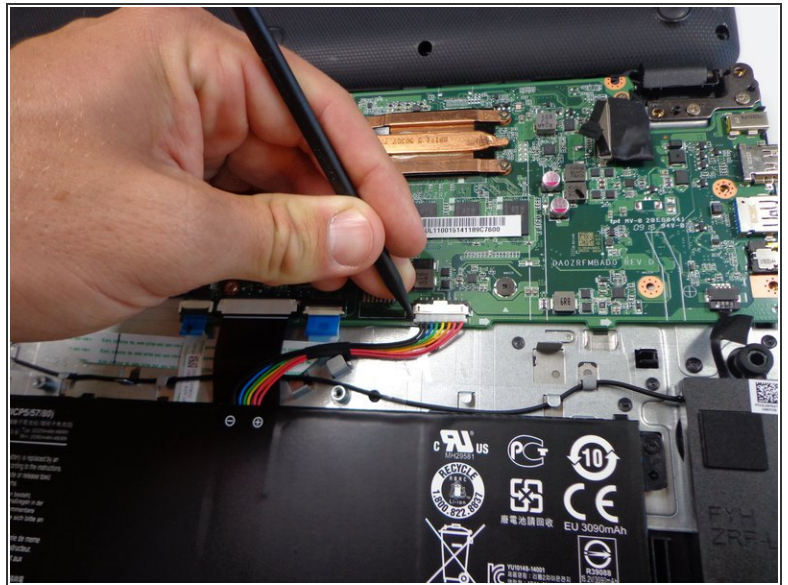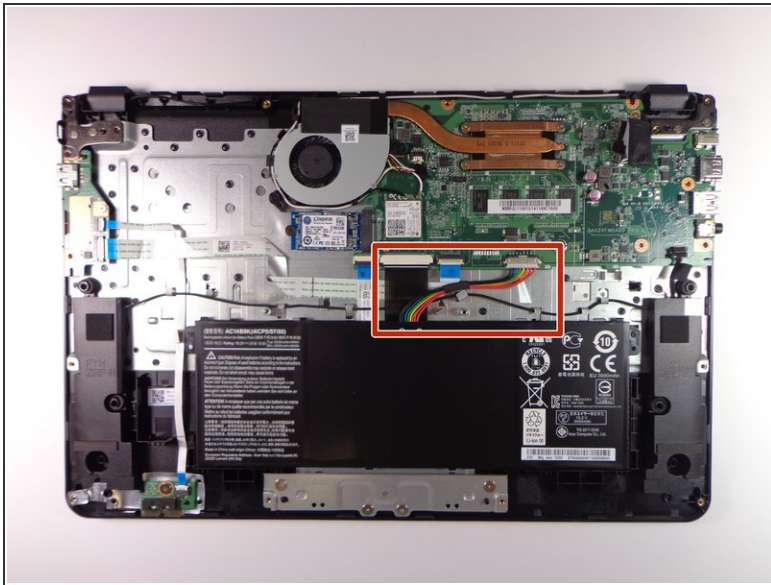


- Using a spudger, carefully unplug the rainbow wires connected to the top of the battery.

## Step 4

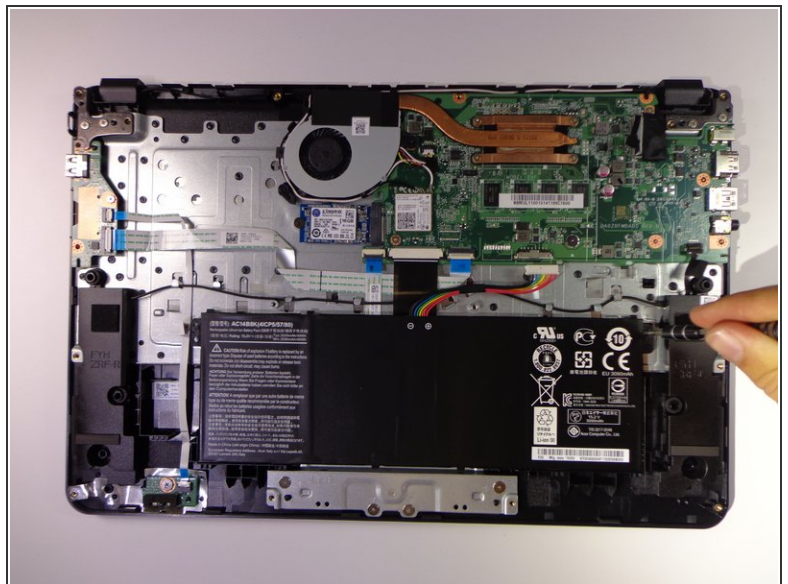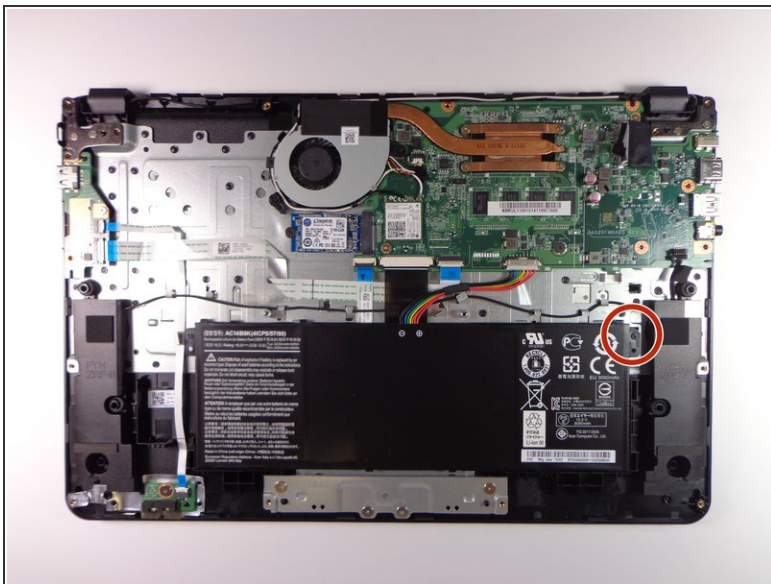

- Unscrew the 4mm Phillips #1 screw located at the top right of battery.

## Step 5

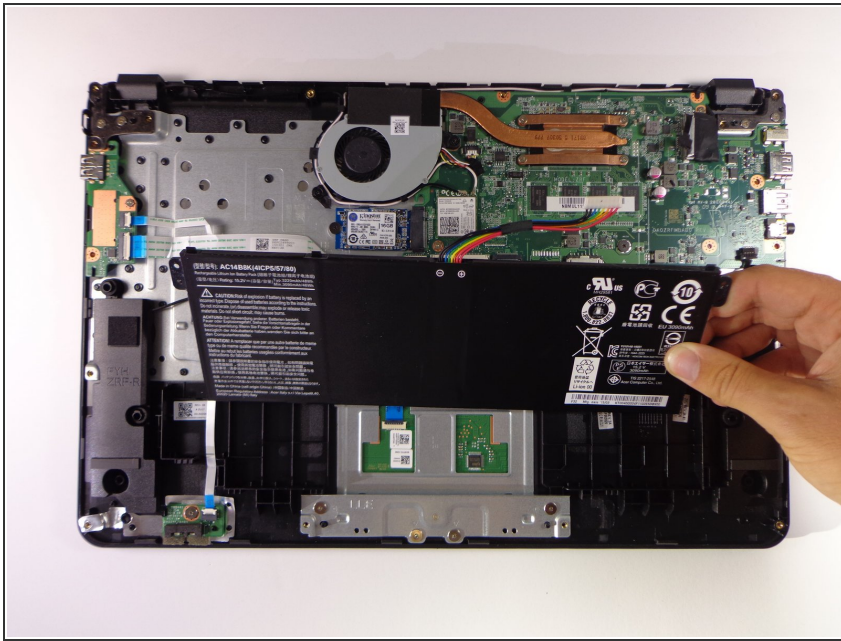

- Remove the battery.

To reassemble your device, follow these instructions in reverse order.