



HP Envy m6-k022dx Speaker Replacement

This will show you how to replace the speaker in the computer.

Written By: Kareem Rigaud





TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Lower Case




- There are 12 phillips head screws which need to be unscrewed before removing the backplate of the laptop.

Step 2



- Next, use a size PH1 Philips head screw driver to remove the screws.

Step 3

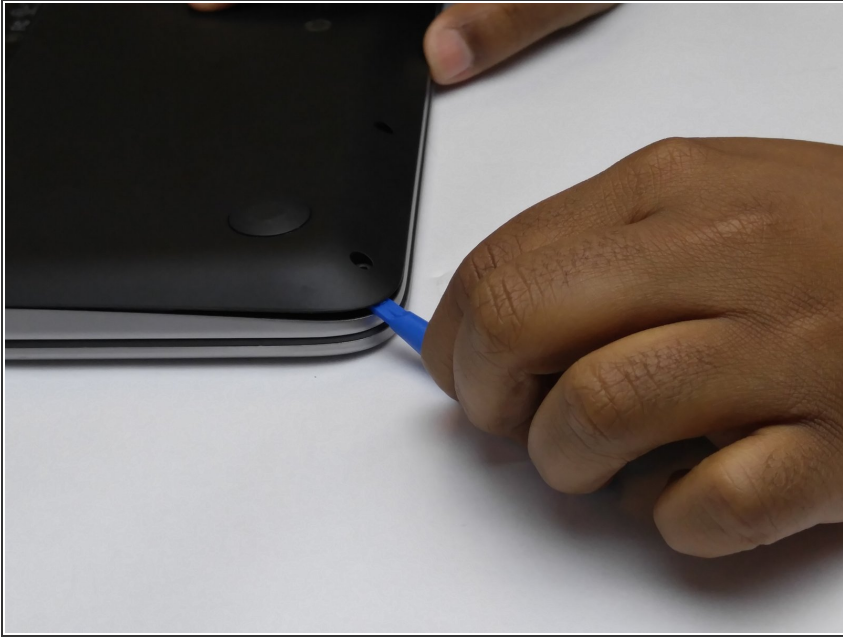


- Then, use a prying tool to help uncouple the backplate.

Step 4




- Finally, use both hands to lift up and take off the back plate of the computer.

Step 5 — Speaker

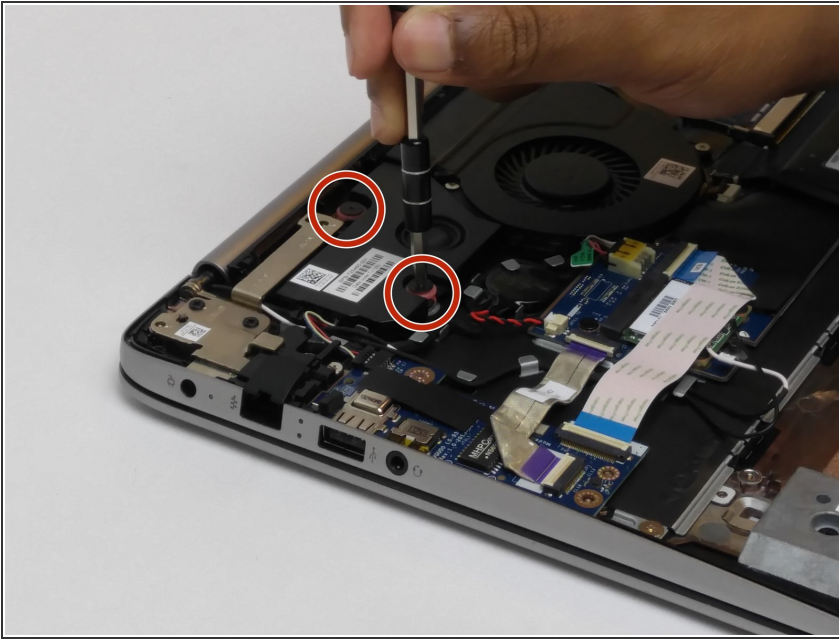


- Remove the two screws holding the speaker in place.
- ⓘ There are two red rubber grommets which stay situated in the screw guide holes; be sure not to lose these.

Step 6

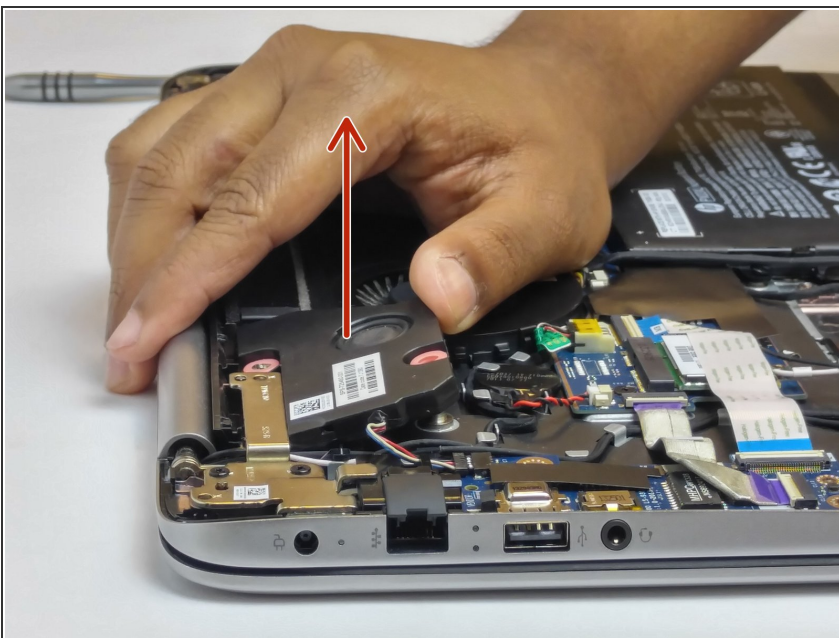

- Once the screws have been removed, gently lift the speaker straight up, but just enough to dislodge it.
- ⚠ There is a cable connecting the speakers to the sound board. Be sure to not tug on this connection when lifting the speaker.

Step 7

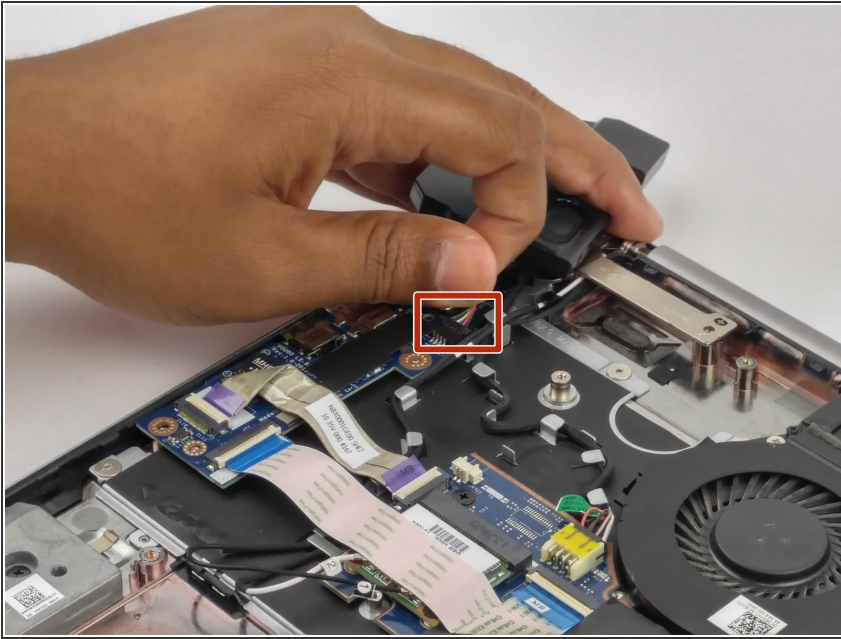

- Once the speaker is dislodged, gently pull the connecting cable from the sound card.
- The speaker is now fully removed and ready to be replaced.

To reassemble your device, follow these instructions in reverse order.