


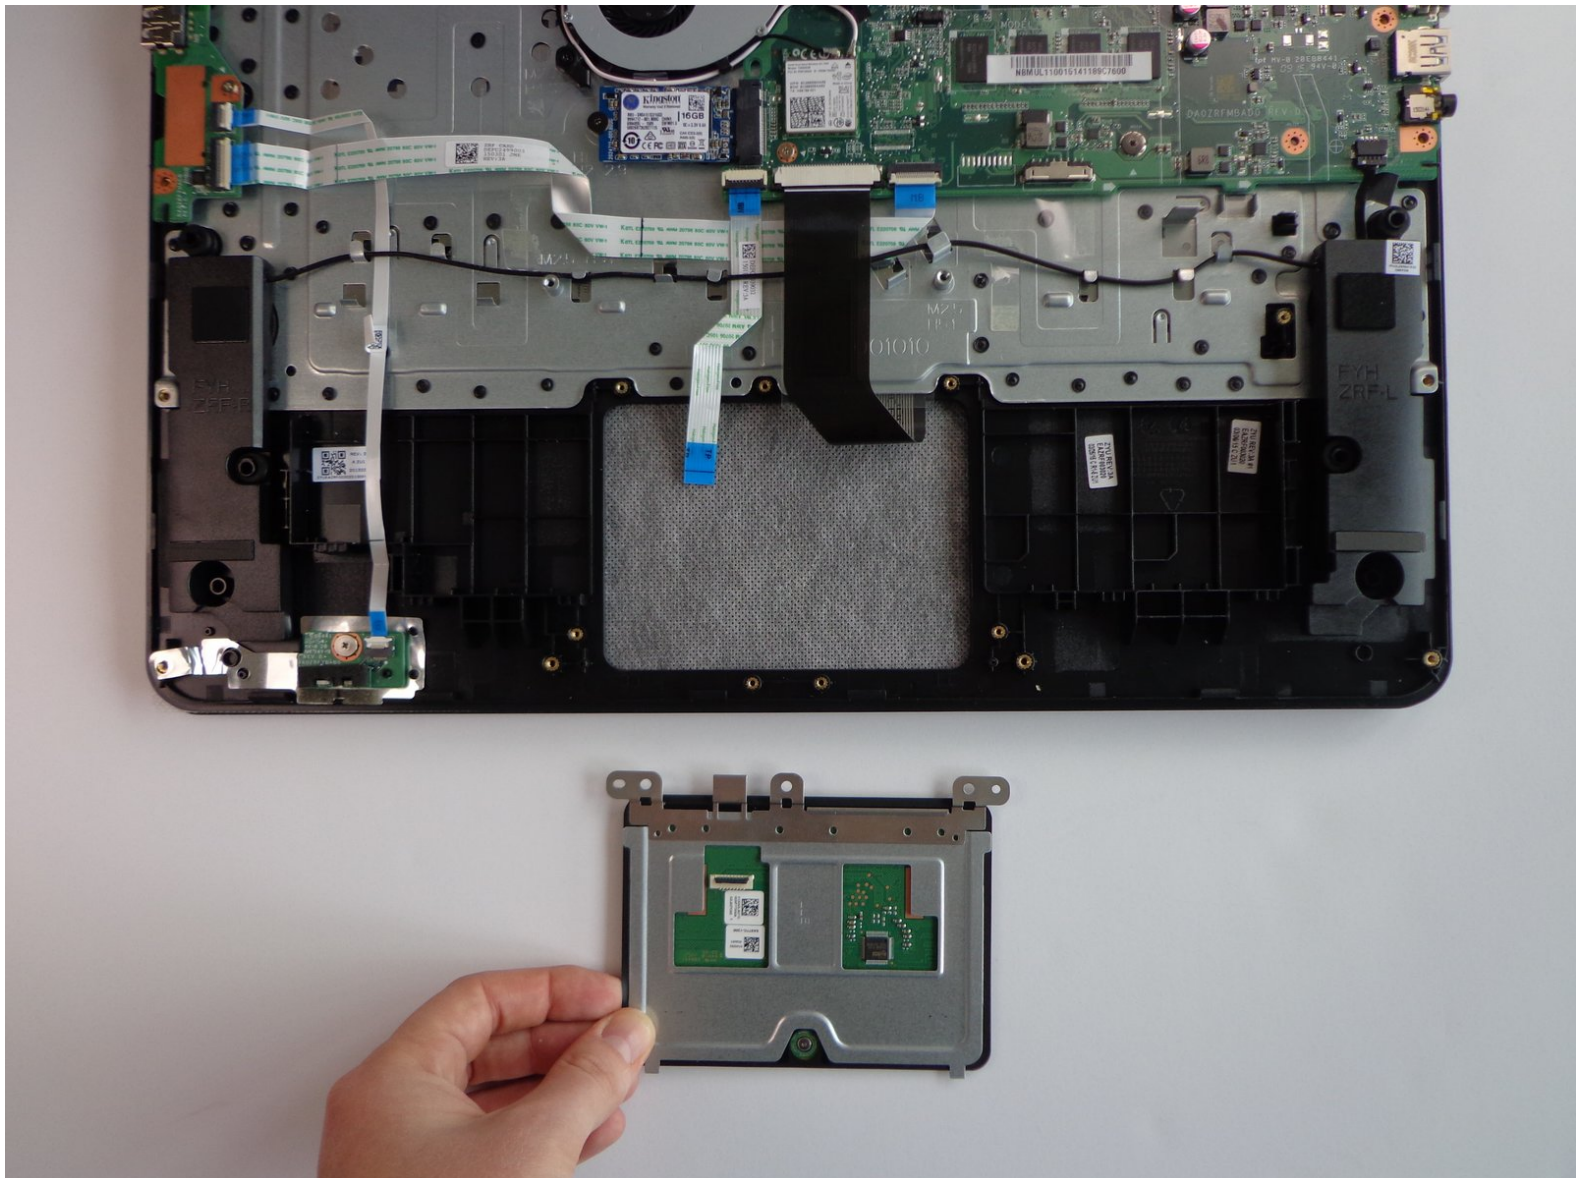

Acer Chromebook 15 C910-C453 Trackpad Replacement

This guide will demonstrate how to replace the trackpad.

Written By: Mia von Knorring



INTRODUCTION

Use this guide to replace the trackpad.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery




- Turn the Chromebook onto its backside and unscrew the the following Phillips #1 screws:
 - Sixteen 5mm Phillips screws located around the border.
 - Two 5mm Phillips screws located in center.

Step 2





- Remove the back cover by carefully prying each side with an iFixit Opening Tool.
- Set aside back cover.

Step 3

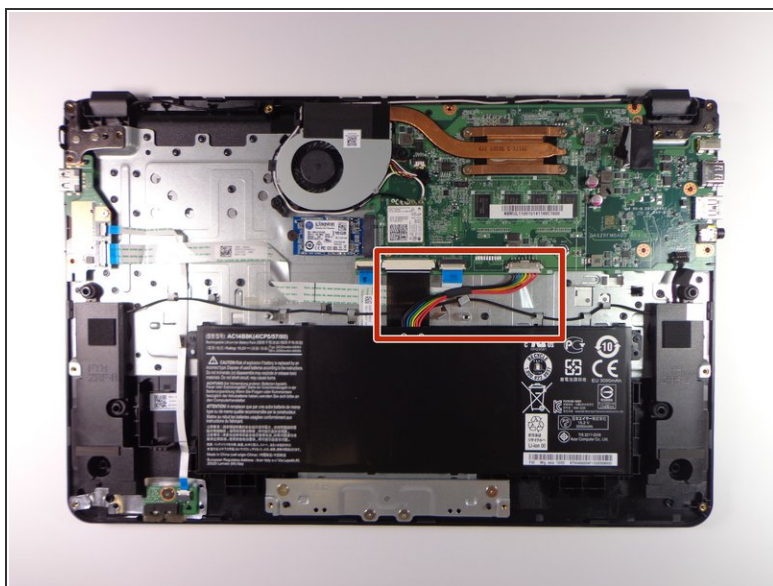


- Using a spudger, carefully unplug the rainbow wires connected to the top of the battery.

Step 4

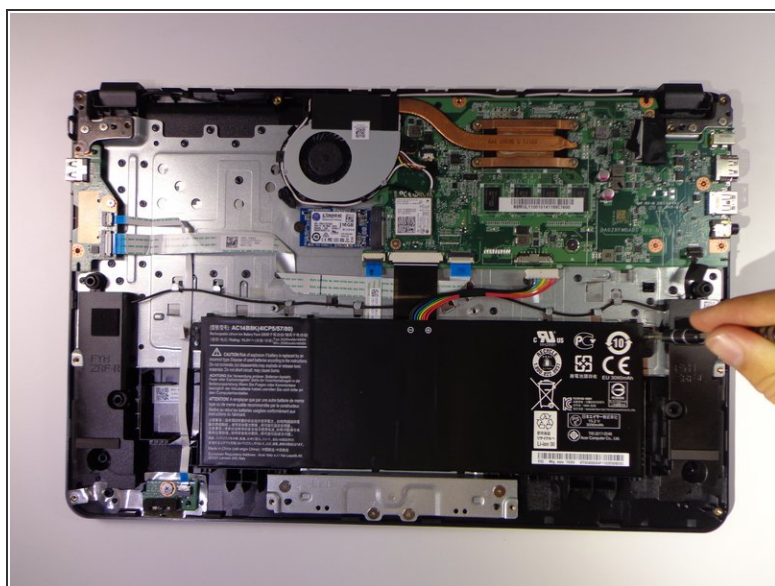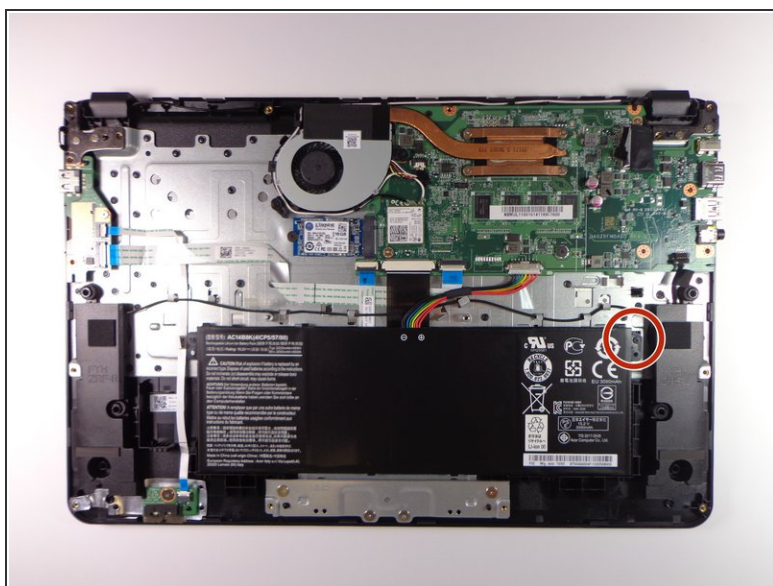



- Unscrew the 4mm Phillips #1 screw located at the top right of battery.

Step 5

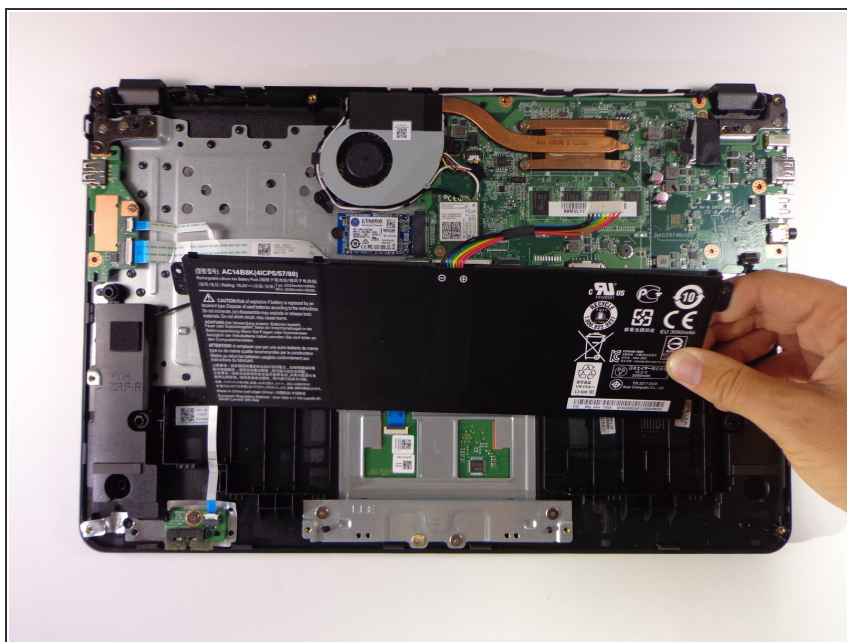


- Remove the battery.

Step 6 — Trackpad

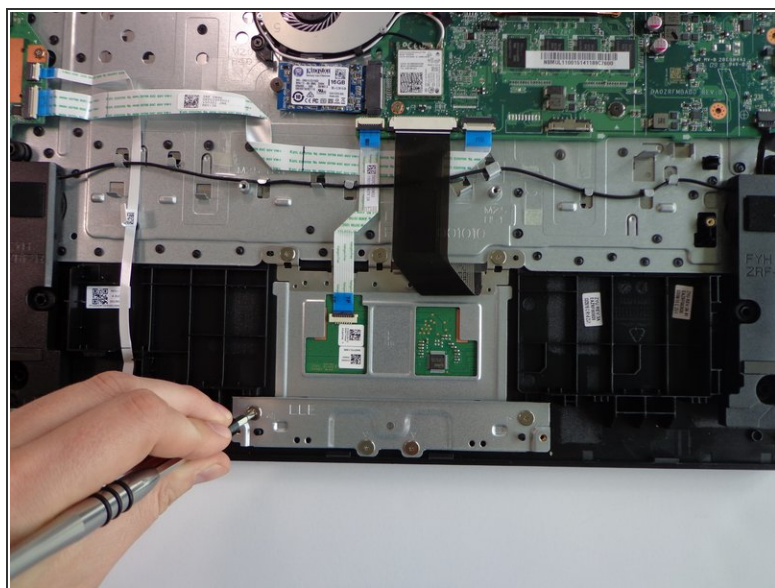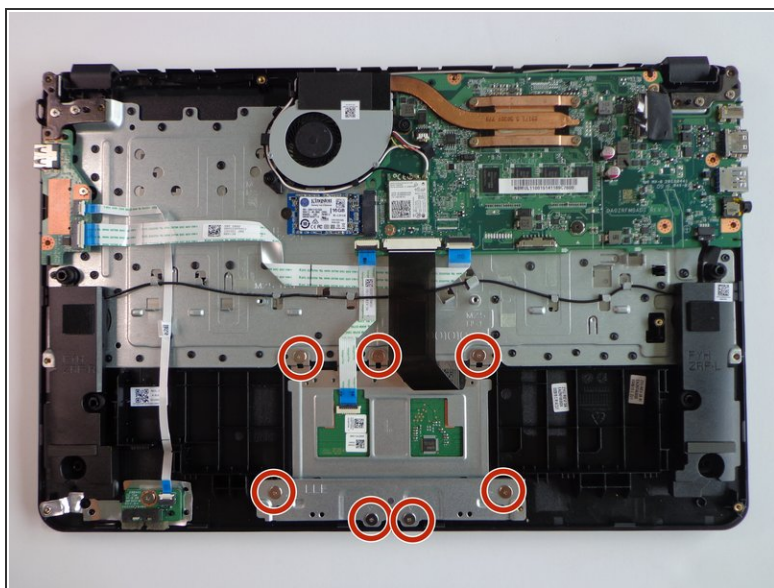


- Unscrew the seven 6mm Phillips screws located around the trackpad.

Step 7

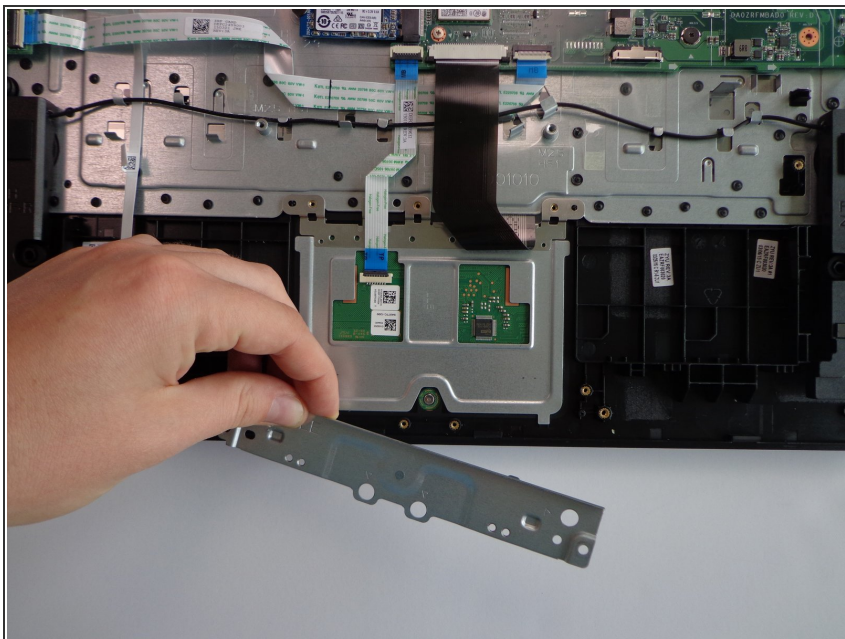



- Lift up the rectangular metal plate at the base.

Step 8

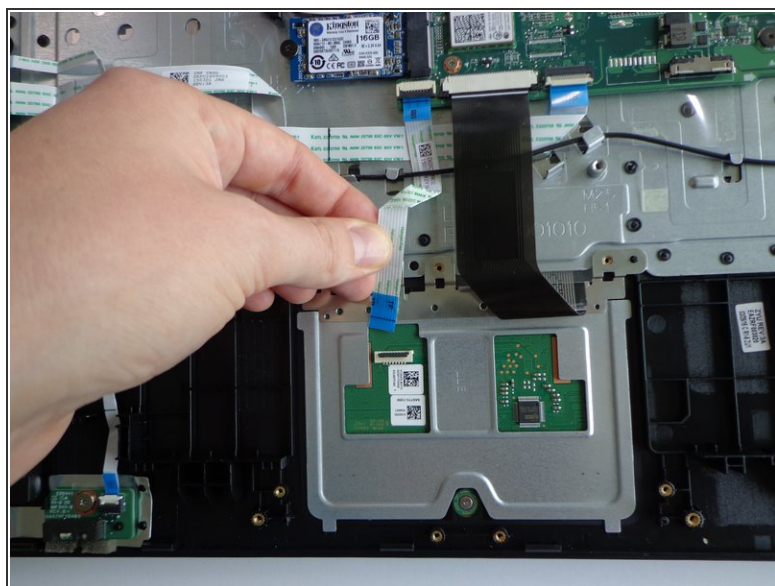

- Flip the black bar where the white ribbon is connected to the trackpad upward to unlock it.
- Gently pull the white ribbon away from the trackpad.

Step 9

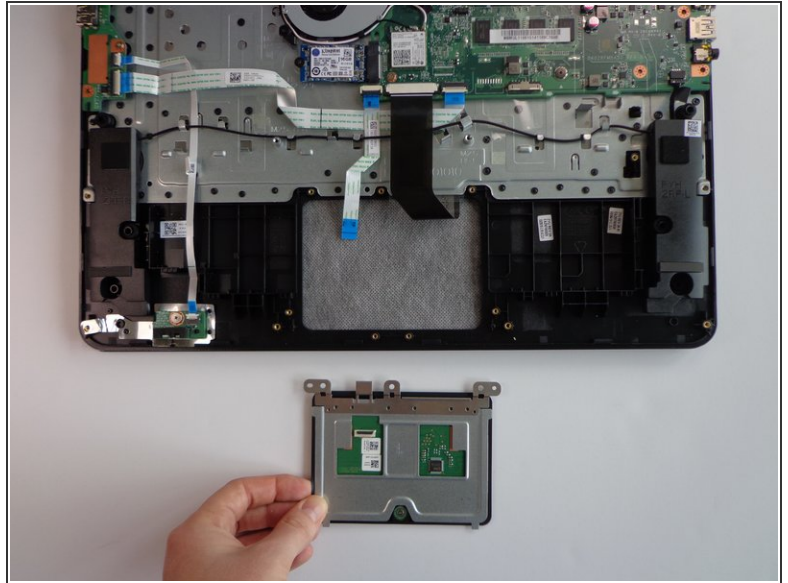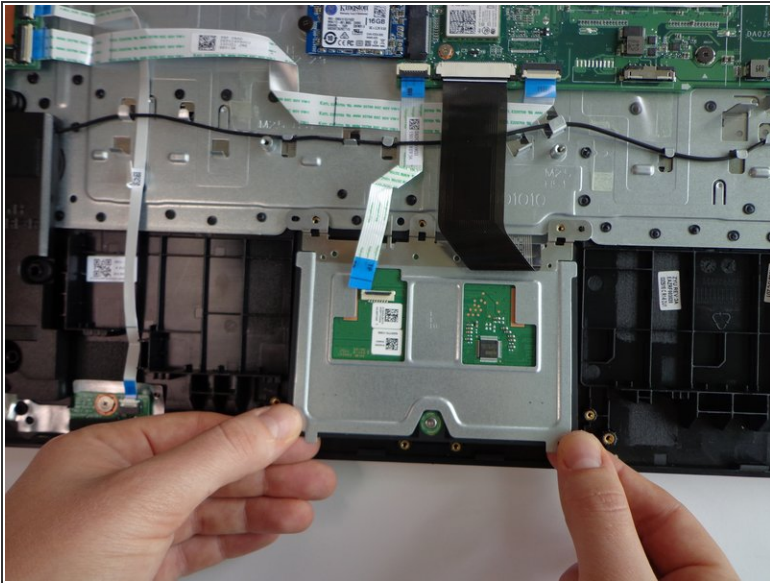

- Gently lift the trackpad up and pull towards you to remove the trackpad.

To reassemble your device, follow these instructions in reverse order.