




MSI GT72 2QE Dominator Pro RAM Replacement

This guide will lead the viewer through the steps of removing the laptop's RAM.

Written By: Nate

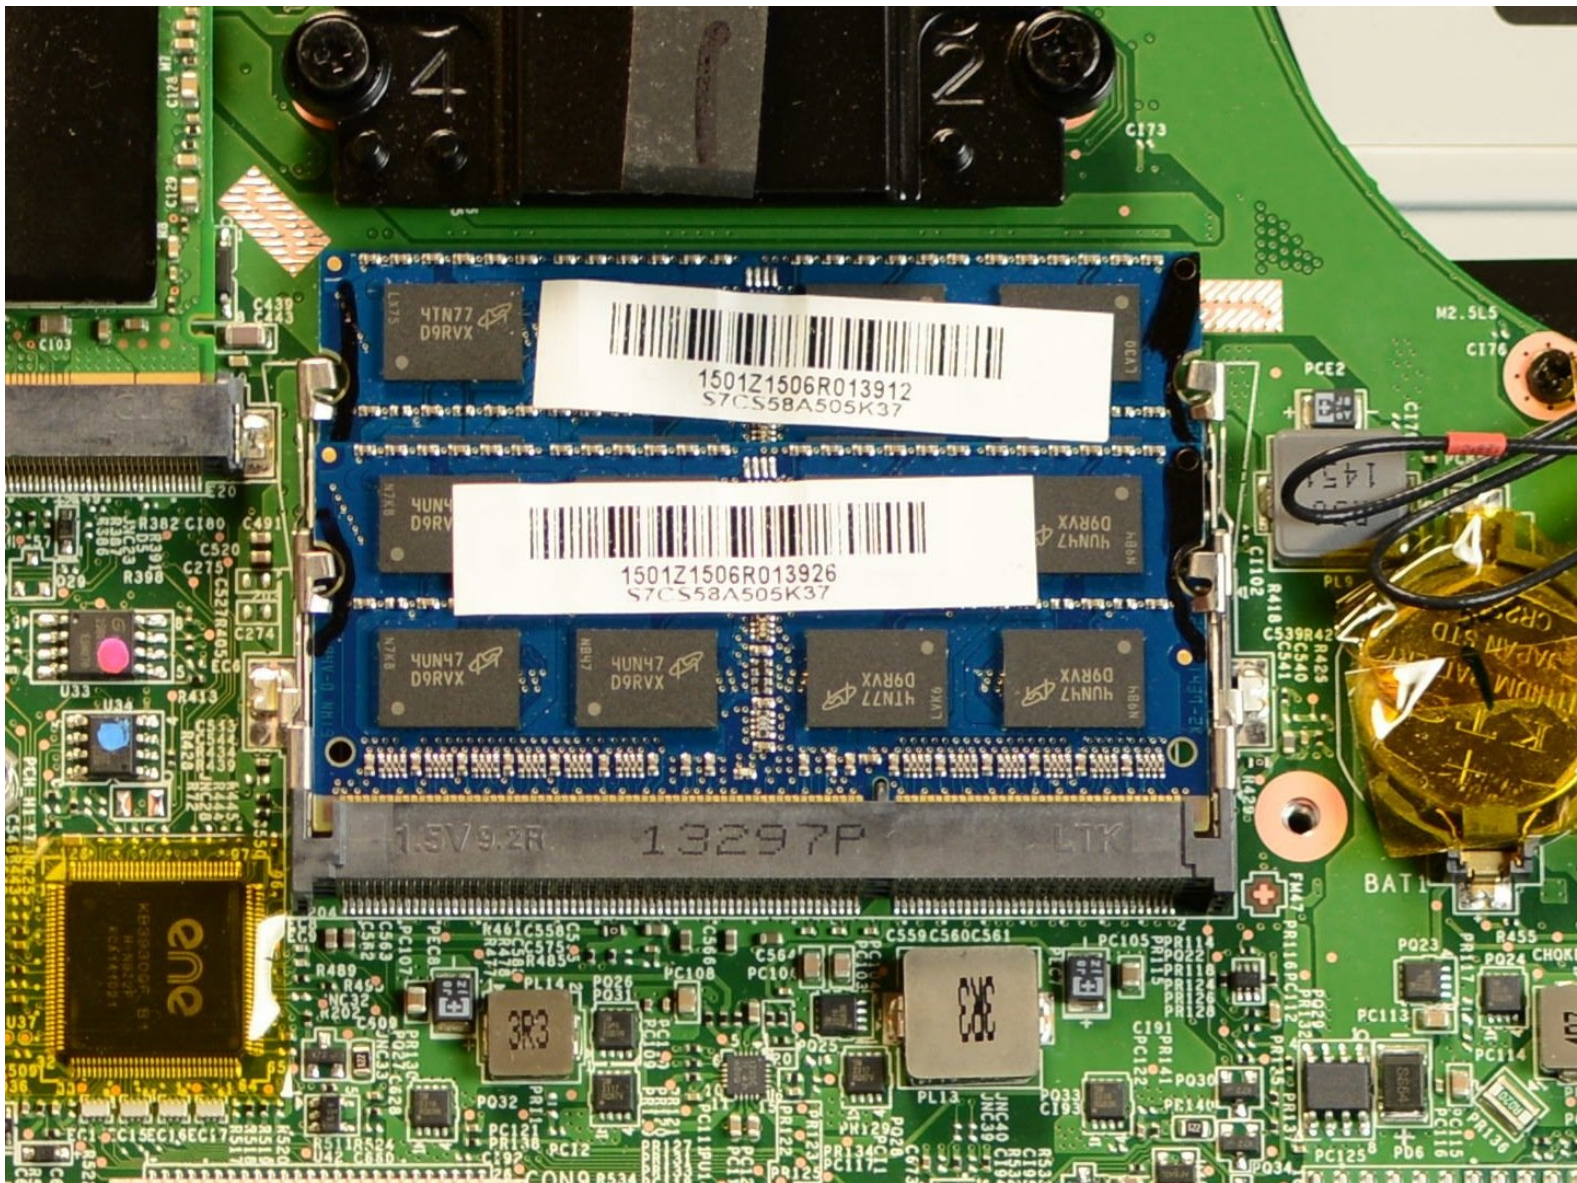

INTRODUCTION

Want to replace your RAM? This guide will show all the steps you need to remove your old one.




TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — RAM



- Remove the 7 indicated 6mm Phillips #00 screws.



 Same PH0 screwdriver can be used in all steps.

Step 2



- With the screws out, remove the bottom door.

Step 3

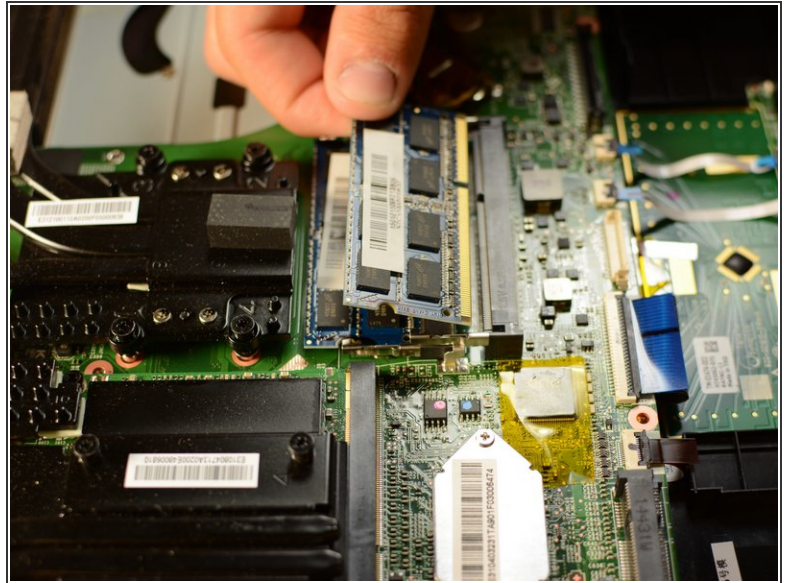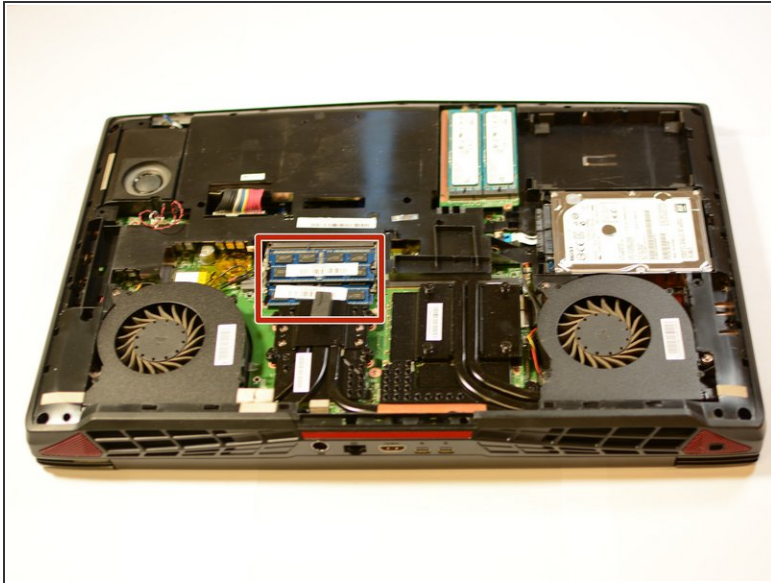

- Pull back clamps holding the RAM to remove it from the socket.

To reassemble your device, follow these instructions in reverse order.