



# Dyson Ball Animal Power Button Replacement

Written By: Hank Wai



**TOOLS:**

- [Metal Spudger](#) (1)
- [T15 Security Torx Screwdriver](#) (1)

**PARTS:**

- [Dyson animal power button](#) (1)

## Step 1 — Power Button



- Turn off and unplug the vacuum

## Step 2



- Press the red release button and pull the canister up and away.

### Step 3




- Locate the red dial at the back of the wand and turn counterclockwise to detach the wand.

### Step 4



- Remove the four 15mm screws behind the power button using a Torx T15 screwdriver.

## Step 5

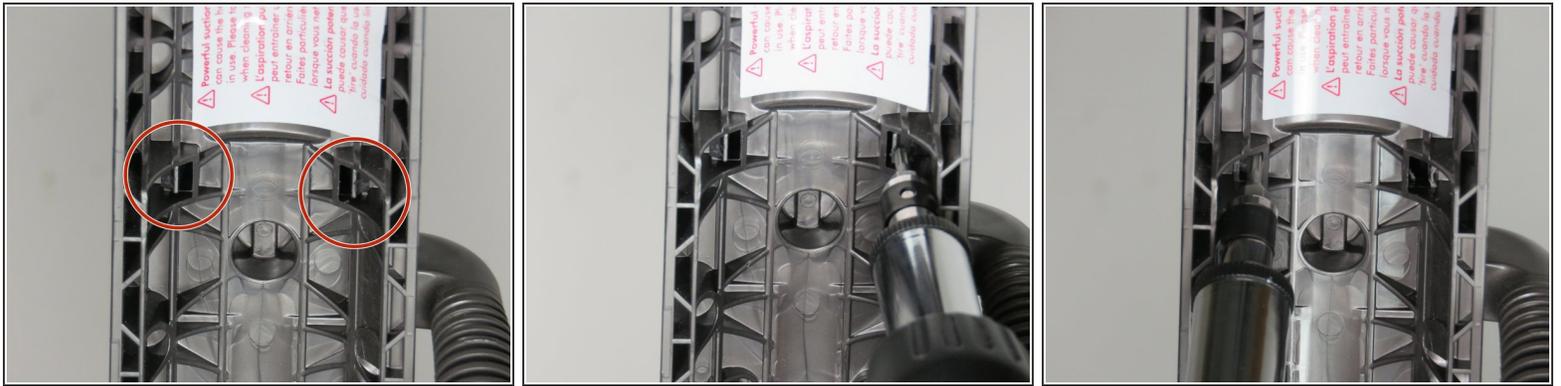

- Use a spudger to push the two clamp tabs behind the power button towards the middle of the vacuum.

## Step 6



- Detach the power box case from the body of the Dyson after both clamps have been pushed out.
- Upon removal of this case, you will be able to see a red circular power button.

## Step 7



- Gently pull the power button out of its slot as shown.
- Detach the power button box from the two wires connecting it, and replace the faulty power button box with a functional one. The power button is the first black one.

To reassemble your device, follow these instructions in reverse order.