

PlayStation 4 Pro Fan Replacement

This guide will show the steps necessary to...

Written By: Thomas



INTRODUCTION

This guide will show the steps necessary to remove the fan from the PlayStation 4 Pro. There are many steps necessary to complete this, as well as some warranty-voiding disassembly required. A majority of the PS4 Pro needs to be disassembled to remove the fan.



TOOLS:

- T8 Torx Security Bit Screwdriver (1)
- Phillips #1 Screwdriver (1)
- iFixit Opening Tool (1)
- Phillips #0 Screwdriver (1)



PARTS:

PlayStation 4 Pro Fan (1)


Step 1 — Hard Drive Caddy







- Flip the console upside down.
- Use your finger to pull and snap off the plastic cover over the hard drive.

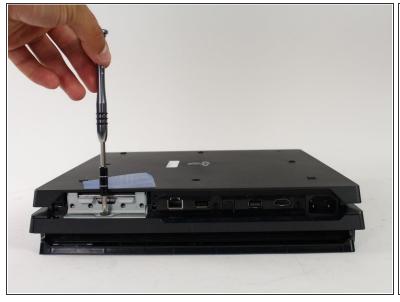



- Use a Phillips #1 Screwdriver to remove the single screw securing the hard drive caddy.
- Pull the hard drive caddy straight out.

Step 3 — Power Supply Assembly







- Flip the console right side up.
- Grip the two corners located at the front of the device.
- Pull upwards until a loud click is heard.
- (i) This may require a lot of force, so do not be afraid to get a little rough with your console.
- After both corners detach, slide the cover backwards and lift off.







- Use a T8 Torx Security screwdriver to remove five screws from the rear of the device.
 - Two 31mm screws.
 - Three 10mm screws for the 7000 models; Two gray 10mm screws (upper and lower screws on the illustration) if the PS4 Pro is a 7100-series model.
- Remove the metal plate by pulling it up.








Guide ID: 88797 - Draft: 2022-08-22

- Flip the console over so the bottom is facing up.
- Use a T8 Torx Security screwdriver to remove the three black 7mm screws in the back panel.
 (7000-series models only); or one 7mm screw (the middle one) with 7100-series models and the warranty sticker to the left.
- Remove the bottom cover in the same way as the top cover. Grip the cover on both sides and pull up until it clicks. Then slide the cover off; With 7100-series models, pay attention to the two clips that replace the corresponding screws.

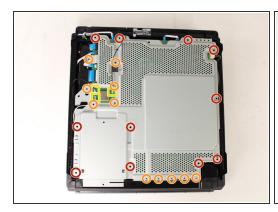






- Use a T8 Torx security screwdriver to remove the eleven 10mm silver screws from the metal plate.
- Use a Phillips #1 screwdriver to remove the eleven 4mm black screws from the metal plate.
 - 7200-series models have 13 additional 4mm screws around the top and right of the metal plate. These screws are are indicated with a triangle. This may apply to other models.
- Use a spudger to disconnect the three antenna cables (two black and one white) by prying them straight up from their sockets.

Step 7





Pull the white fan connector straight out of the yellow mount on the motherboard.

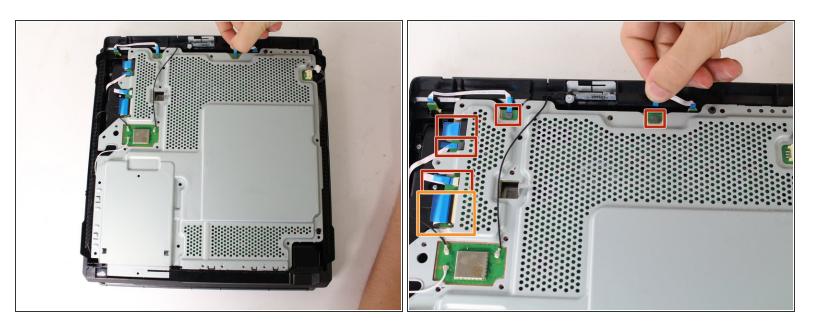

- Pull out the five small, blue low profile cables connected to the metal plate.
- Lift the retaining flap on the ZIF connector of the large ribbon cable.
- Pull the large ribbon cable from its socket.


♠ Do not pull on the biggest blue cable without lifting the tab first. Doing so can damage the connection.



Pull up and remove the metal plate.





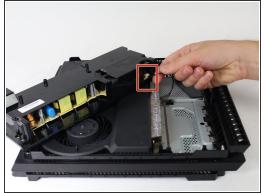

- Flip the console over to continue working on the top side.
- Pull up on the power supply unit and set it on the console.
- Ne careful not to pull too far, the assembly is still connected at one point.
- Grip the connector behind the power supply and pull straight out.

Step 11 — Motherboard







- (i) If you are working on the **7200-series model**, this metal plate will have been already removed as part of the removing the larger motherboard plate. You may skip this step if this is the case.
- Carefully flip the console over so the bottom is facing up.
- Use a Phillips #1 screwdriver to remove the eight 4mm screws on the metal plate with the X-like symbol.
- Use a plastic opening tool to remove the metal plate with the X-like shape.








- Use a Phillips #1 screwdriver to remove the four 13mm screws on the X-shaped metal plate underneath.
 - (i) For 7200-series models this is instead a S-shaped metal plate with 2 screws.
- Grip the X-shaped retaining bracket and lift straight up.






- Grip the edge of the motherboard and slowly lift upwards to remove it from the device.
- For reassembly, use this guide to reapply thermal paste between the motherboard and the metal plate underneath.

Step 14 — Heat Pipe

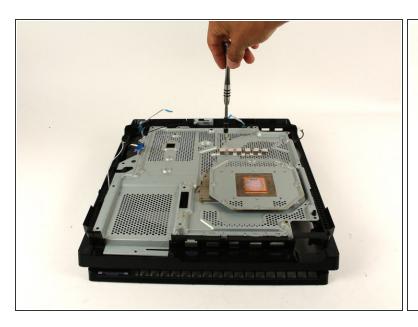



Use a Phillips #1 screwdriver to remove the two 6 mm silver screws from the metal plate.

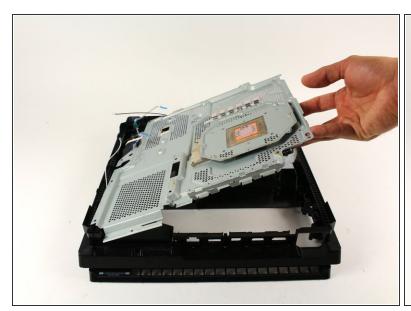




Lift the metal plate that is connected to the heat pipe straight up to remove it.

Step 16 — Fan



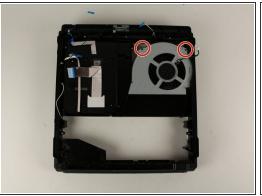



- Use a Phillips #0 screwdriver to remove the two 6mm screws on the fan.
 - (i) On 7200-series models these screws will be on the right of the fan.
- Grab the fan and lift up to remove it.

To reassemble your device, follow these instructions in reverse order.