


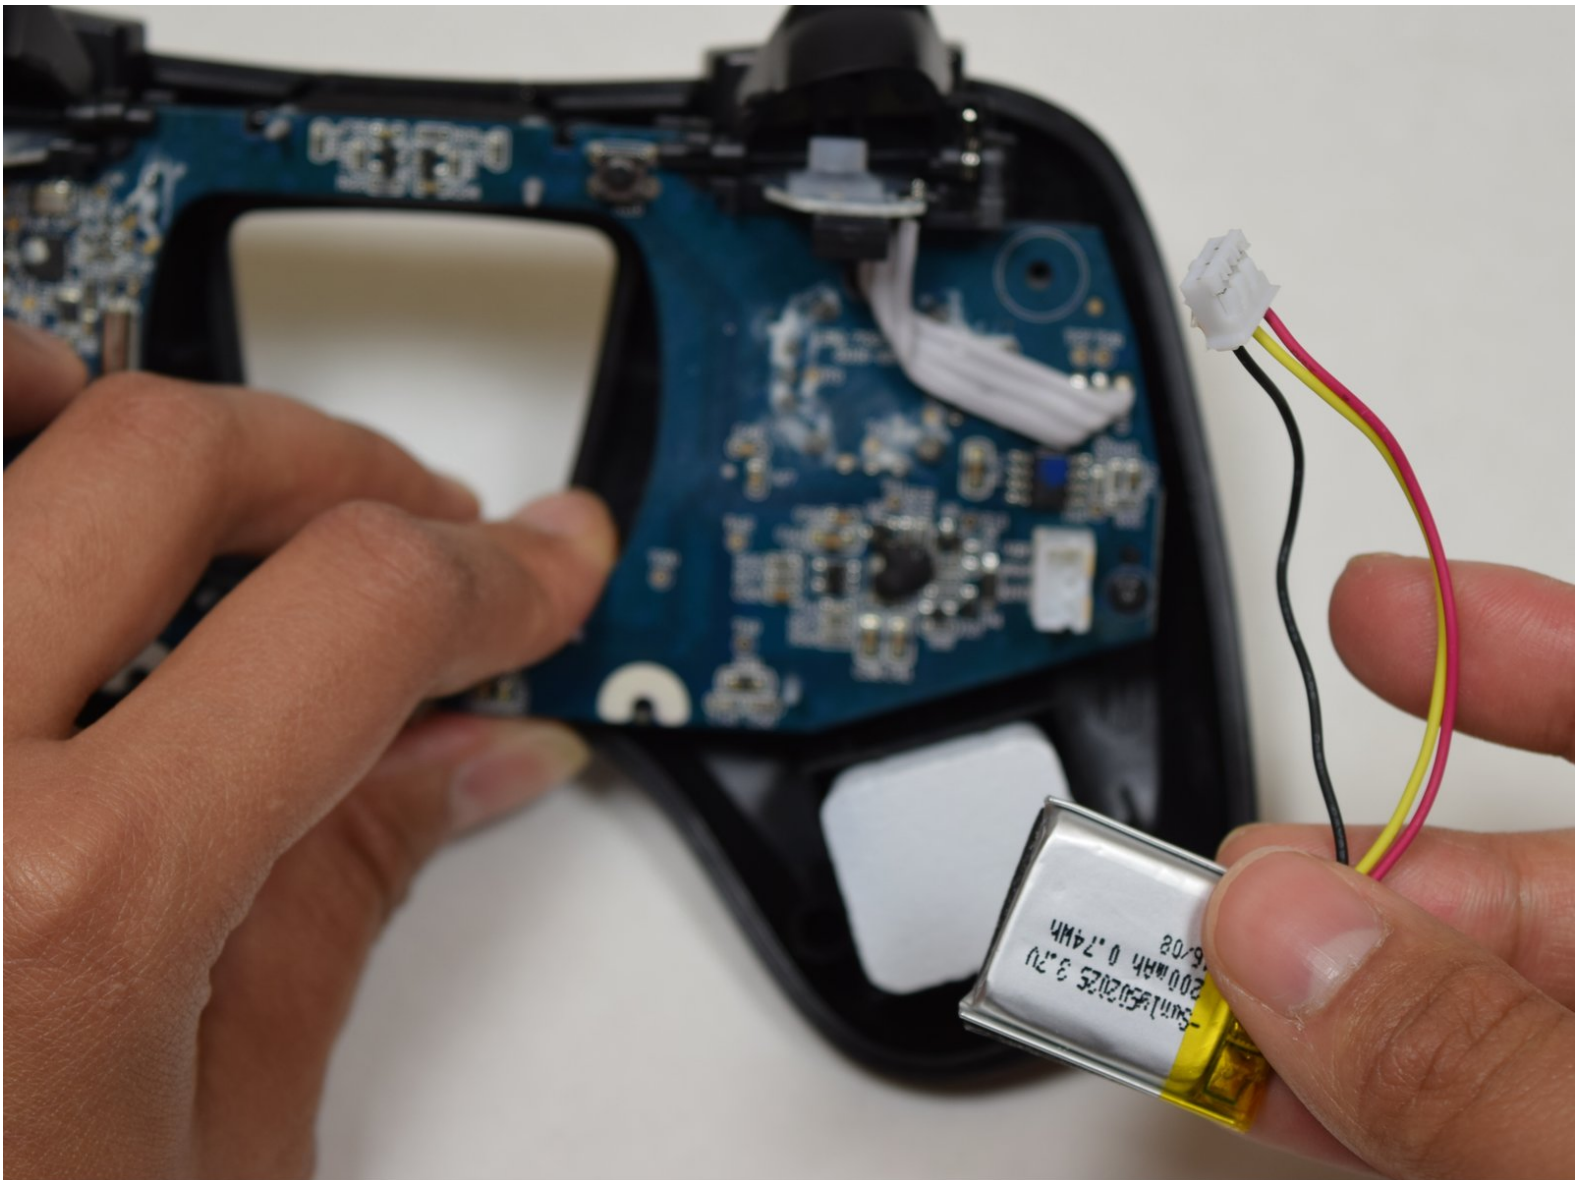

# Parrot FLYPAD Battery Replacement

This guide will show you how to open the Parrot Flypad and replace the battery on its faceplate.

Written By: HUY NGUYEN



---

## INTRODUCTION

Bring back to life your Parrot FLYPAD with a brand new battery.


This guide will assist you to correctly dismantle the controller, so that you may easily replace the battery. To prevent any loss of screws, it is important to utilize a magnetic mat placed under the controller.



### TOOLS:

- [T6 Torx Screwdriver](#) (1)
  - [Magnetic Project Mat](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery

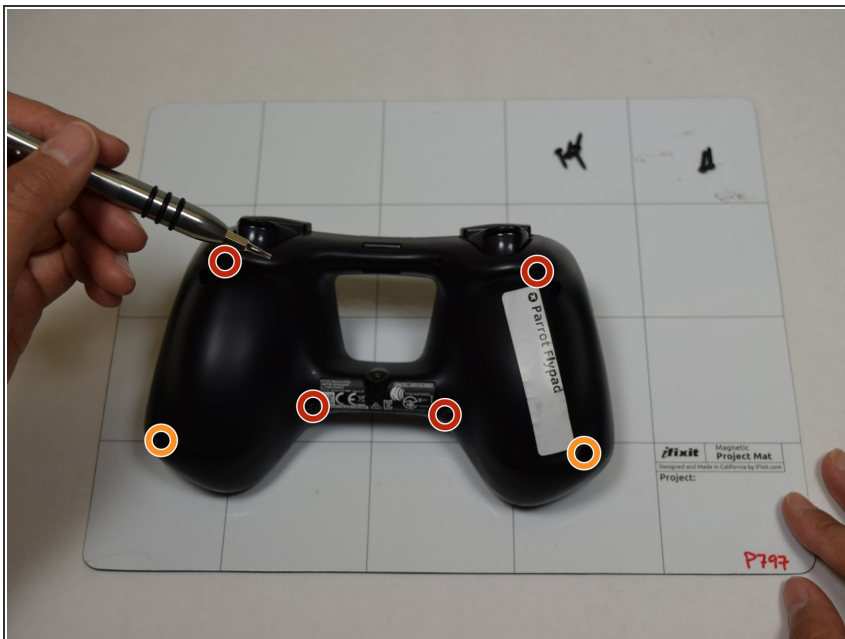


- Use a T6 screwdriver to remove the six screws from the back of the controller: four 0.9 mm screws and two 0.1 mm screws.

## Step 2




- Use a screwdriver to remove the two 0.7 mm screws from the battery cover.

## Step 3

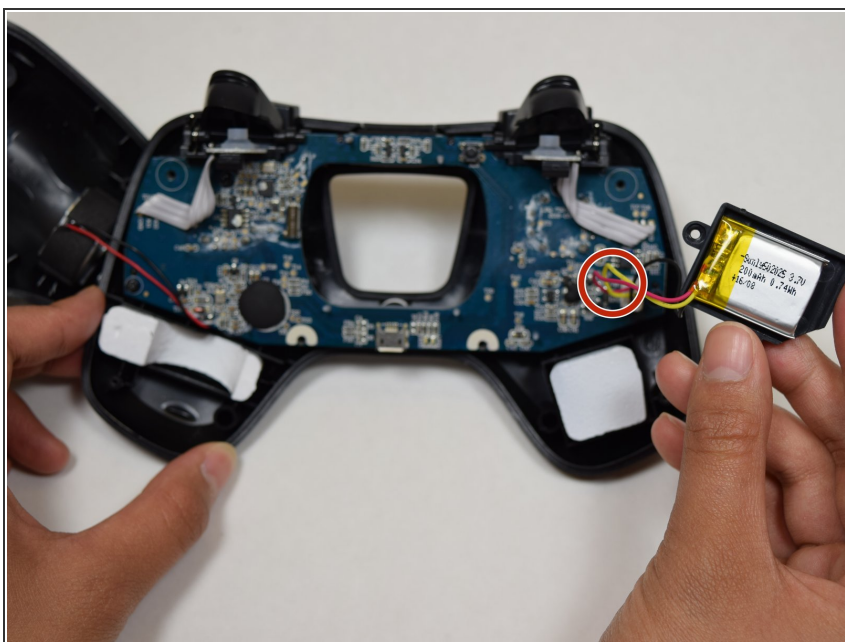

- Separate the plastic cover from battery.
- Avoid damaging the wires and gently remove the battery from the motherboard.


## Step 4

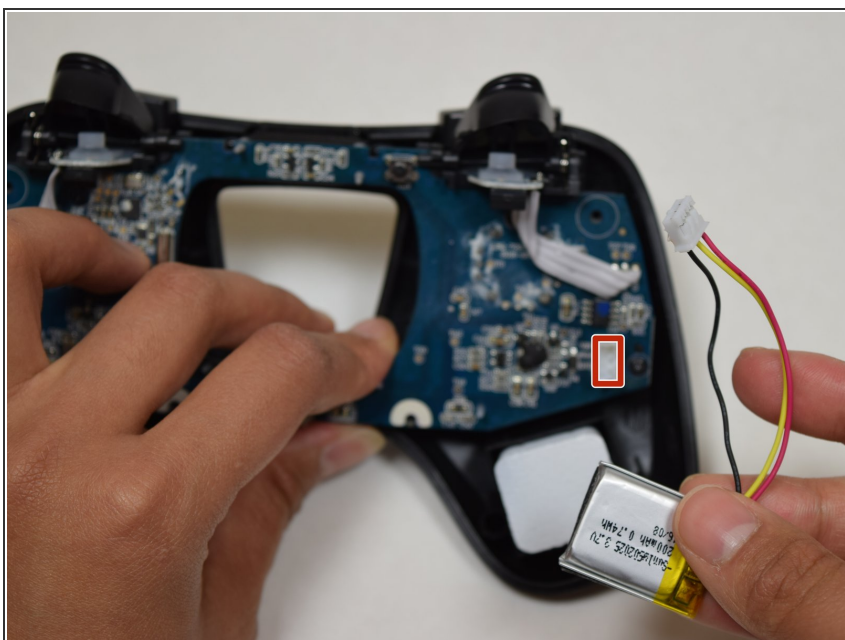

- Use fingers to gently detach the battery wires from the motherboard.



## Step 5

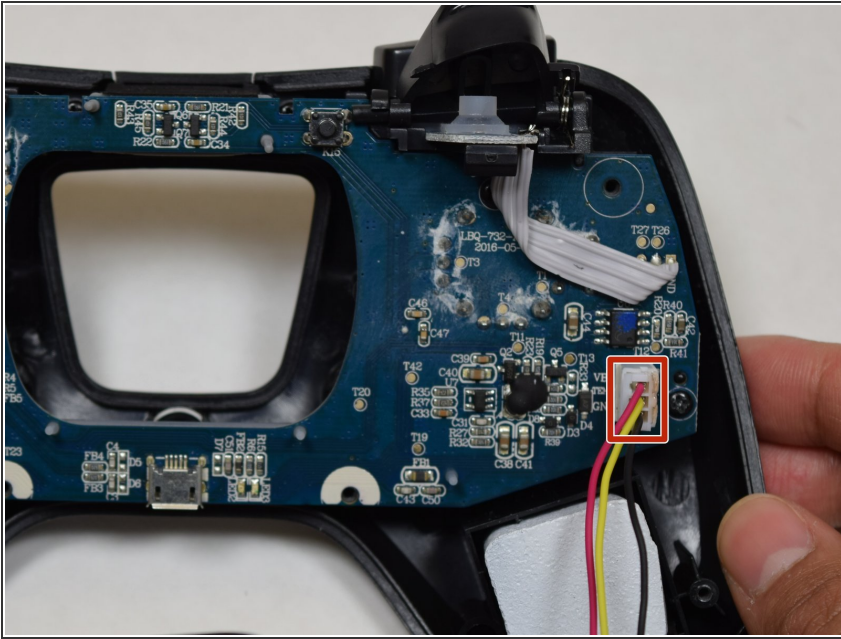

- Gently attach the wire connection from the new battery to the motherboard. Avoid touching the motherboard directly.

To reassemble your device, follow these instructions in reverse order.