



# ASUS Chromebook C200MA DS01 Back Panel Replacement

Back panel for the Asus Chromebook C200MA

Written By: Kurt Wacker






## TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Back Panel



 Before proceeding, power down your Chromebook. Close the display and lay it on a soft surface, top-side down.

- Remove the five 8.4 mm Phillips #0 screws.
- Remove the four 4.6 mm Phillips #0 screws.

## Step 2



- Use the plastic opening tool to gently work around the edge of the Chromebook until the back panel starts to lift off.

## Step 3



- Remove the back panel by lifting it away from the Chromebook.
- ⓘ Some clicking will be heard as the panel is removed from the back, this is completely normal.

To reassemble your device, follow these instructions in reverse order.