



# Dyson DC39 Origin Steering Assembly Replacement

Replace the steering assembly of your Dyson DC39 Origin.

Written By: Luke Matusiak



---

## INTRODUCTION

Use this guide to replace the steering assembly of the Dyson DC39 Origin if you have damaged the wheels. This guide only requires one type of screwdriver and is very straightforward.

---

### **TOOLS:**

- [T15 Torx Screwdriver](#) (1)
-

## Step 1 — Bin



- Push down on the gray button located next to the power button to release the bin from the ball housing.
  - Pull the bin away, then up from the ball housing to remove it.
- ☒ If the bin won't fit back into place during re-assembly, you may need to push the grey button again.

## Step 2 — Steering Assembly



- Place the ball housing on its side and orient it so that the underside of the steering assembly is facing you.
- Remove the four 18.0 mm Torx 15 screws.

### Step 3



- Using two hands, hold the ball housing with the handle in one hand and the steering assembly base in the other.
- ⓘ Hold the steering assembly base near one of the wheels.
- Pull the steering assembly base directly away from the ball housing. You should notice a pin release.
- Push up on the steering assembly to remove it completely from the ball housing.
- ☑ During reassembly, slide the steering assembly in first, then push the pin back into its locking position.

To reassemble your device, follow these instructions in reverse order.