


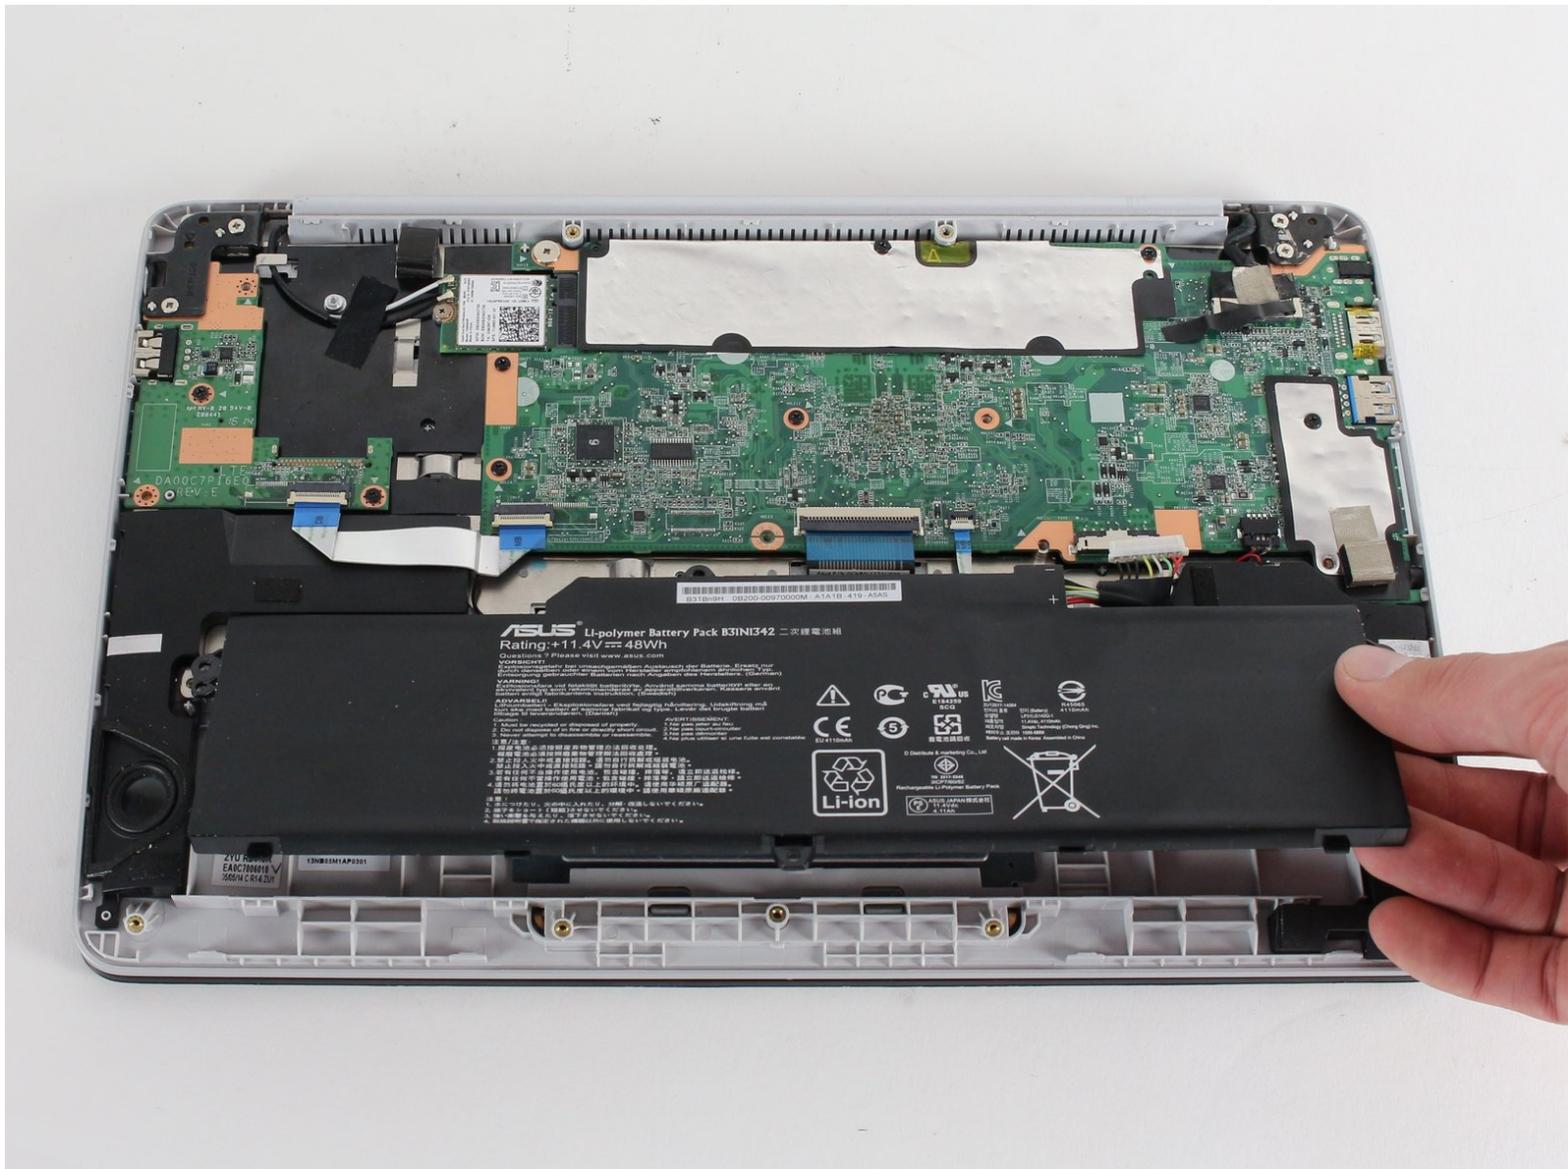

ASUS Chromebook C200MA DS01 Battery Replacement

Replace your Asus Chromebook C200MA Battery.

Written By: Christopher Lim




INTRODUCTION

This replacement guide will show you how to access and remove the battery in your Chromebook.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Back Panel

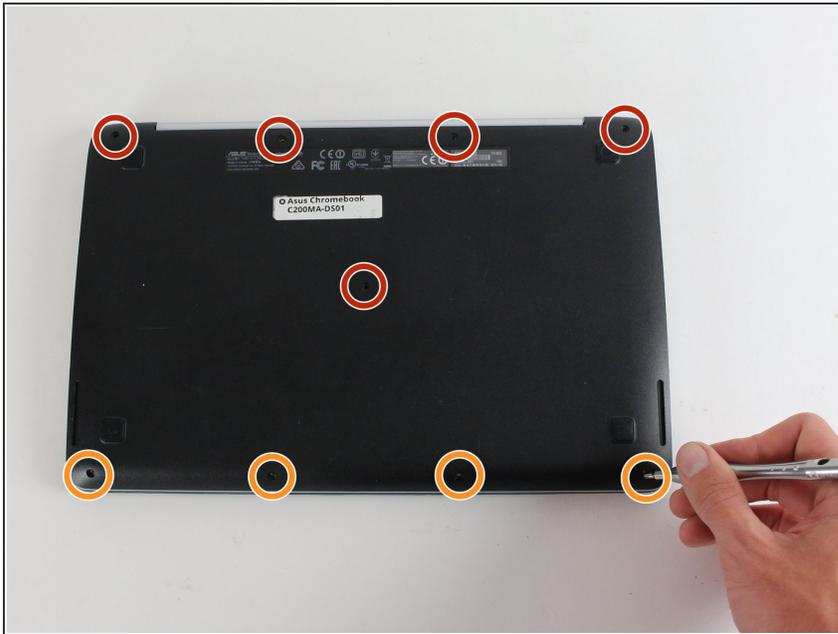

! Before proceeding, power down your Chromebook. Close the display and lay it on a soft surface, top-side down.

- Remove the five 8.4 mm Phillips #0 screws.
- Remove the four 4.6 mm Phillips #0 screws.

Step 2




- Use the plastic opening tool to gently work around the edge of the Chromebook until the back panel starts to lift off.

Step 3




- Remove the back panel by lifting it away from the Chromebook.
- ⓘ Some clicking will be heard as the panel is removed from the back, this is completely normal.

Step 4 — Battery Connection

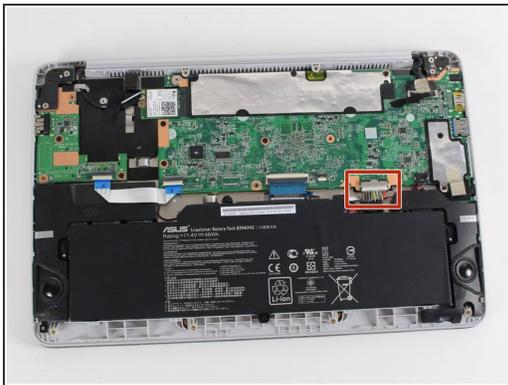


- To disconnect the battery, pinch the multi-color bundle cable with your thumb and forefinger and pull directly back.

Step 5 — Battery

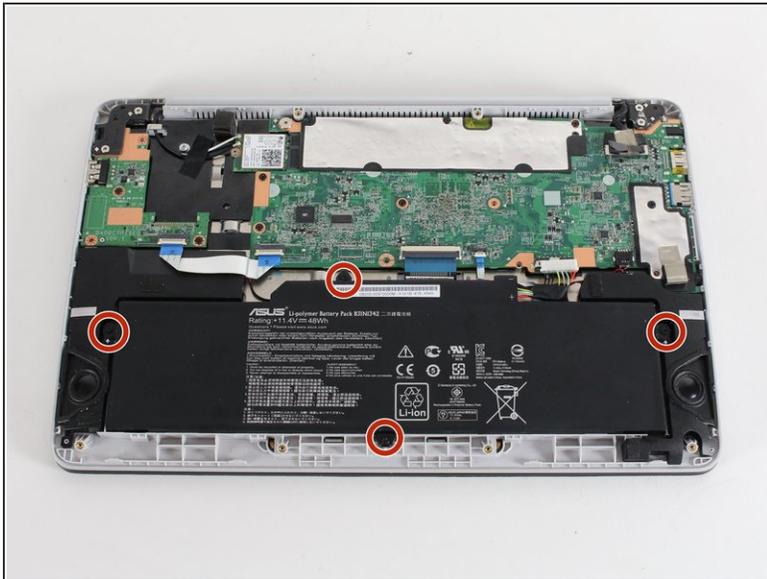

- Remove the four 4.7 mm Phillips #0 screws that secure the battery to the Chromebook.

Step 6

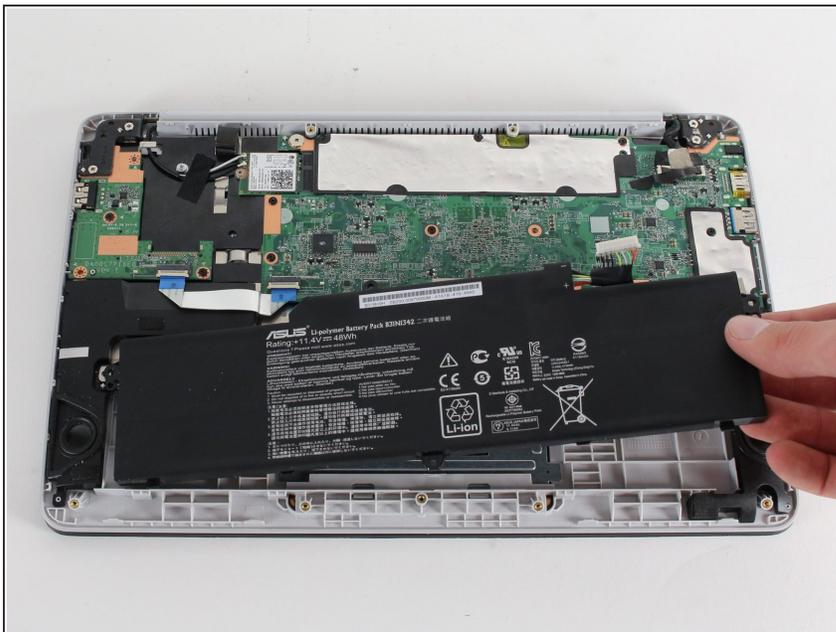

- Pull out the battery.

To reassemble your device, follow these instructions in reverse order.