




# Dell Latitude ST Screen Replacement

Replacing your Dell Latitude ST tablet screen

Written By: Addie Kenney

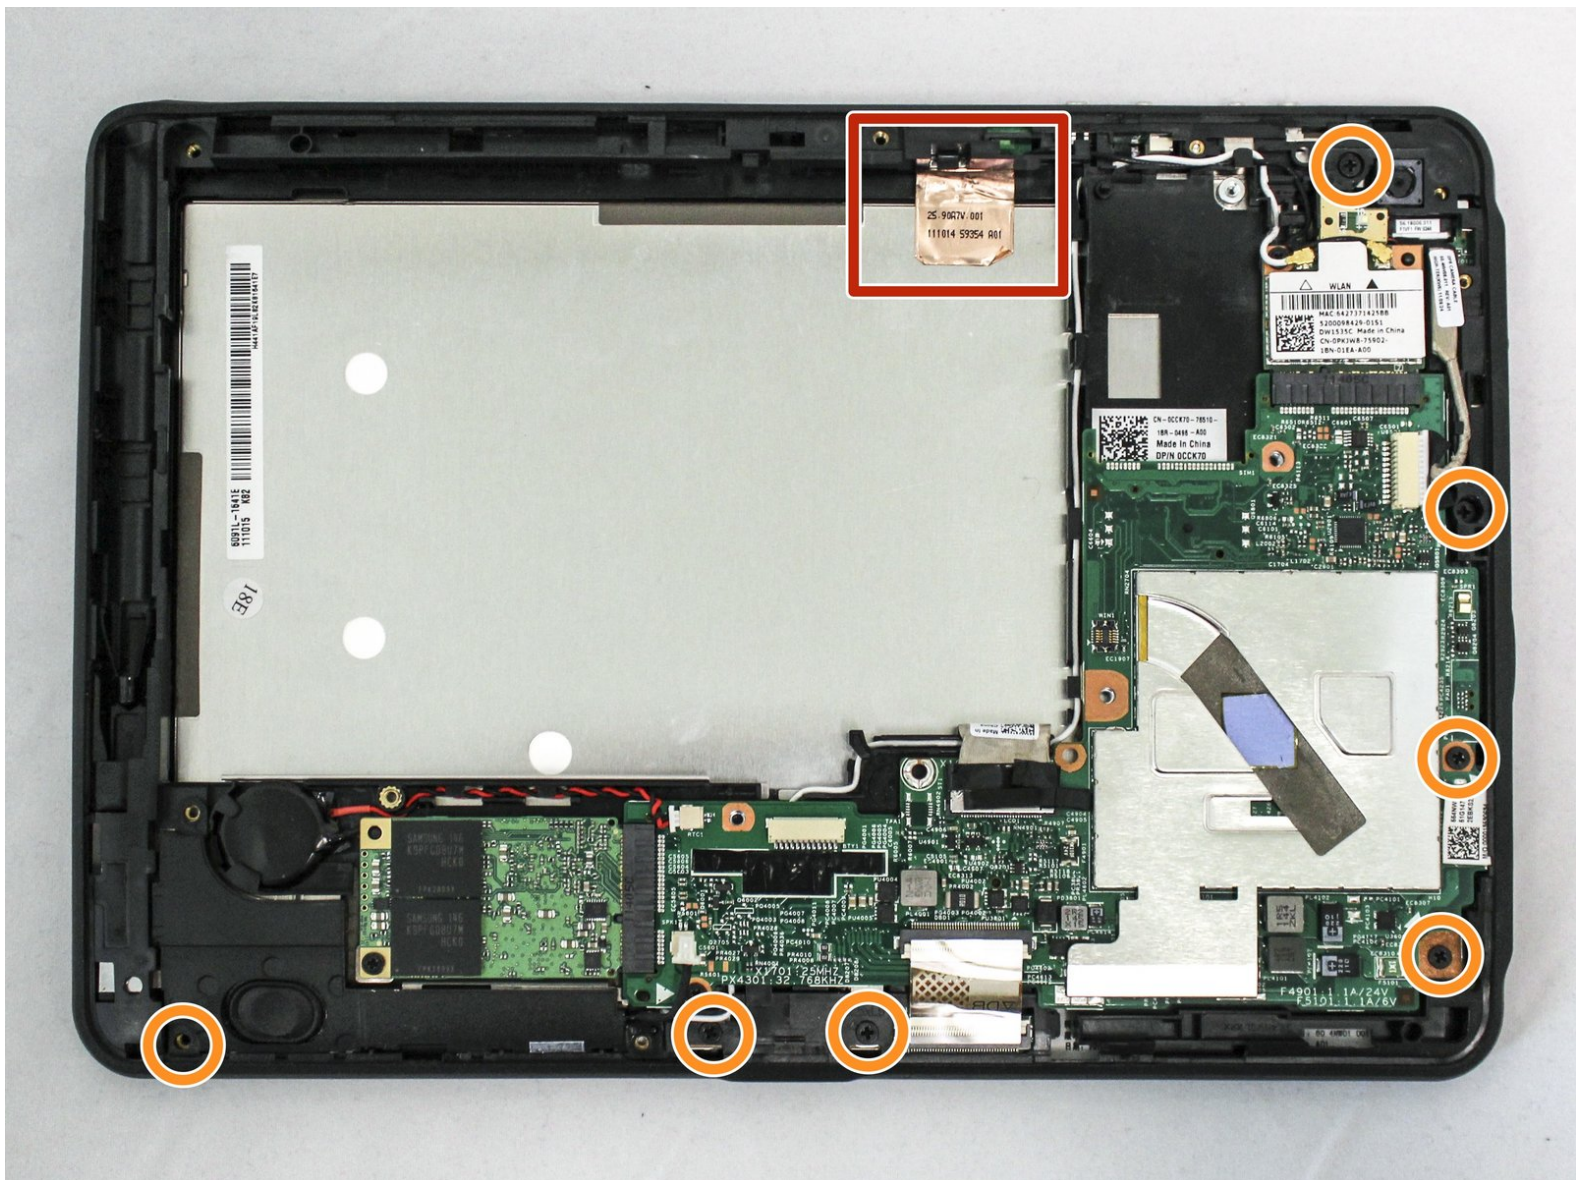

## INTRODUCTION

If the screen on your Dell latitude ST is displaying as black you should try rebooting the system. If this does not fix the screen you may want to replace the screen. This guide shows you how to safely replace your Dell Latitude ST screen.



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery



- Locate the back panel tab.
- Press down on the tab to remove the panel.

## Step 2



- Using a Phillips #0 screwdriver, remove the four 6mm screws attaching the inside panel to the device.



## Step 3



- Use the blue plastic opening tool to push in the tab located on the backside of the device.
- Slide the tool around the edges of the device to unsnap the tabs and pry the frame off.

## Step 4



- Remove the three 6mm Phillips #0 screws attaching the battery.

## Step 5



- Using your hands or a plastic opening tool, unplug the white battery cable.

⚠ Push forward on the top part of the cable to disconnect it from the device.




## Step 6



- Pull up on the black tab located at the top of the battery to remove the battery from the device.





## Step 7 — Screen

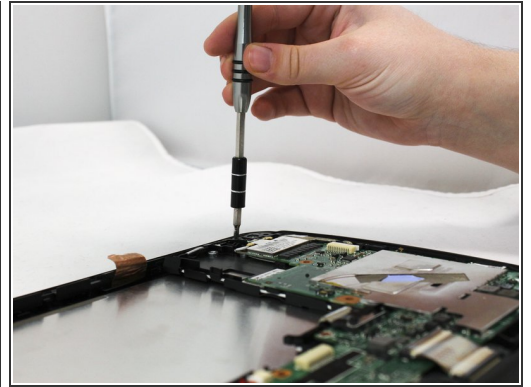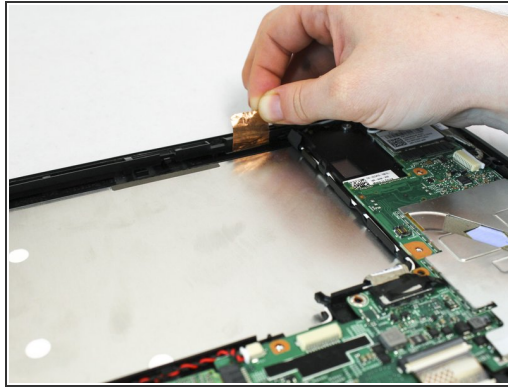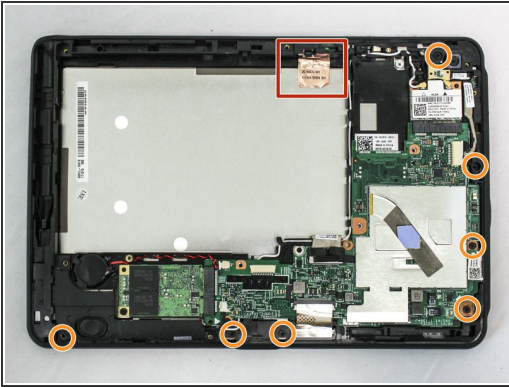



- Pull up on the copper antenna tape to loosen it from the base.
- Unscrew the seven 6mm Phillips #0 screws from the base.

## Step 8

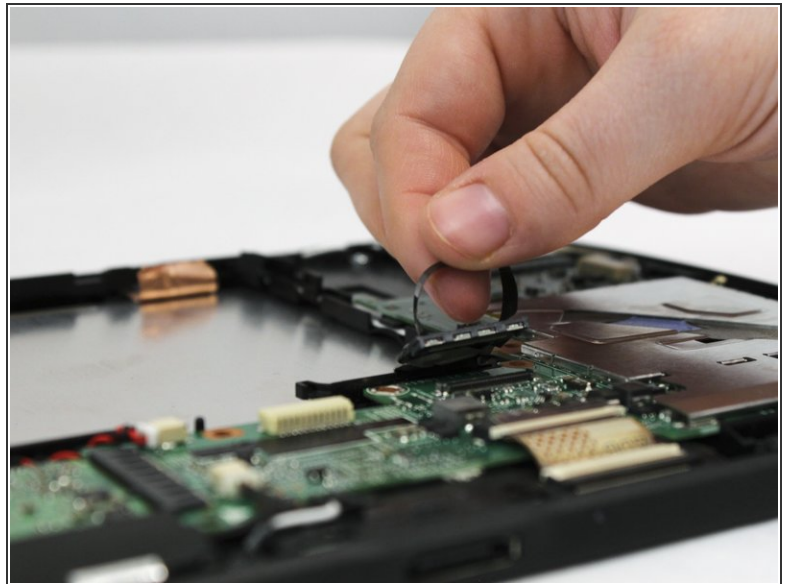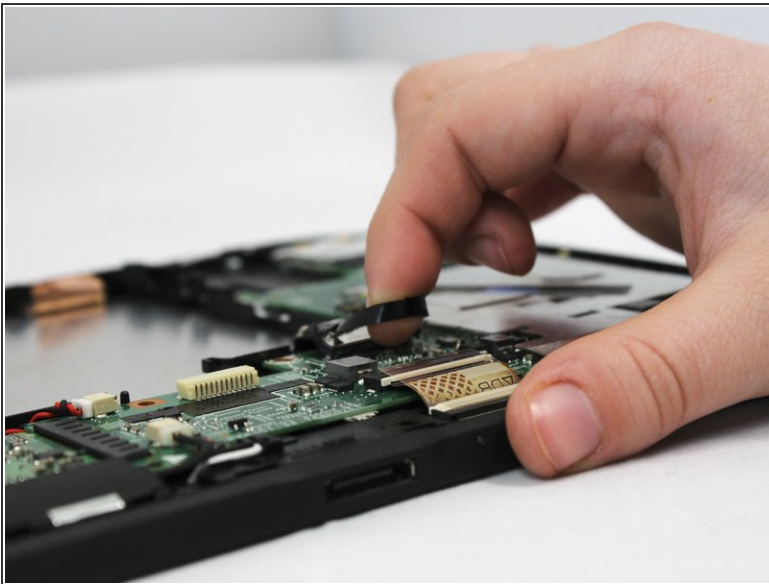

- Locate the grey LCD cable attached to the motherboard on the device.
  - Pull up on the black tape handle attached to the LCD cable to disconnect the cable.
- ⚠ Be sure to pull on the back rather than the LCD cable itself.

## Step 9

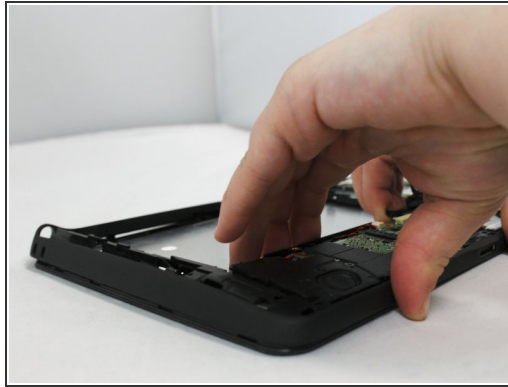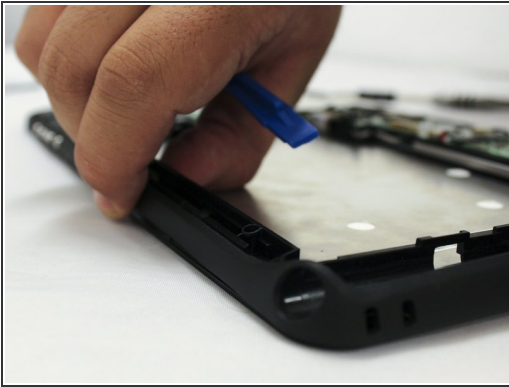

- Using your hands or the blue plastic opening tool, go along the edges of the frame and unsnap the screen from the middle frame.
- Lift the middle frame away from the screen.

To reassemble your device, follow these instructions in reverse order.