




# ASUS Chromebook C200MA Screen Replacement

Asus Chromebook C200ma Screen replacement

Written By: Christopher Lim

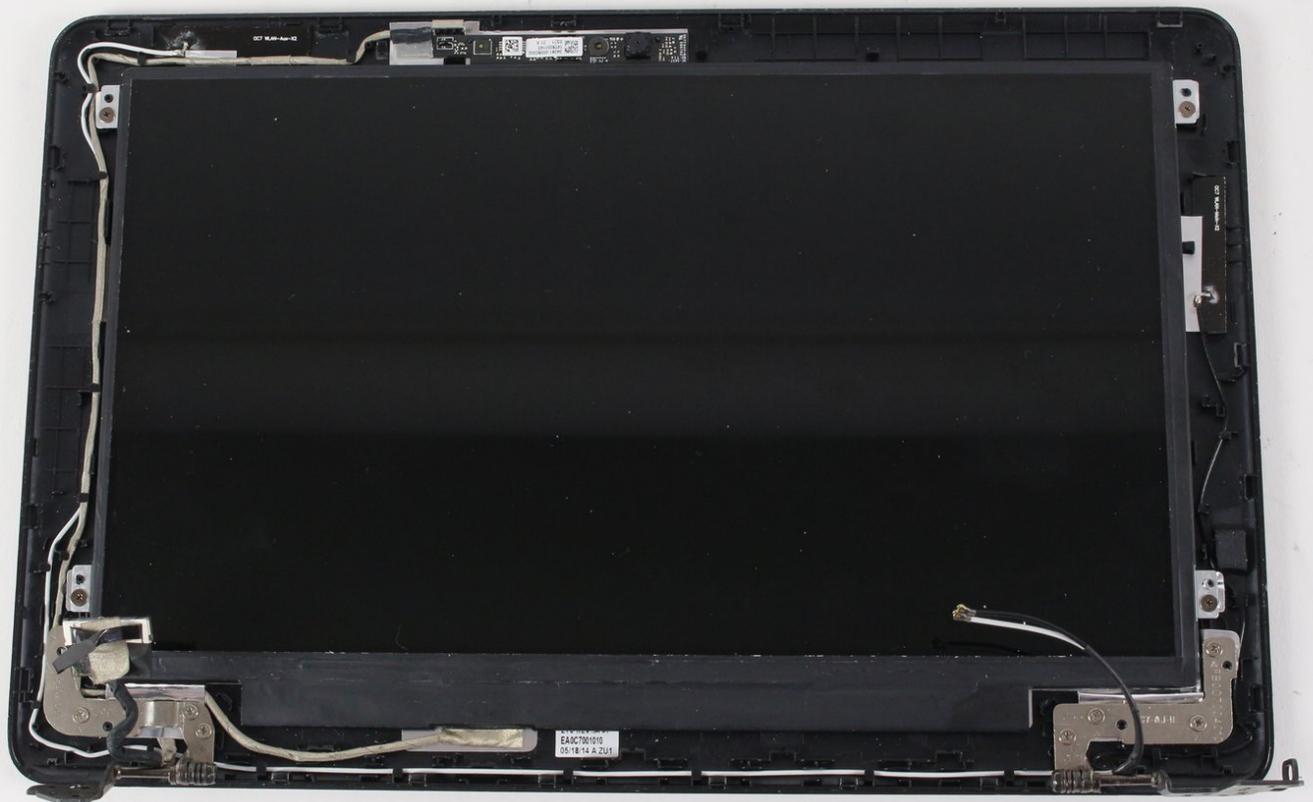

---

## INTRODUCTION


This guide will take you through a step-by-step process for the removal of your Chromebook's screen.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Back Panel

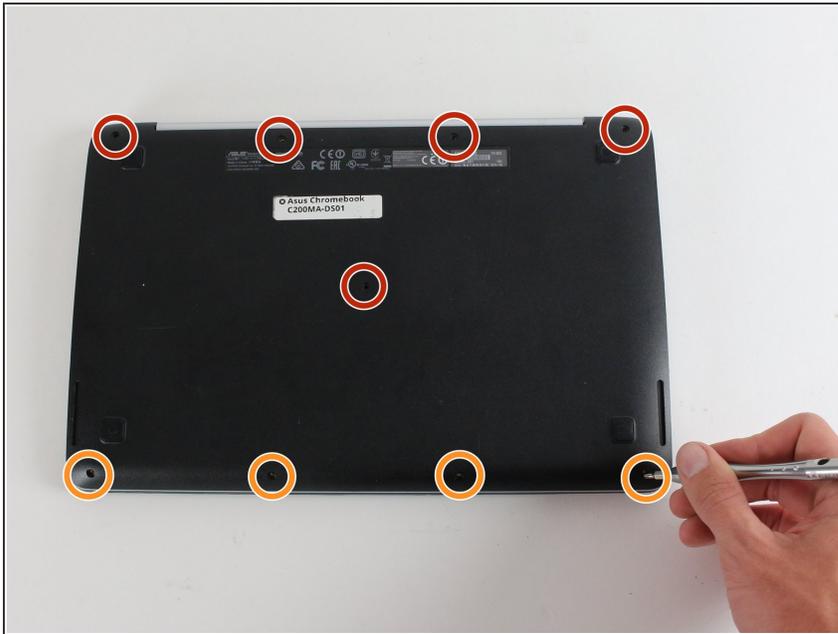

**!** Before proceeding, power down your Chromebook. Close the display and lay it on a soft surface, top-side down.

- Remove the five 8.4 mm Phillips #0 screws.
- Remove the four 4.6 mm Phillips #0 screws.

## Step 2





- Use the plastic opening tool to gently work around the edge of the Chromebook until the back panel starts to lift off.

### Step 3



- Remove the back panel by lifting it away from the Chromebook.
- ⓘ Some clicking will be heard as the panel is removed from the back, this is completely normal.

### Step 4 — Battery Connection

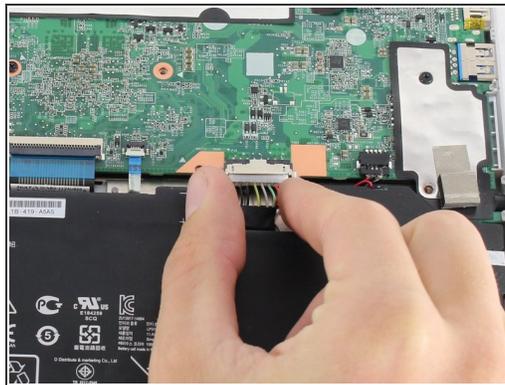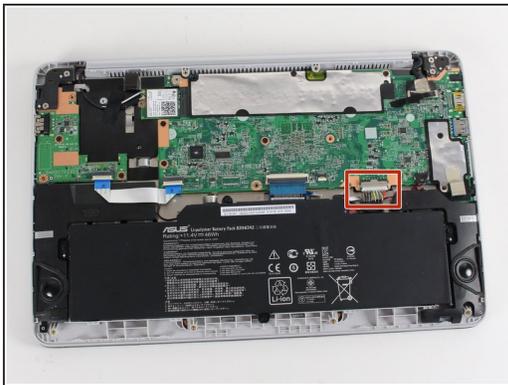

- To disconnect the battery, pinch the multi-color bundle cable with your thumb and forefinger and pull directly back.

## Step 5 — Screen




- Disconnect the screen cable connector located on the top right of the motherboard.
- Using a spudger, gently pry up the sides of the connector.
- Pull the connector off with your fingers.

## Step 6




- Disconnect the black and white antenna cable connectors for the WiFi card. The connectors look like small buttons on the ends of colored wires.
  - Gently pry the cable connectors off with your fingers or a spudger.
  - Peel the back the black piece of tape holding the connectors in place
- i** These connections are button-like and will have a little resistance when removing.

## Step 7

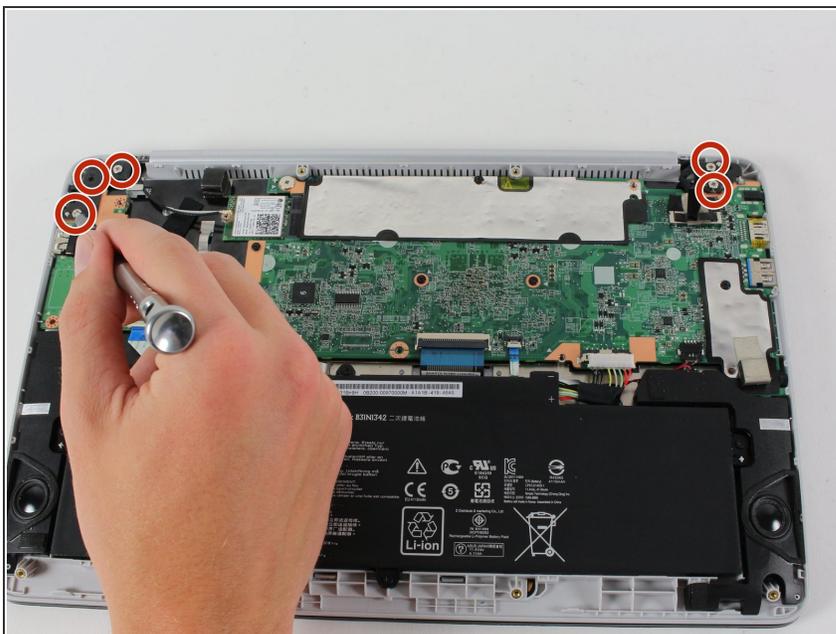

- Remove the three 5.7 mm #0 Phillips screws in the left hinge mount.
- Remove the two 5.7 mm #0 Phillips screws in the right hinge mount.

## Step 8

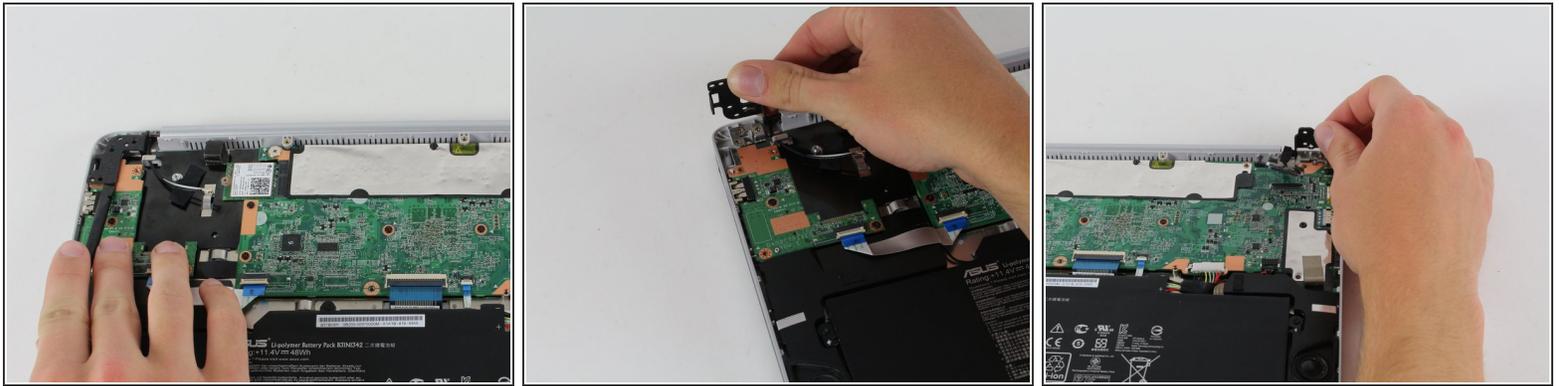

- Pry up the bigger hinge on the top left of the Chromebook with a plastic spudger.
  - With your fingers, bend the hinge all the way back until it is perpendicular to the Chromebook.
  - Repeat this process on the smaller hinge on the top right.
- i** These require quite a bit of force to rotate back.

## Step 9



- Grab the sides of the Chromebook as if you were opening it.
- Slowly hinge the back of the Chromebook away from the screen.
- Use your middle fingers to push the back of the Chromebook towards you, and away from the hinges. At this point the keyboard and the screen should be completely separated

## Step 10



- Using the plastic prying tool, pry open the outer non-hinge edges of the screen frame by sliding the tool around the perimeter of the frame.
- ⓘ You should hear snapping sounds and the screen cover should be hanging off the frame with the bottom edge still connected.

## Step 11



- Work two fingers under the inside edge of the plastic screen cover then slide them across the screen, unhooking all the connections.
- ⓘ There are many connections between the cover and frame that will need forcing to separate. Also, the grey rounded plastic piece may fall off through this step.

## Step 12




- Remove the four 2.8 mm #00 Phillips screws located around the perimeter of the screen.
- ⓘ The screen is still attached to the laptop by a cable on the back of the screen.

## Step 13



- Flip the screen towards the hinge to access the cable connector.

## Step 14

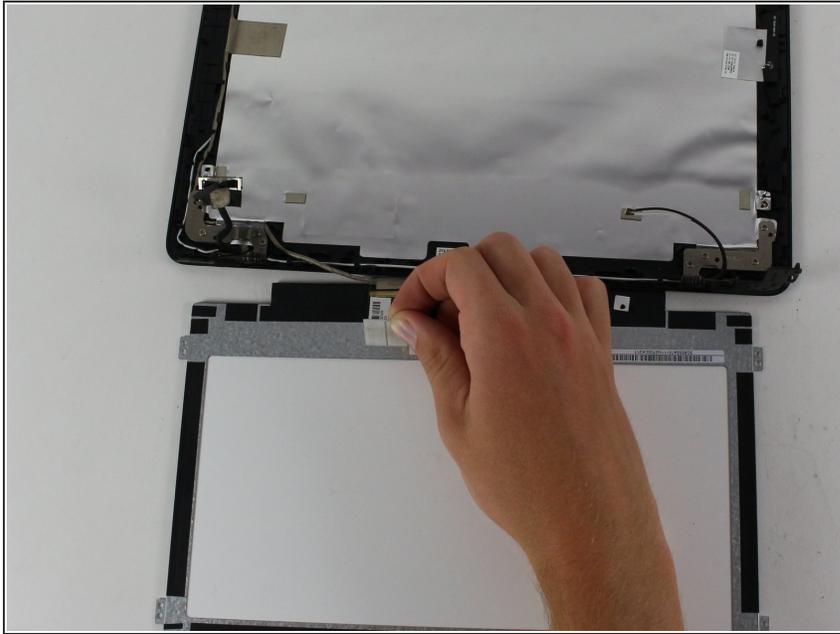

- Peel the tape that holds the cable connector in place and slide the connector out.

To reassemble your device, follow these instructions in reverse order.