



# Dyson DC39 Origin Cyclone Filter Replacement

Replace the cyclone filter on the Dyson DC39 Origin to improve suction or eliminate foul odors.

Written By: Sam Nelson



---

## INTRODUCTION

This guide will outline how to remove the cyclone filter for either cleaning or replacement. The guide requires no advanced skills and is relatively easy.

---



### TOOLS:

- [Spudger](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Bin



- Push down on the gray button located next to the power button to release the bin from the ball housing.
  - Pull the bin away, then up from the ball housing to remove it.
- ☑ If the bin won't fit back into place during re-assembly, you may need to push the grey button again.

## Step 2 — Pre-filter



- Remove the purple pre-filter by pulling it up and out of the bin.

### Step 3 — Cyclone Filter



- Push down on the red button, located on top of the bin, to release the bottom section of the bin.

### Step 4



- Push the grey button located in between the parts of the red lever to release the clear, bottom section of the bin.
- ⓘ The grey button can only be pressed after the bottom section is open.

## Step 5



- You should notice several notches around the rim of the filter. Slide the plastic opening tool around the rim to release the notches.
- After releasing all of the notches, pull the filter away from the orange cyclone assembly to remove it from the bin.

To reassemble your device, follow these instructions in reverse order.