



# Acer Chromebook R11 CB5-132T-C1LK

## Camera Replacement

Replacement guide for the camera in an Acer Chromebook R11 CB5-132T-C1LK.

Written By: Elizabeth Crisologo



---

## INTRODUCTION

In case the camera is no longer functioning, this guide explains how to access and remove it from the Chromebook.



### TOOLS:

- [Heavy-Duty Spudger](#) (1)
  - [Metal Spudger Set](#) (1)
-

## Step 1 — Camera




- Insert the metal spudger into the groove on the edge of the screen.
- Carefully slide the spudger from one corner to another.
- When there is room for a finger, remove the screen by gently lifting it out of the computer.

## Step 2



- Using a heavy duty spudger, lift the camera off the screen base.
- ⓘ The camera will be connected to the base with an adhesive.

## Step 3

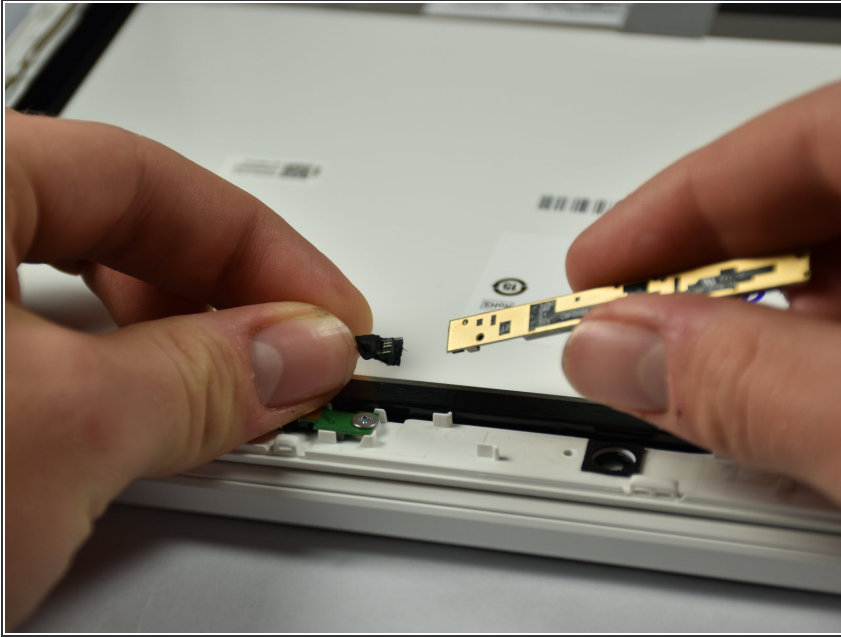

- Unplug the camera from its port.

To reassemble your device, follow these instructions in reverse order.