




Asus VivoBook S200E-RH13T73 Screen Replacement

Replace your unresponsive screen to return display to your VivoBook.

Written By: Shilo Stuart

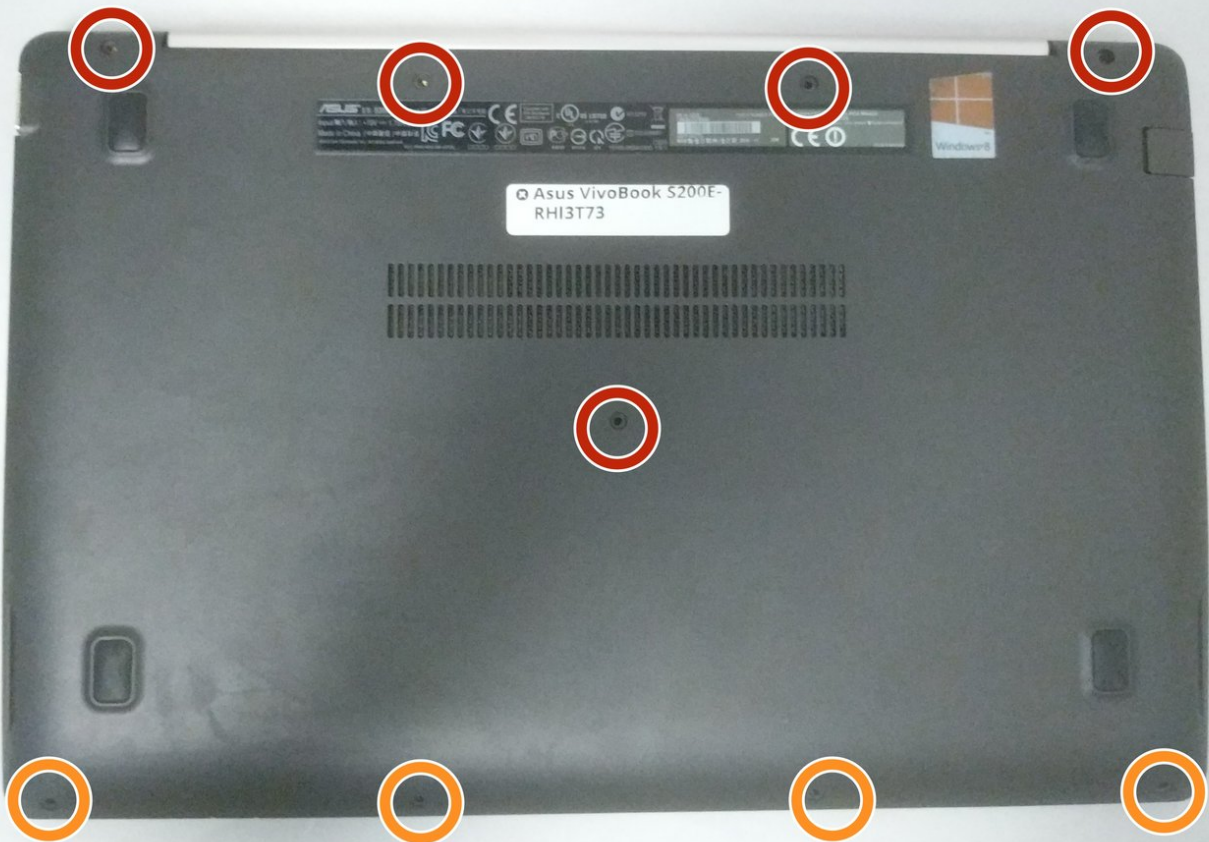

INTRODUCTION


Replace your unresponsive screen to return display to your VivoBook.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Screen

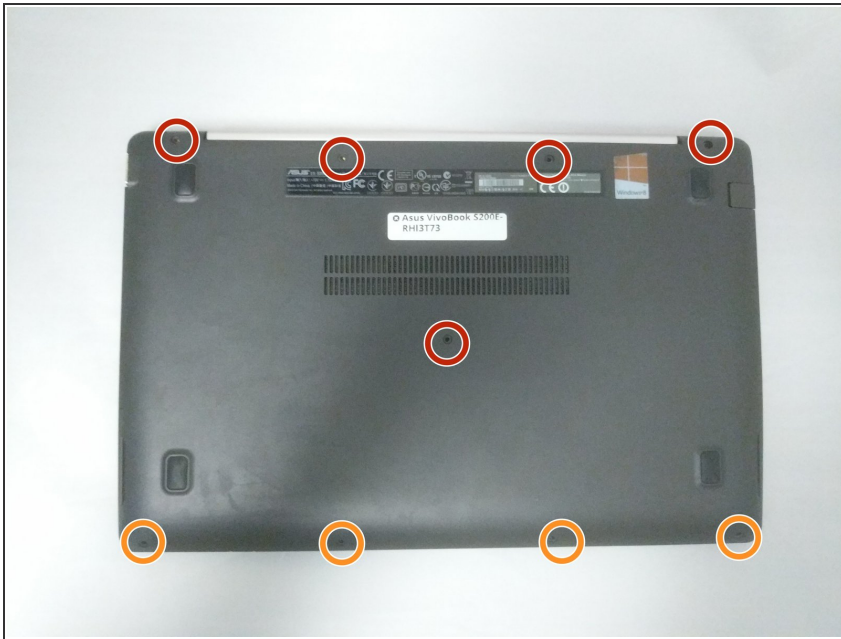

- With the screen closed, place your laptop upside-down with the front facing you.
- Remove the five black 80mm Phillips #0 screws.
- Remove the four black 50mm Phillips #0 screws.

Step 2

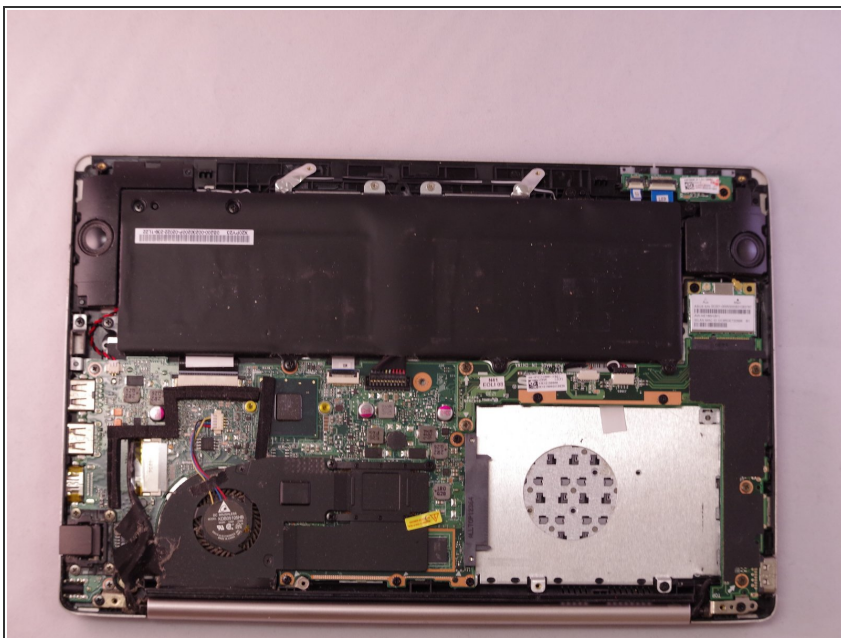

- Use a metal spudger to pry the bottom panel open.
- ⚠ Be gentle around the edges.
- Lift the back panel to expose the inside of the laptop.

Step 3



- Use a metal spudger to remove the clear screen protector from its backing.
- ❗ Apply ample force along the bottom of the screen protector.

Step 4



- Using a Phillips #0 screwdriver, remove the four 2mm silver screws located at each of the four corners of the screen.

Step 5



- Gently lift the screen up and over.
- Use tweezers to remove the EX2 LVDS connector cable that connects the screen and the laptop.
- Remove the screen.

To reassemble your device, follow these instructions in reverse order.