



1991-1996 Toyota Camry Oil and Oil Filter Replacement

An oil change should be performed every 5k...

Written By: eCuration



INTRODUCTION

An oil change should be performed every 5k miles and can easily be.

Follow this video tutorial by YouTuber [NutzAboutBolts](#) to do the job yourself.

TOOLS:

Oil Drain Pan (1)
Torque Wrench (1)
3/8" Drive Ratchet (1)
14 mm socket (1)
Oil Filter Wrench (1)
Paper Towels (1)

PARTS:

Engine Oil Filter (1)
Crush Washer (1)
5W-30 Motor Oil (4.2)

Step 1 — Oil and Oil Filter



- Locate the oil filter under the exhaust manifold in the front of the vehicle
- [source](#).

Step 2




- Place the Lisle 63600 Oil Filter Tool over the filter, use an extension on the ratchet to reach around the hot manifold, and loosen the filter
 - [source](#)
- Be careful not to burn yourself on the hot manifold.

Step 3



- Unscrew the oil filter and let it drain into the oil drain pan
 - [source](#)
- Make sure the pan is aligned to catch oil from both the filter and drain plug.

Step 4

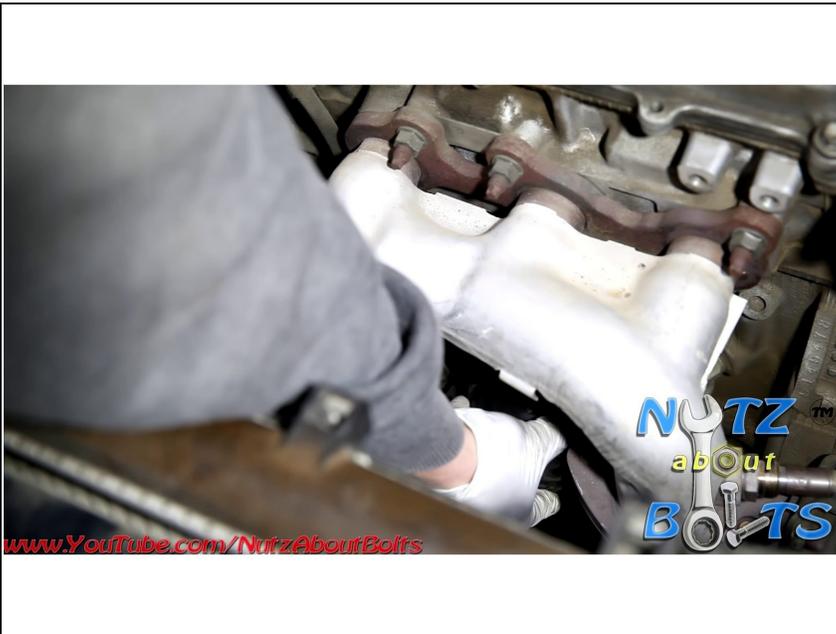

- Carefully remove the old oil filter
- [source.](#)

Step 5





- Clean the mating surface where the new filter will be installed
- Ensure there are no old seals or debris that could affect the new filter's seal
- [source.](#)

Step 6




- Install the new oil filter by hand tightening it
- [source.](#)

Step 7

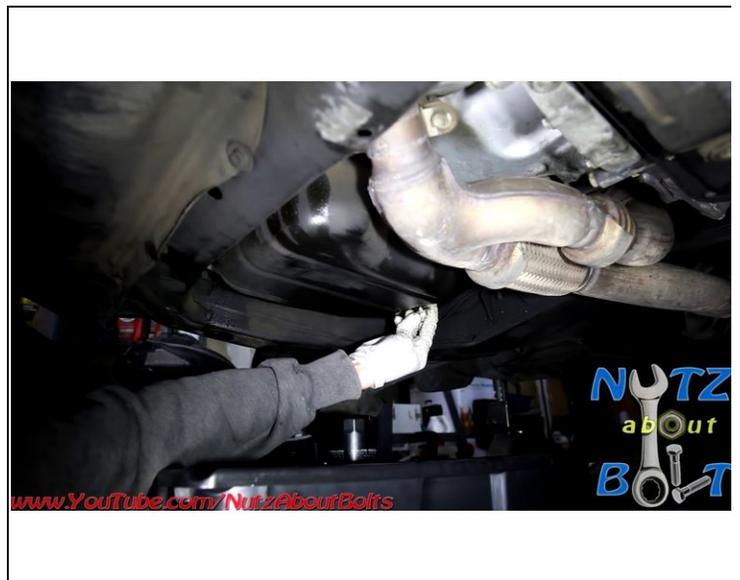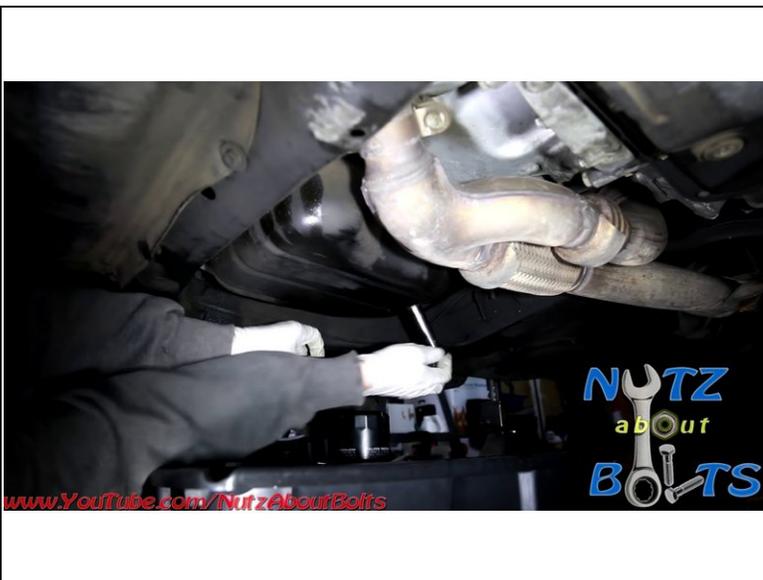



- Move to the oil drain plug location and remove it using the 14mm socket and ratchet
 - [source](#)
- Let the oil drain into the pan
 - [source.](#)

Step 8

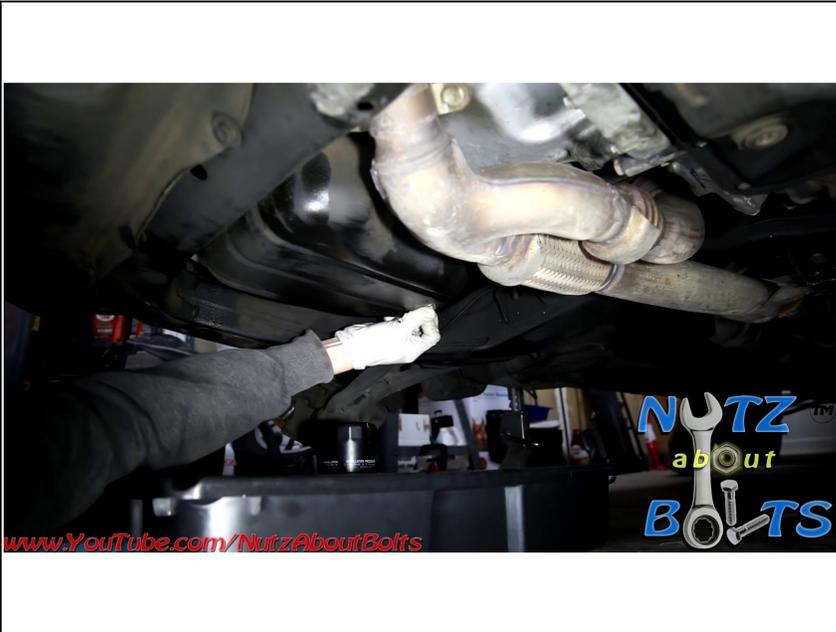


- Replace the old gasket on the drain plug with a new one, if necessary
- [source.](#)

Step 9

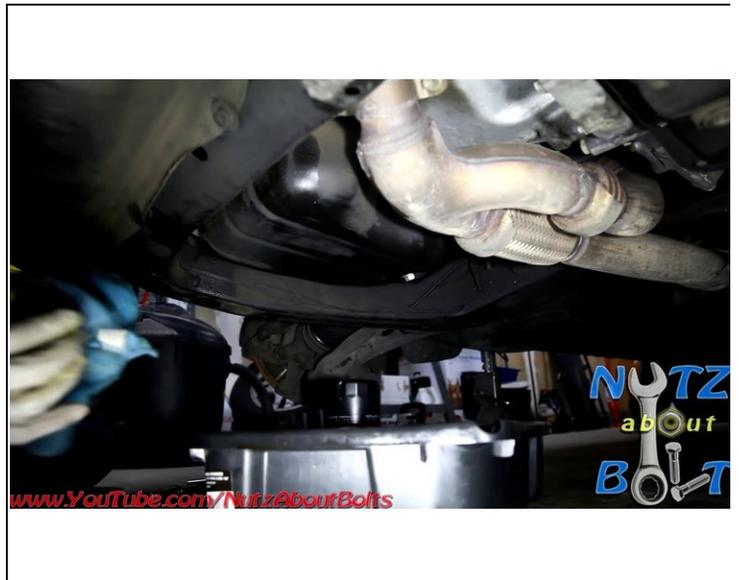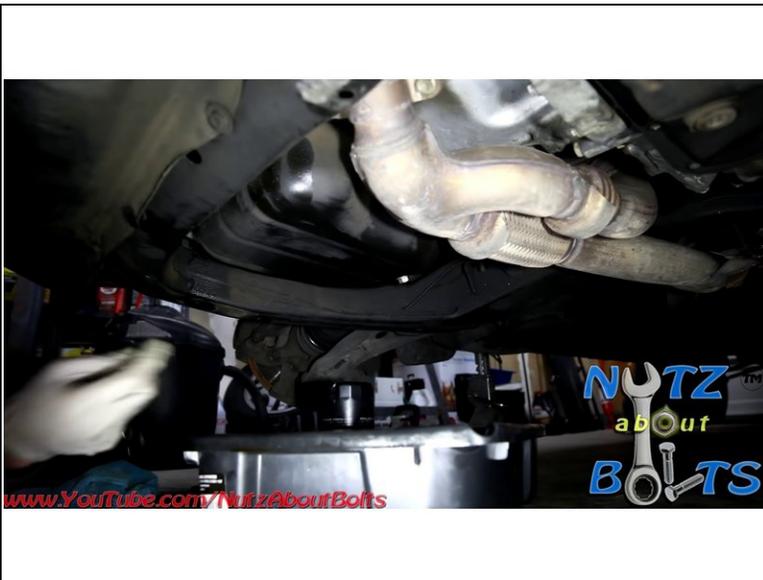

- Tighten the drain plug using the 14mm socket
 - [source](#)
- Clean up any excess oil
 - [source.](#)

Step 10

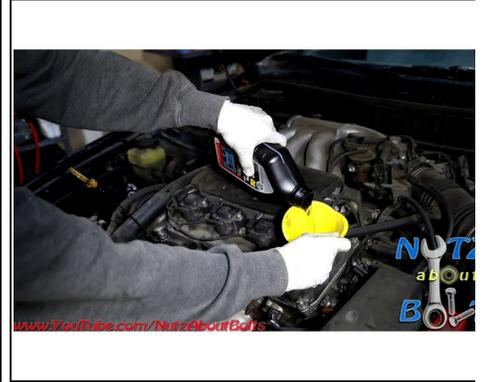

- Refill the engine with 5W-30 oil using a funnel
 - [source](#)
- This engine should take about five quarts
 - [source](#)
- Be careful when filling the oil, as there is a plate just under the fill opening that can cause spills
 - [source](#)
- Tilt the funnel to ensure the oil goes into the engine
 - [source](#).

To reassemble your device, follow these instructions in reverse order.