



Apex TM772 Casing Removal

Use this guide to replace the battery in your Apex TM772.

Written By: Doran Van Bommel



INTRODUCTION

This guide will show the user how to remove the back panel from their device to give them access to hardware components. This is required for replacement guides on this device.

TOOLS:


- [iFixit Opening Tools](#) (1)
-

Step 1 — Casing



- Begin by inserting the plastic opening tool into the seam between the back and front of the case and carefully pry the back from the front.

Step 2

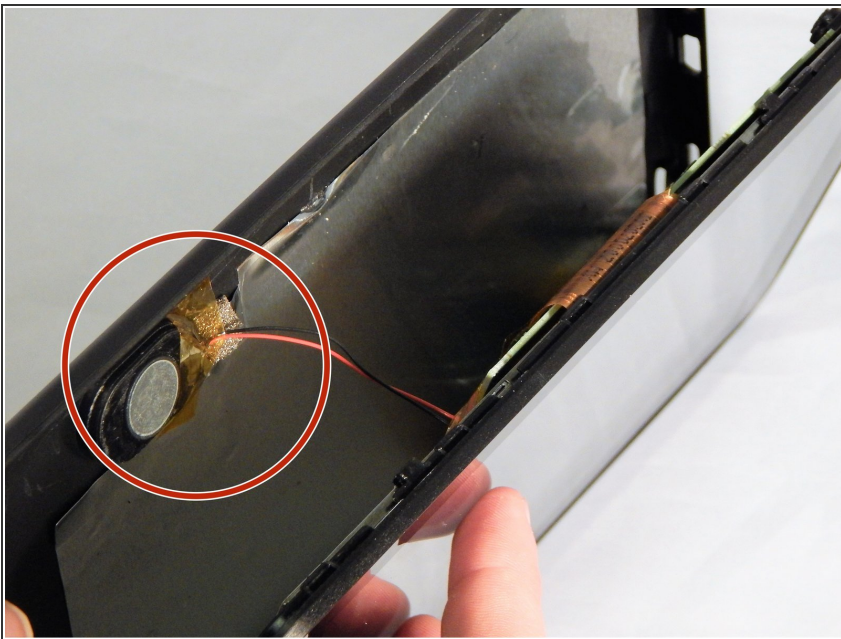

- Moving along the seam continue to pry the case apart.
- ⚠ The internal speaker is adhered to the inside of the back casing. There are two wires that connect the speaker to the circuit board and may be damaged if care is not taken. Once open the speaker may be removed from the back casing by removing the tape holding the speaker with either tweezers or your fingers.

Step 3



- The back panel should now be disconnected from the device. This provides access to the components of the device for repairing and replacing parts of the tablet.

To reassemble your device, follow these instructions in reverse order.