



2003-2007 Honda Accord Automatic Transmission Fluid and Filter Replacement

A video tutorial on how to change the automatic transmission fluid and filter on a 2003-2007 Honda Accord.

Written By: eCuration



This document was generated on 2020-11-14 07:18:59 AM (MST).

INTRODUCTION

Replace the automatic transmission fluid and filter every 60k miles or 3 years.

Follow this video tutorial by YouTuber [NutzAboutBolts](#) to complete the replacement yourself.

TOOLS:

- [3/8" Drive Ratchet](#) (1)
- [Transmission/ Engine Hose](#) (1)
- [10mm Deep Socket](#) (1)
- [Flathead Screwdriver](#) (1)
- [Large Needle Nose Pliers](#) (1)
- [Oil Drain Pan](#) (1)
- [WD-40](#) (1)
- [Torque Wrench](#) (1)

PARTS:

- [Automatic Transmission Fluid 1 qt.](#) (3.2)
- [Automatic Transmission Filter](#) (1)

To reassemble your device, follow these instructions in reverse order.