



2003-2007 Honda Accord Key Fob Battery Replacement

Use this guide to replace the battery in a 2003-2007 Honda Accord keyless fob remote.

Written By: eCuration



INTRODUCTION

If your 2003-2007 Honda Accord key fob operates intermittently, the battery may need to be replaced. Use this guide to replace the battery in a 2003-2007 Honda Accord keyless fob remote.

Alternatively, follow the video tutorial from YouTuber [NutzAboutBolts](#) to complete the battery replacement.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Flathead Screwdriver](#) (1)

PARTS:

- [CR1616 Lithium Battery](#) (1)

Step 1 — Key Fob Battery



- Use a Phillips #0 screwdriver to remove the screw at the base of the key fob.

Step 2



- Insert a flathead screwdriver into the crack between the top and bottom portions of the key fob.
- Pry upwards with the flathead screwdriver to loosen the bottom portion of the fob.
- Remove the bottom portion of the key fob.

Step 3



- Remove the inner portion of the key fob.

Step 4



- Use your fingers to undo the clips at the top and bottom of the fob's inner portion.
- Separate the two sides of the fob's inner portion.

Step 5



- Use a flathead screwdriver to pry up the circular battery.
- Remove the key fob's battery.

To reassemble your device, follow these instructions in reverse order.