 


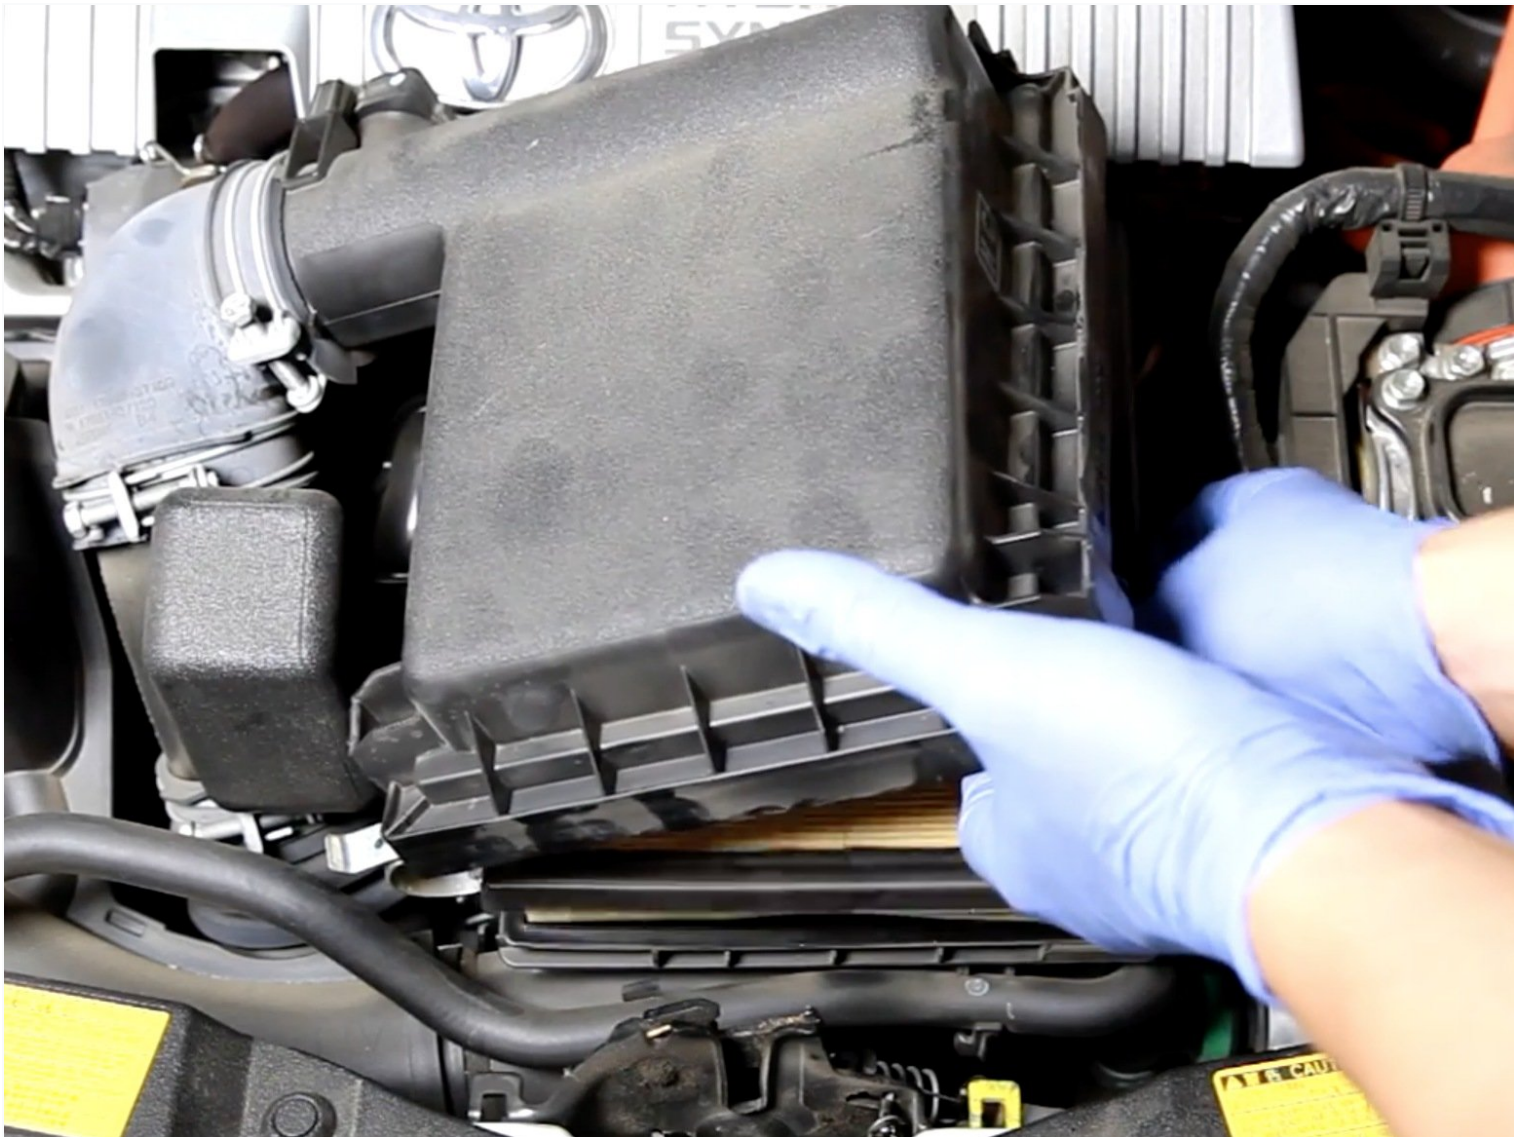

# 2009-2015 Toyota Prius Engine Air Filter Replacement

The engine air filter should be replaced once...

Written By: eCuration



# INTRODUCTION

The engine air filter should be replaced once every two years.

Follow this video tutorial by YouTuber [NutzAboutBolts](#) to complete the replacement yourself.



## TOOLS:

 
[Pair of Hands](#) (1)



## PARTS:


[Engine Air Filter](#) (1)

## Step 1 — Engine Air Filter

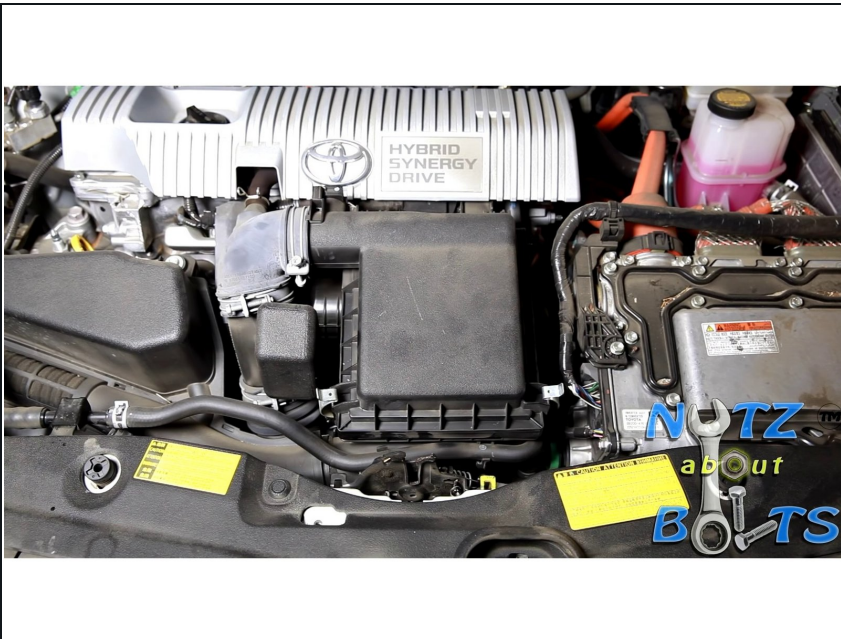


- Locate the air box in the engine compartment
- [source](#).

## Step 2

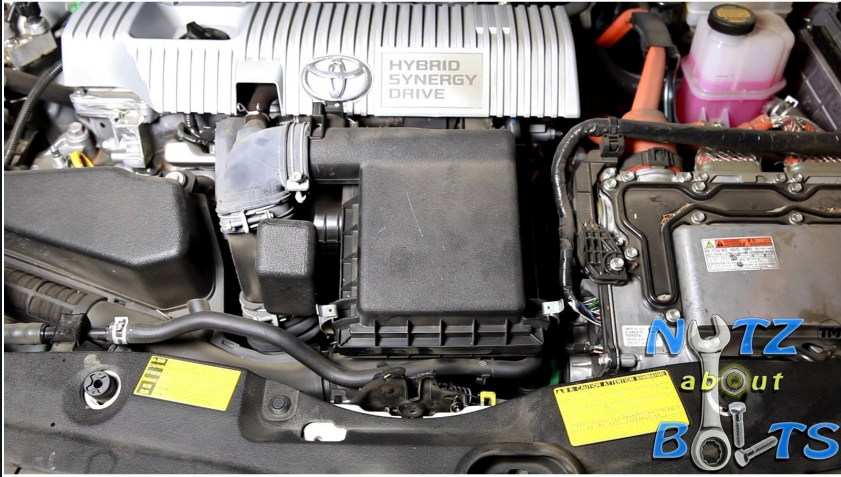 

- Unclip the air box by releasing the clips holding it in place
- [source.](#)

## Step 3

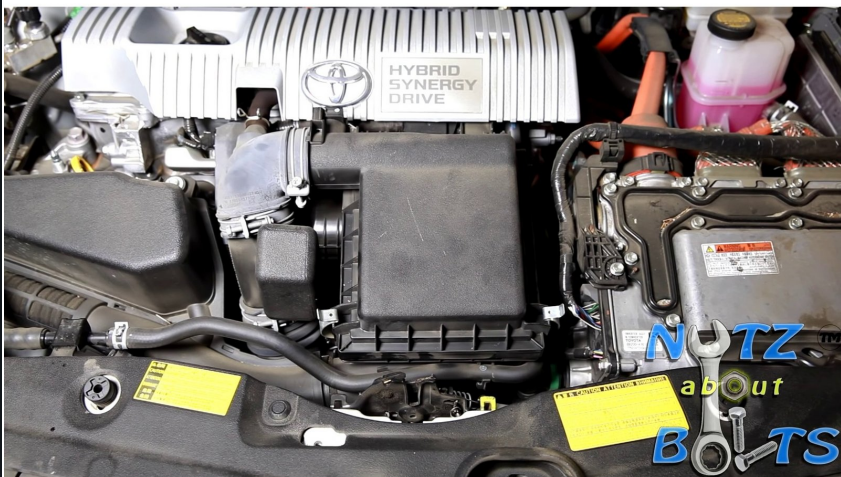 

- Carefully slide the air box out, making sure to avoid damaging the connected components
- [source.](#)



## Step 4



- Remove the old engine air filter from the air box
- [source.](#)

## Step 5



- Inspect the old filter and determine if it needs replacement based on its condition and mileage
- [source.](#)

## Step 6



- If the filter needs to be replaced, insert the new engine air filter (part number 17801-37021) into the air box
- [source.](#)

## Step 7



- Reinstall the air box by carefully sliding it back into position and securing it with the clips
- [source.](#)
- Remember to always check your engine air filter when replacing it, and be mindful of your driving environment, as some areas may be dirtier or dustier than others
- Regularly replacing your engine air filter can help maintain optimal engine performance and efficiency.

To reassemble your device, follow these instructions in reverse order.