



# Toolcraft ST-50D solder station Disassembly

How to disassembly the Toolcraft ST-50D solder station body.

Written By: Martin Kubica



---

## INTRODUCTION

I want to show you how to disassembly the body of Toolcraft ST-50D solder station.

---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — So looks the solder station.



- I think you can disassembly other models of Toolcraft ST solder stations 50/80/100 analog or digital the same way.

## Step 2 — Put the solder station on the back.



- There are two holes with screws on the bottom side (green circles on the picture) and the 2-nd pair of screws is under the two rubbery "legs" (red circles).

## Step 3 — Unglue the two "legs"...




- ... by nails or by flat screwdriver and you will see the second pair of holes with screws.

## Step 4 — Unscrew the screws ...




- ... by Phillips #1 screwdriver and you can open the body of the solder station.

## Step 5

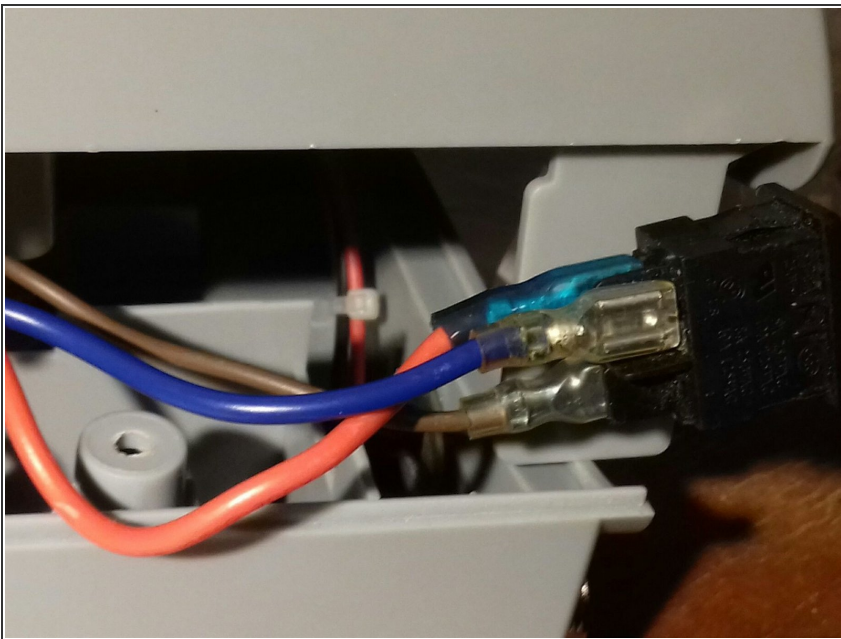

- The cables connected to switch: ON is Up , from inside: 1) RED + BLUE  
2) BROWN

## Step 6

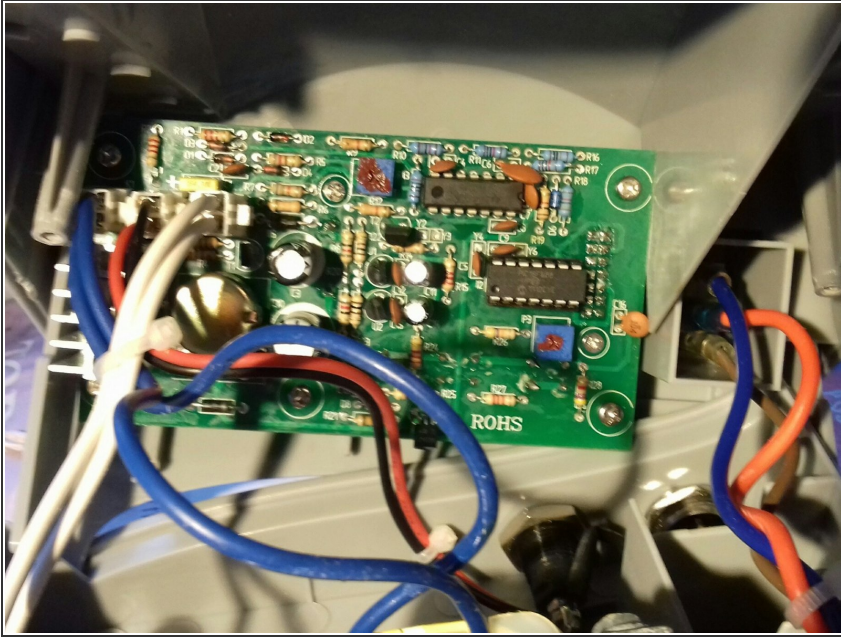

- From inside.

To reassemble your device, follow these instructions in reverse order.