



AXIOO Pico M1110 PJM RAM Replacement

Replace the RAM.

Written By: Cakra Diaz






TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Underside

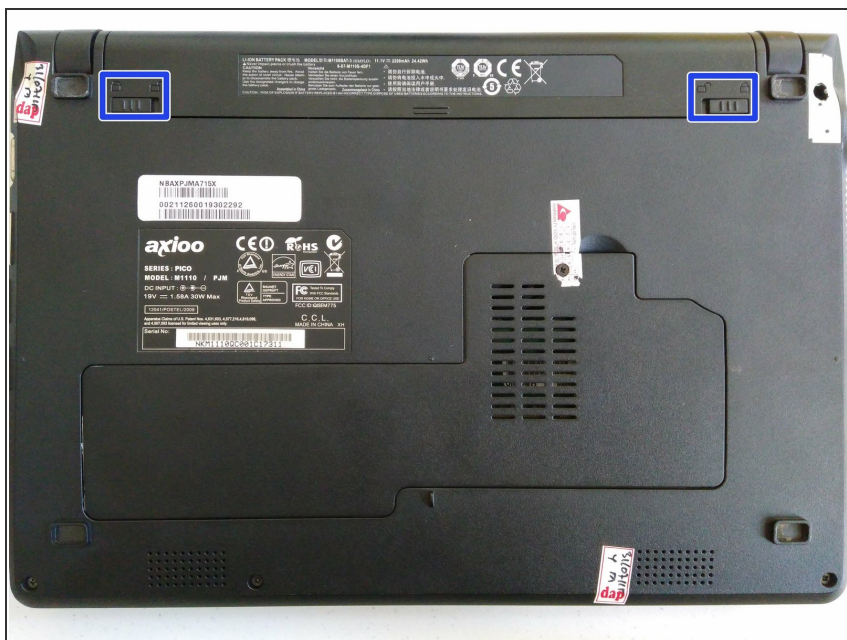

- Identify the battery locker.
 - Set the righthand locker to unlock.
- Pull the battery while setting the lefthand locker to unlock.

Step 2



- ★ Remove the battery.

Step 3 — Compartment



- Remove the following screw:
 - 1 long Philips #0 screw
- Remove the cover.

Step 4



- Identify the clipper.
- ❗ Slide the clipper's head away from each other until the RAM pops up.
- ☑ Remove the RAM.

To reassemble your device, follow these instructions in reverse order.