




# Dell Chromebook 13-7310 Battery Replacement

This guide will take shows a step by step process of removing and replacing the battery in a Dell Chromebook 13-7310.

Written By: Caleb S Whitener

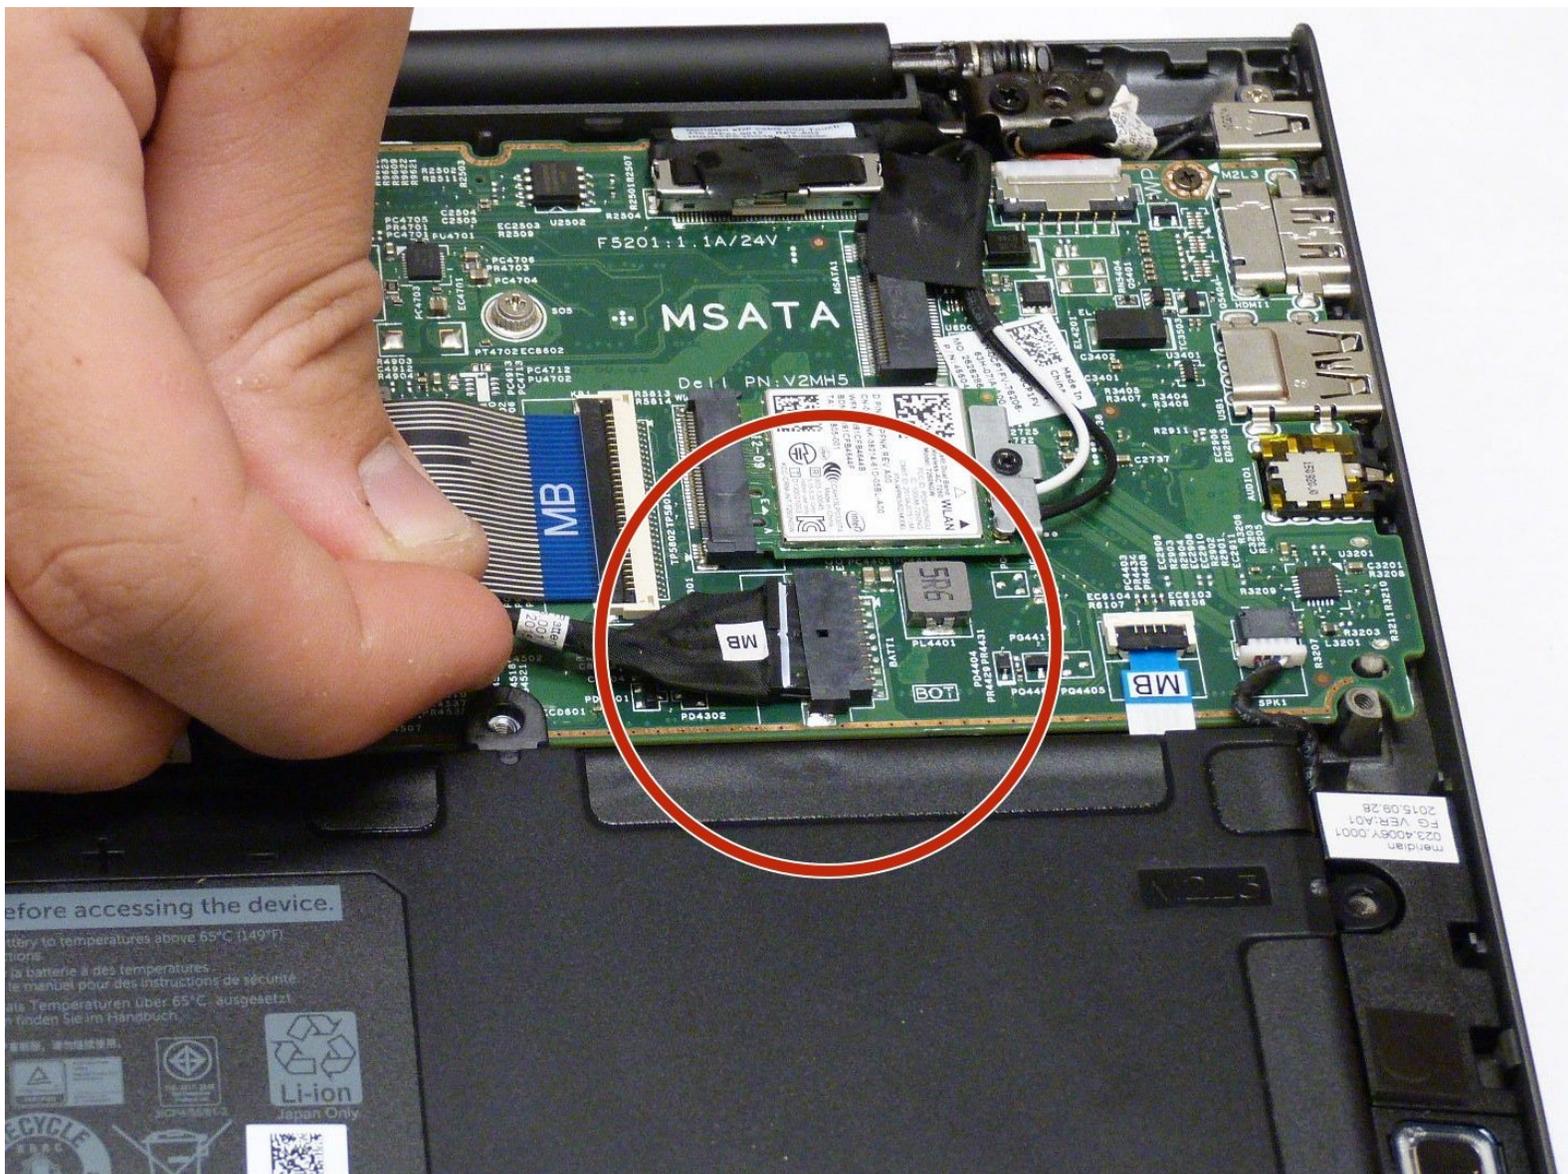

---

## INTRODUCTION


Computer batteries can sometimes become weaker over time, losing charge and making it difficult to properly use your device. If your battery is not functioning correctly anymore, then follow this guide to remove/replace the battery in a Dell Chromebook 13-7310.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [Fingers](#) (1)
-

## Step 1 — Back Cover

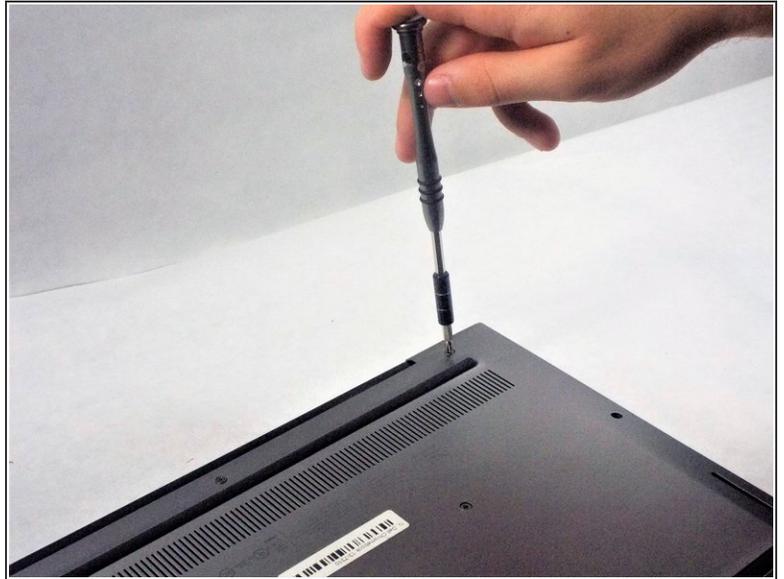


- Remove the eleven 3mm Phillips #1 screws.

## Step 2



- Use a plastic opening tool to gently remove the back panel.
- ⓘ It can be easier to pry open near a corner.

### Step 3 — Battery

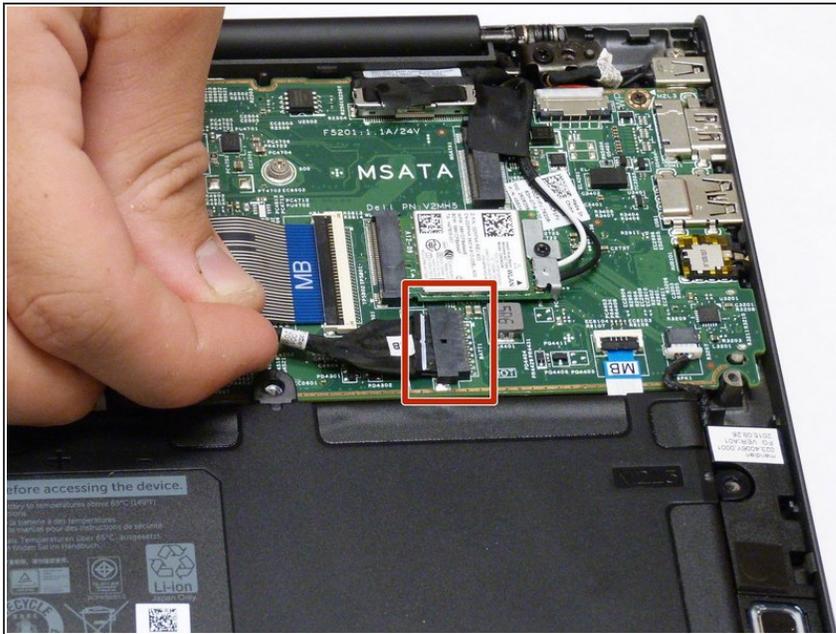

- Use your fingers to remove the connecting cable to the battery unit. Firmly grab the cord closest to the motherboard connection and pull straight back.

### Step 4



- Remove the four 2mm screws on the sides of the battery.

## Step 5



- To remove the battery, lift up on one side to get your fingers underneath and lift away.

Congratulations! You have successfully removed the battery of your Dell Chromebook 13-7310. To reassemble your device, follow these instructions in reverse order.