 




Asus X202E-UH31T Cooling Fan Replacement

This quick guide will help you replace your devices cooling fan. This can be useful for devices that get too hot.

Written By: Brandon Bloomfield

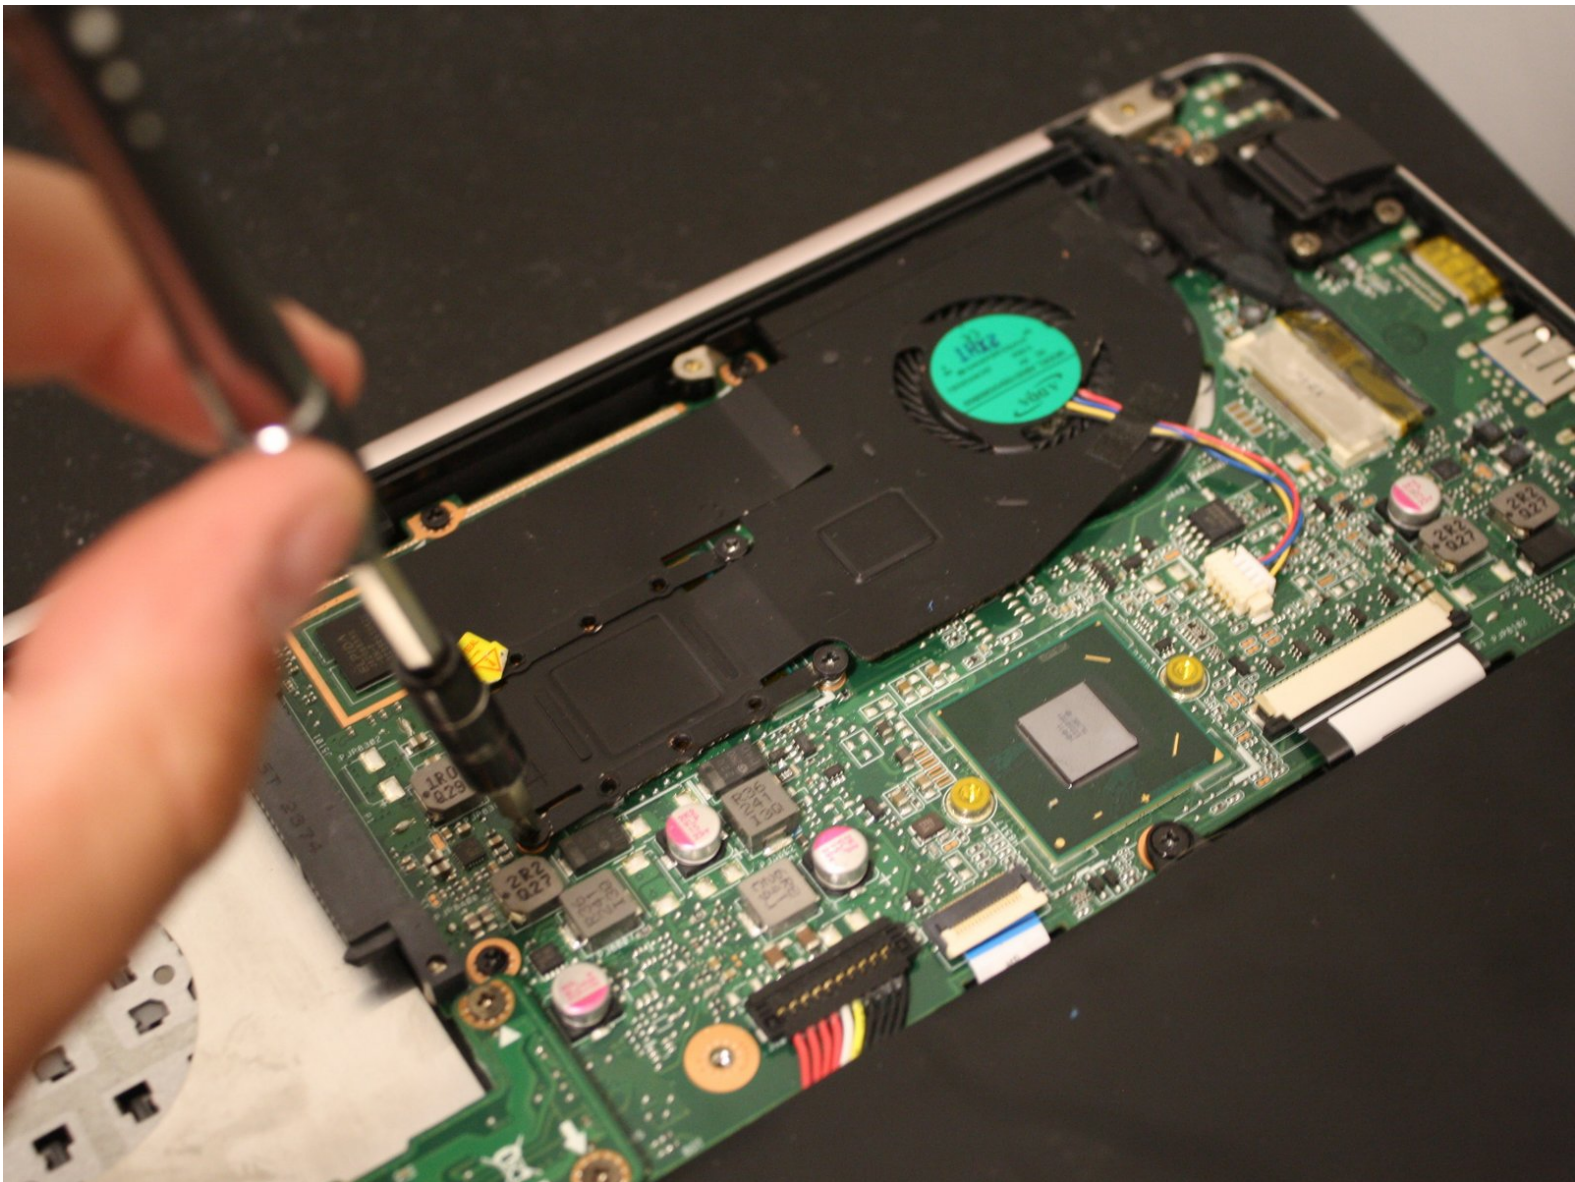

INTRODUCTION

This guide is a simple guide to replace a faulty cooling fan which could lead to your device running at a hotter temperature than usual.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Cooling Fan



 
- Remove the 9 1.2mm phillips head screws off the back of the computer using the small phillips head screw driver. Start by disconnecting the battery cable/ribbon.

Step 2



- Use a plastic opening tool to open the components of the laptop. In order to do this, insert the plastic opening tool in between the two covers then pry open with your fingers

Step 3

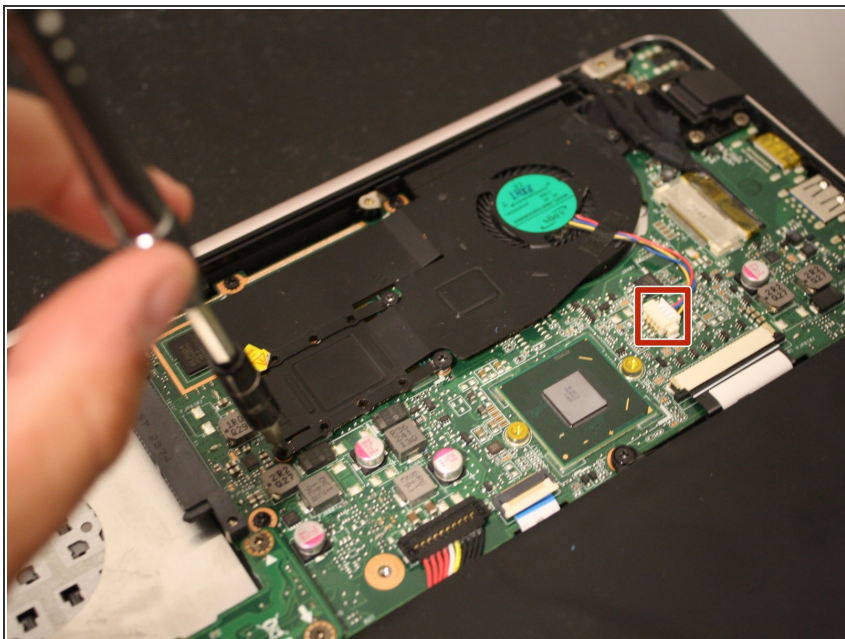

- Locate the fan and take out the 5 1.2mm phillips head screws with the ifixit #0 small phillips head screw driver that hold the fan to the mother board.
- Remove the fan and unplug the cable connector that connects the fan to the motherboard.

To reassemble your device, follow these instructions in reverse order.