



# Acer Aspire TimelineU M5-581T-6807 Hard Drive Replacement

This guide teaches you how to replace the hard...

Written By: Joseph Sctbunio



# INTRODUCTION

This guide teaches you how to replace the hard drive in an Acer Aspire M5-581T-6807 Ultrabook.



## TOOLS:


- [Jimmy](#) (1)  
EU145259
- [Metal Spudger](#) (1)  
EU145012
- [Spudger](#) (1)
- [Essential Electronics Toolkit](#) (1)



## PARTS:

- [1 TB SSD](#) (1)
- [250 GB SSD](#) (1)
- [Crucial MX500 500 GB SSD](#) (1)
- [2 TB SSD](#) (1)


## Step 1 — Keyboard

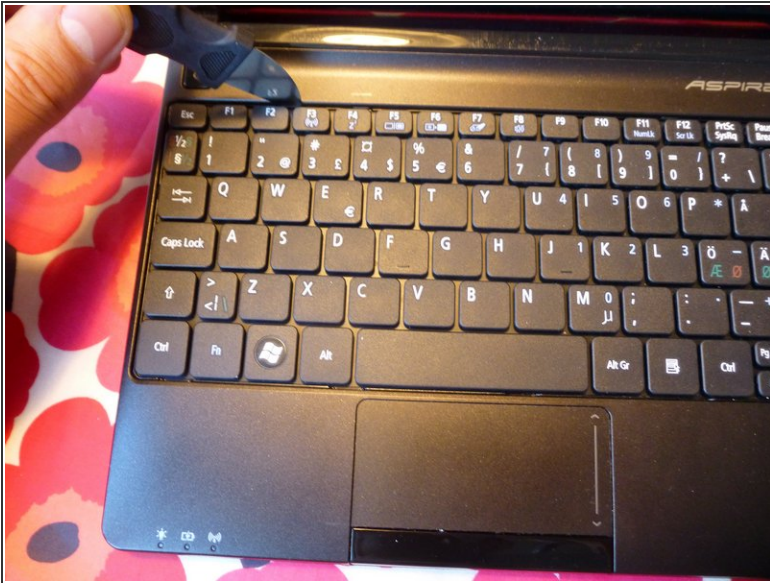

- Open the lid of the netbook. Use the Jimmy from the upper left corner of the keyboard. Put it between the keyboard and the casing and move it to the right. It might help to use a metal spudger to push in the pins holding the keyboard in place.
- Then move down along the sides where there is one pin on each side. After that twist the keyboard towards you.



## Step 2

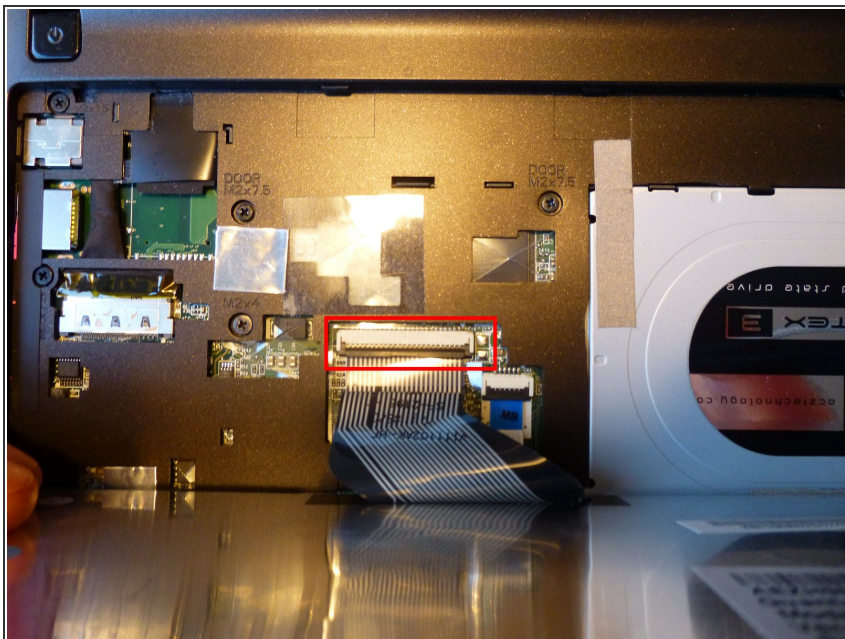

- Now open the brown connector so the flat cable is loose. Then you can remove the keyboard.

## Step 3 — Battery



- Put the netbook, so the back side is upwards.

## Step 4



- Push the right lock to the right so the red filed is visible on the left.


## Step 5



- Now move the left lock which is spring loaded to the left and keep it there. Then with the other hand remove the battery by pulling down.
- When reassembling the new battery push it up into the netbook and do lock the right by moving it to the left so the red field disappears.




## Step 6 — Keyboard

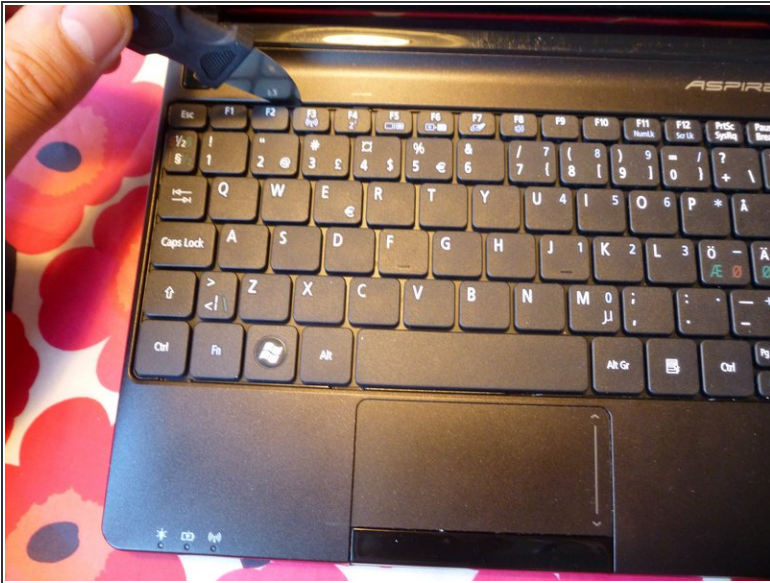


- Open the lid of the netbook. Use the Jimmy from the upper left corner of the keyboard. Put it between the keyboard and the casing and move it to the right. It might help to use a metal spudger to push in the pins holding the keyboard in place.
- Then move down along the sides where there is one pin on each side. After that twist the keyboard towards you.

## Step 7

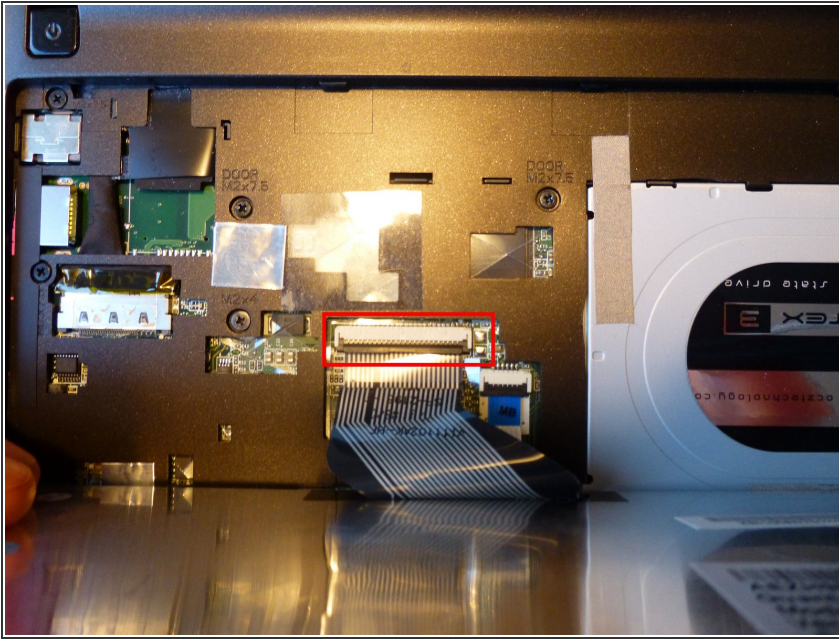

- Now open the brown connector so the flat cable is loose. Then you can remove the keyboard.


## Step 8 — Remove palmrest

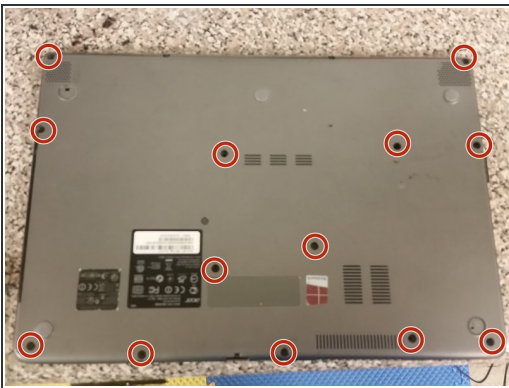

- Remove the 12 screws securing the palmrest.
- Slowly lift the palmrest up at the front, and stop when you feel the cable slack run out.
- Remove the tape covering the connectors.



## Step 9 — Remove palmrest cables from connectors

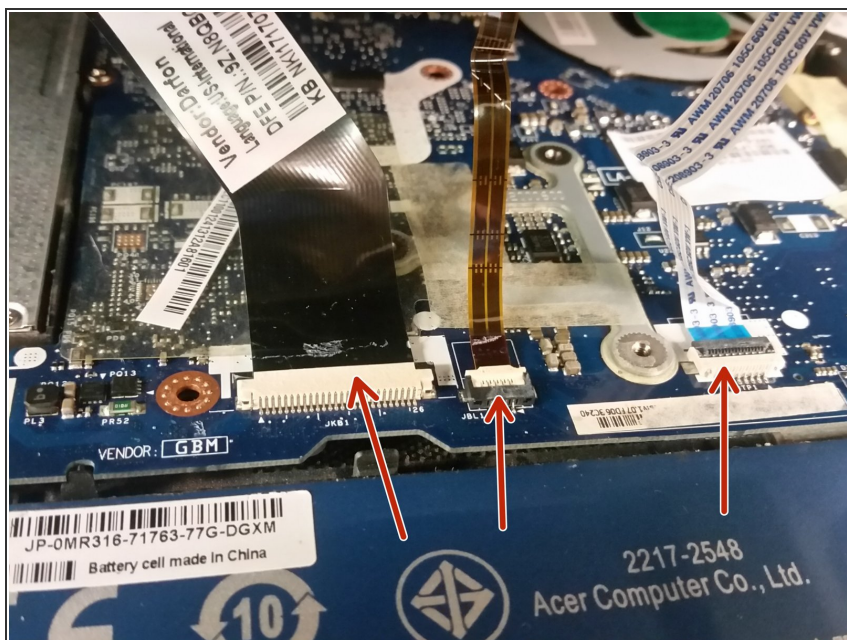

- Unlock the three connectors, and remove their cables.
- Continue to lift the palmrest upwards in the front, to the point that it hinges over onto the laptop screen, so as not to pull on the remaining cable on the palmrest. You don't need to disconnect this one.

## Step 10 — Remove hard drive caddy



- Remove the four short screws securing the hard drive caddy to the base.
- Remove the screws securing the caddy to the hard drive. You're done!

To reassemble your device, follow these instructions in reverse order.