 




# B-Flat Clarinet Key Pad Replacement

Replace a missing or damaged key pad on a clarinet.

Written By: Rachel Strobel

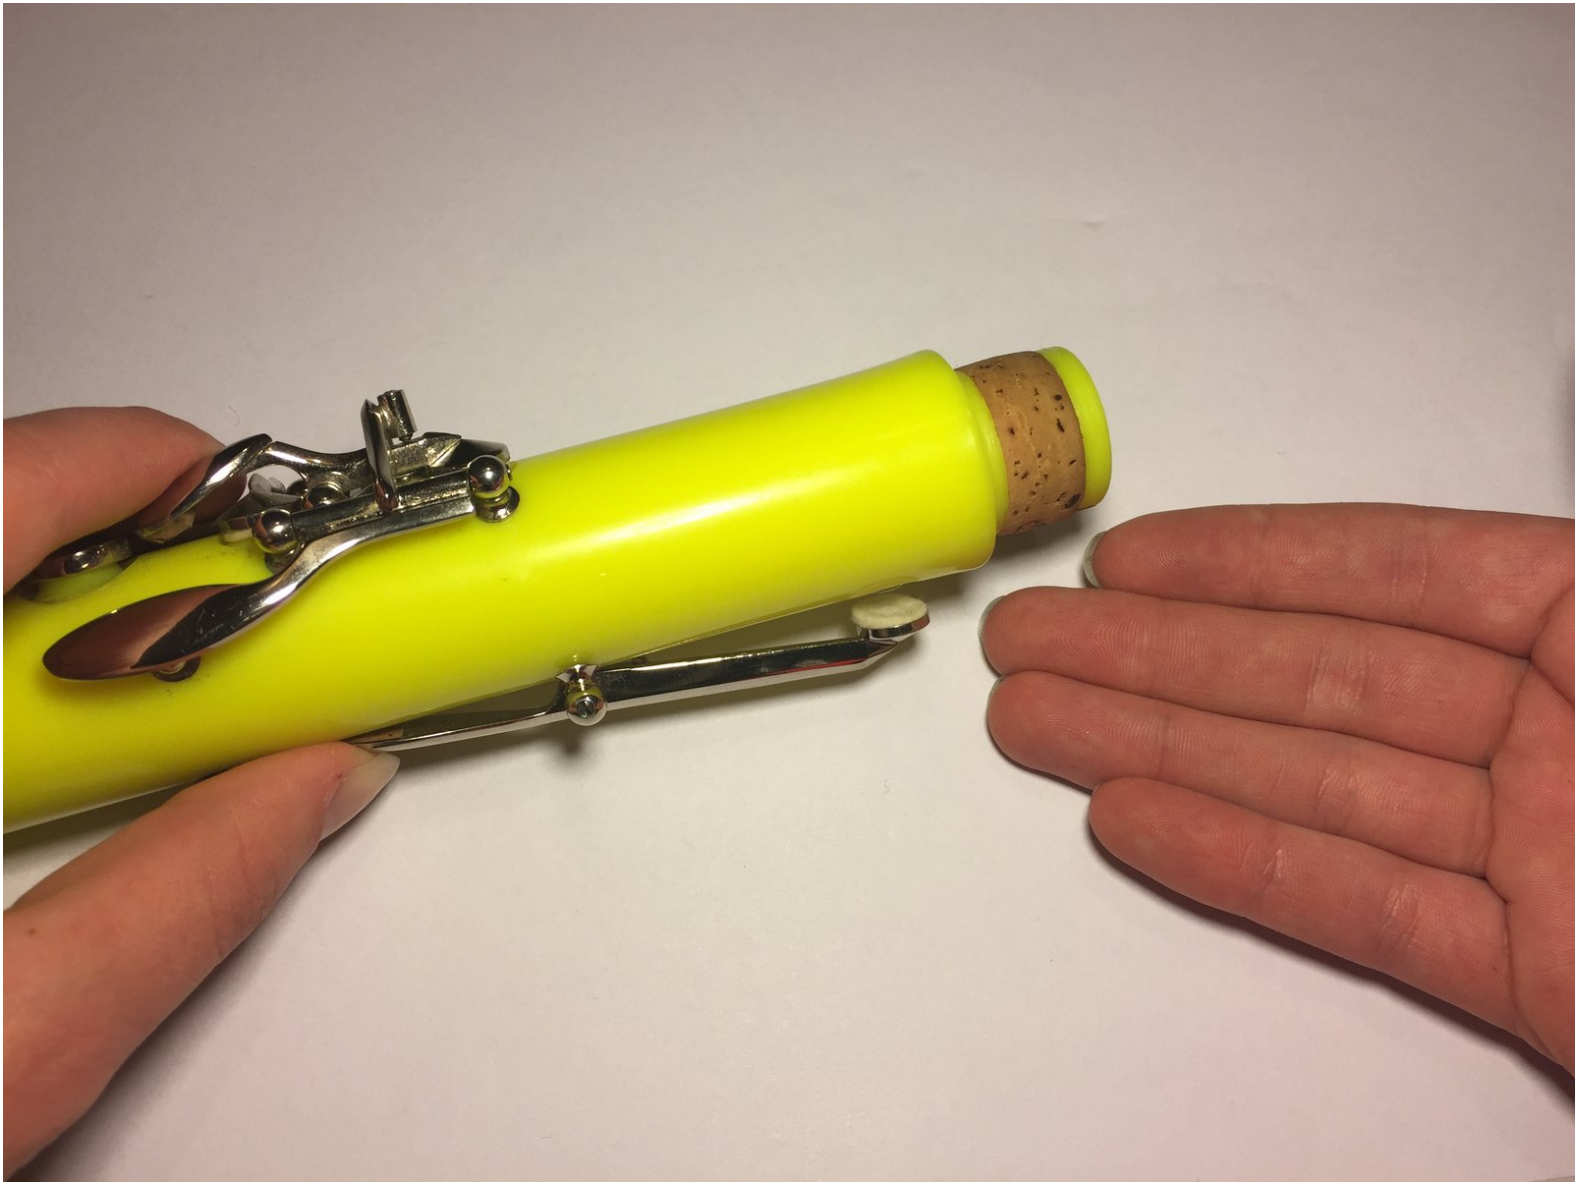

## INTRODUCTION


While a clarinet is used in this guide, this technique could be used on other woodwind instruments. A pad on a clarinet needs to be replaced if it falls off or becomes damaged. In this case, the protective film on the pad has fallen off.



### TOOLS:

- [Phillips PH000 Screwdriver](#) (1)
  - [Super Glue](#) (1)
-

## Step 1 — Key Pad

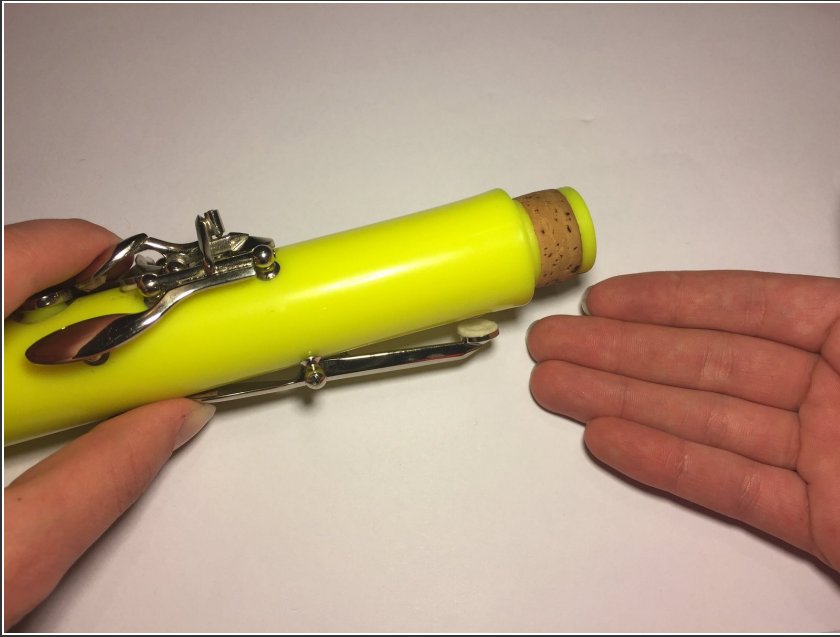

- Disassemble the clarinet until you are handling only the joint containing the missing or damaged pad.
- If the pad is missing completely, skip to step 3.

## Step 2



- Remove the damaged pad by inserting the screwdriver under the pad and peeling it off the key.

### Step 3



- Squeeze a dot of super glue into the empty key.
- Take care to not overfill the key or glue will ooze out and potentially bind the key to the instrument.

### Step 4



- Quickly insert the new pad into the key, taking care not to smear the glue.

 


## Step 5



- Using the screwdriver, press the pad down to secure it to the key
- Hold the pad for 5 seconds to let the glue harden

## Step 6

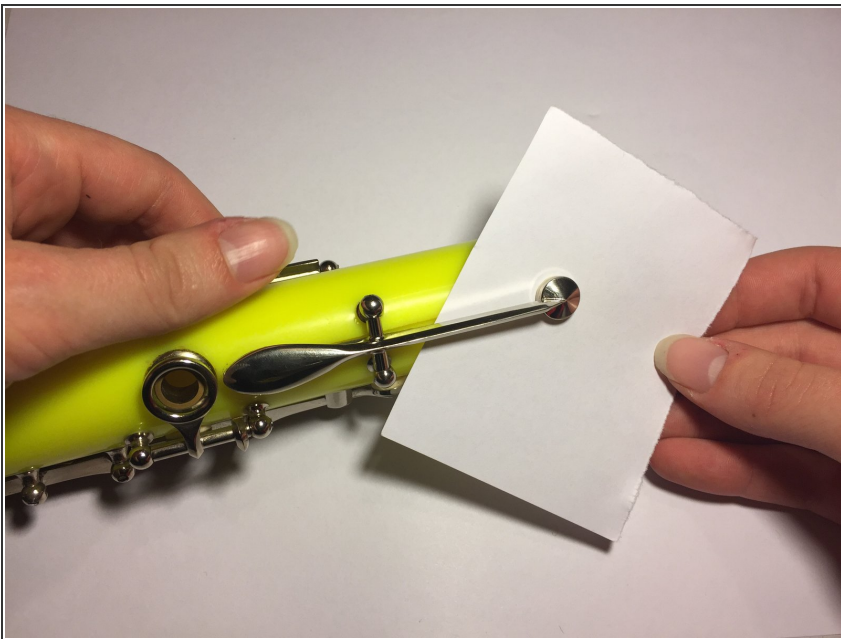

- Place a small piece of paper between the key and the instrument to avoid residual glue binding the key to the instrument
- Let the instrument sit out for a few minutes to let the glue fully dry