



HTC Vive Head Strap Replacement

How to replace the head strap on an HTC Vive.

Written By: Adam O'Camb



INTRODUCTION

Use this guide to replace the head strap on an HTC Vive.



PARTS:

- [HTC Vive Head Strap](#) (1)
-

Step 1 — Release the upper head strap



 Be sure to power down and disconnect your Vive before beginning.

- Pull the hook-and-loop (Velcro) closure at the top of the head strap apart to release the top of the head strap.

Step 2 — Remove the upper head strap



- Slide the top part of the head strap through its metal loop on the headset to remove it.

Step 3 — Remove the right side of the head strap



- Pull the hook-and-loop closure at the right side of the head strap apart to release the right side of the head strap.
- Slide the right side of the head strap through its metal loop to remove it.

Step 4 — Remove the left side of the head strap



- Pull the hook-and-loop closure at the left side of the head strap apart to release the left side of the head strap.
- Slide the left side of the head strap through its metal loop to remove it.

Step 5 — Remove the head strap



- Slide the head strap along the cable, away from the Vive.
- When the head strap comes to the end of the cable, gently slide it over the plugs and remove it.

To reassemble your device, follow the above steps in reverse order.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Check out our [Answers community](#) for troubleshooting help.