




Shark Rocket HV381 LED Replacement

How to replace the broken LED lights on the Shark Rocket HV381.

Written By: Dandre Porter

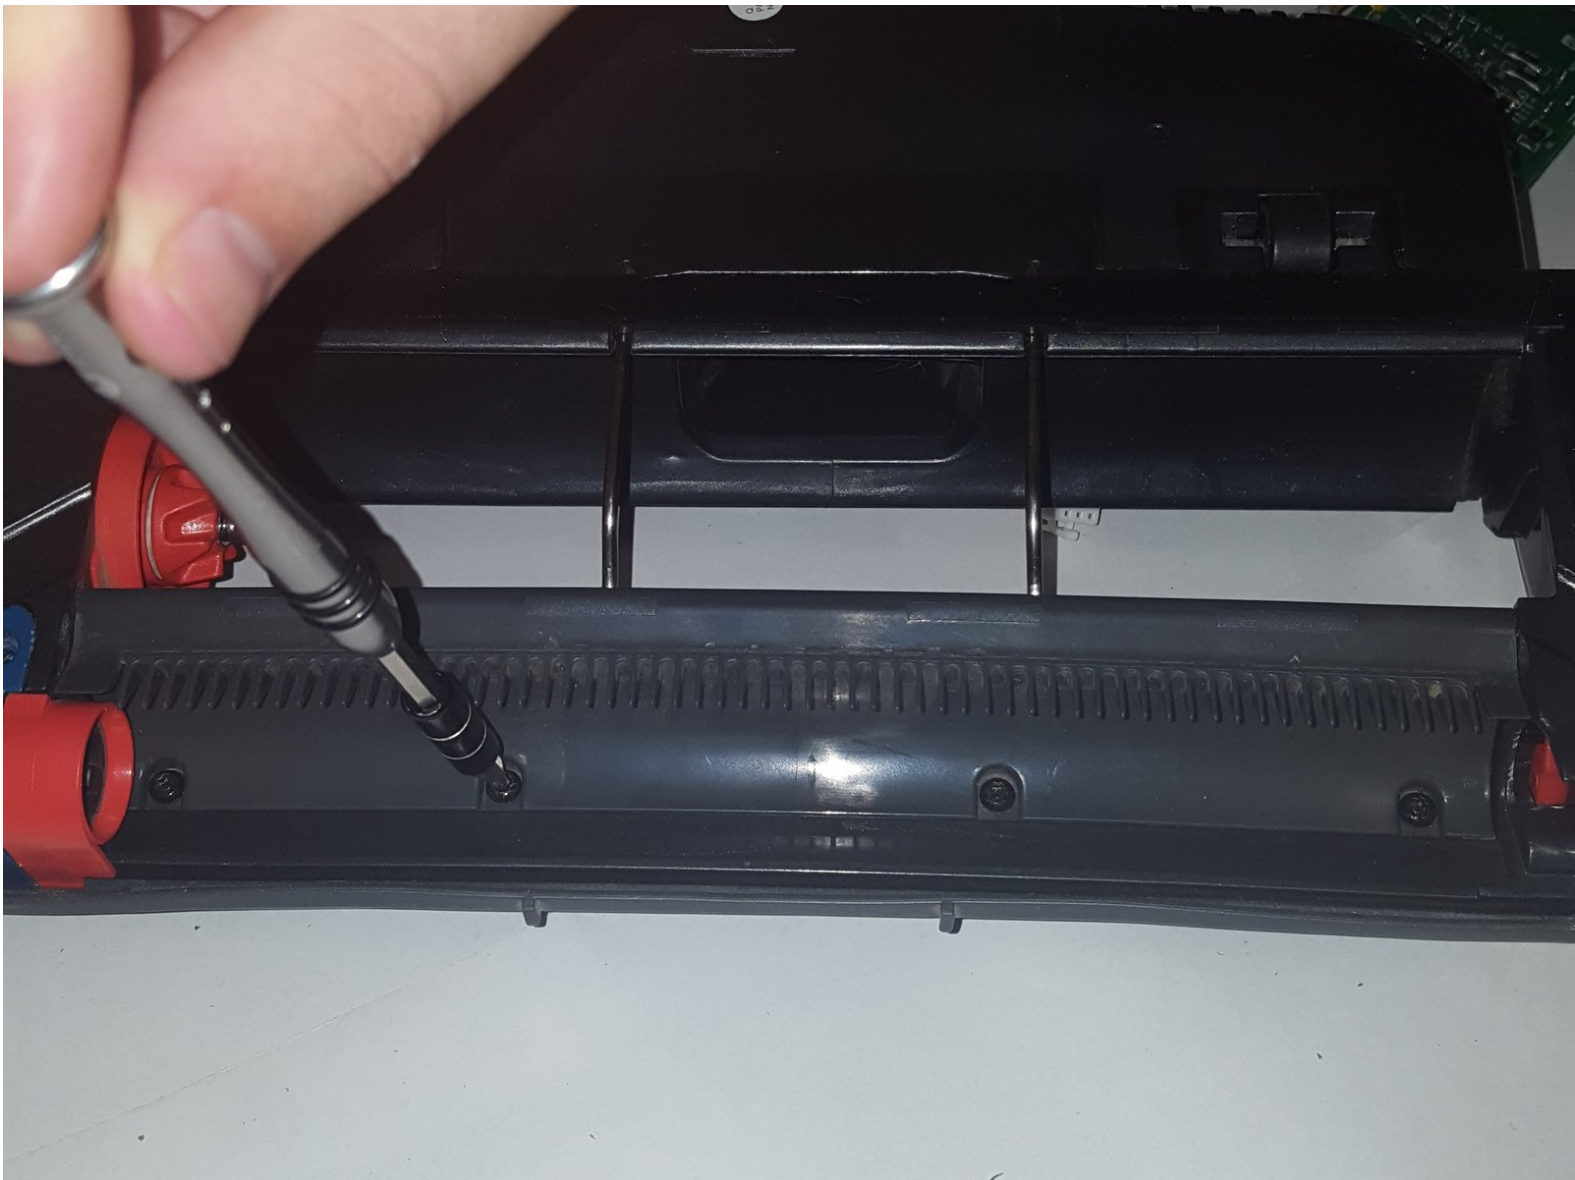

INTRODUCTION

This is a step by step guide to replacing busted LED lights on the Shark Rocket HV381.



TOOLS:

- [T15 Torx Screwdriver](#) (1)
 - [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
-

Step 1 — Roller




- On the right-bottom of the body, pull down the black switch. You will hear an audible click when you detach the body from the vacuum head.

Step 2



- Laying the vacuum head on the its right side, push the orange "Eject Roller" switch down. The Roller can now be removed with ease.

Step 3 — LED

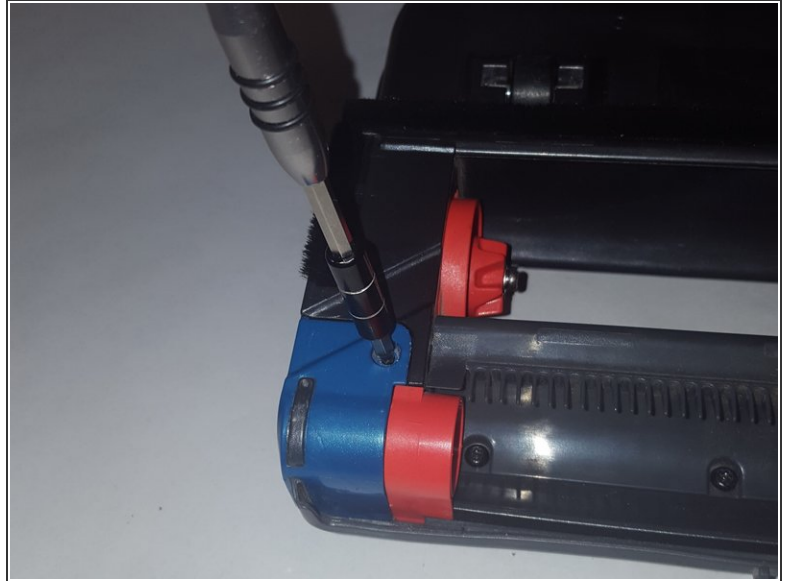




- On the back of the vacuum head, located near the bottom, should be a row of screws. Using the T15 Screwdriver, remove all the screws on the bottom and the sides.

Step 4




- On the top side of the vacuum head, where the LED is located, use the Small Flathead screwdriver to pry open the cover. There should be no resistance.

Step 5

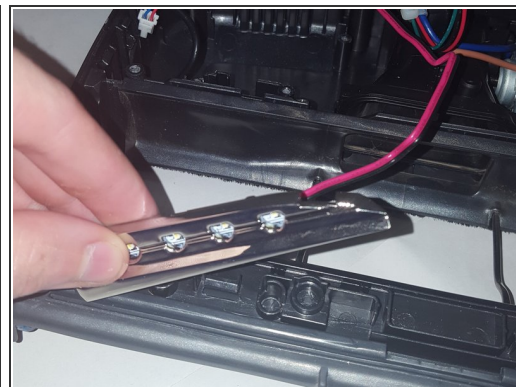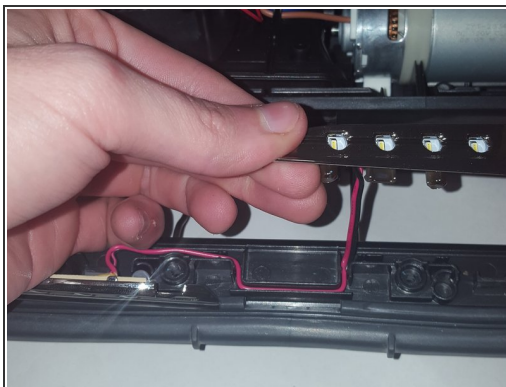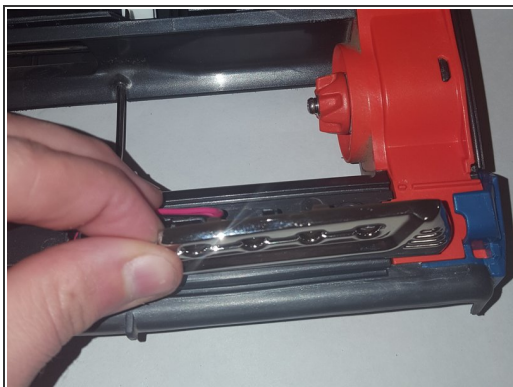

- Picking the LED from the side, pull upwards to unwind the wires from their tracks.

 Make sure that you are gentle because the wires are very fragile. One strong pull could easily snap them from the LED.

To reassemble your device, follow these instructions in reverse order.