 




# Hoover Windtunnel Air Steerable Upright Wheel Replacement

Replacement of rear wheels for Hoover.

Written By: Wyatt Cornelison

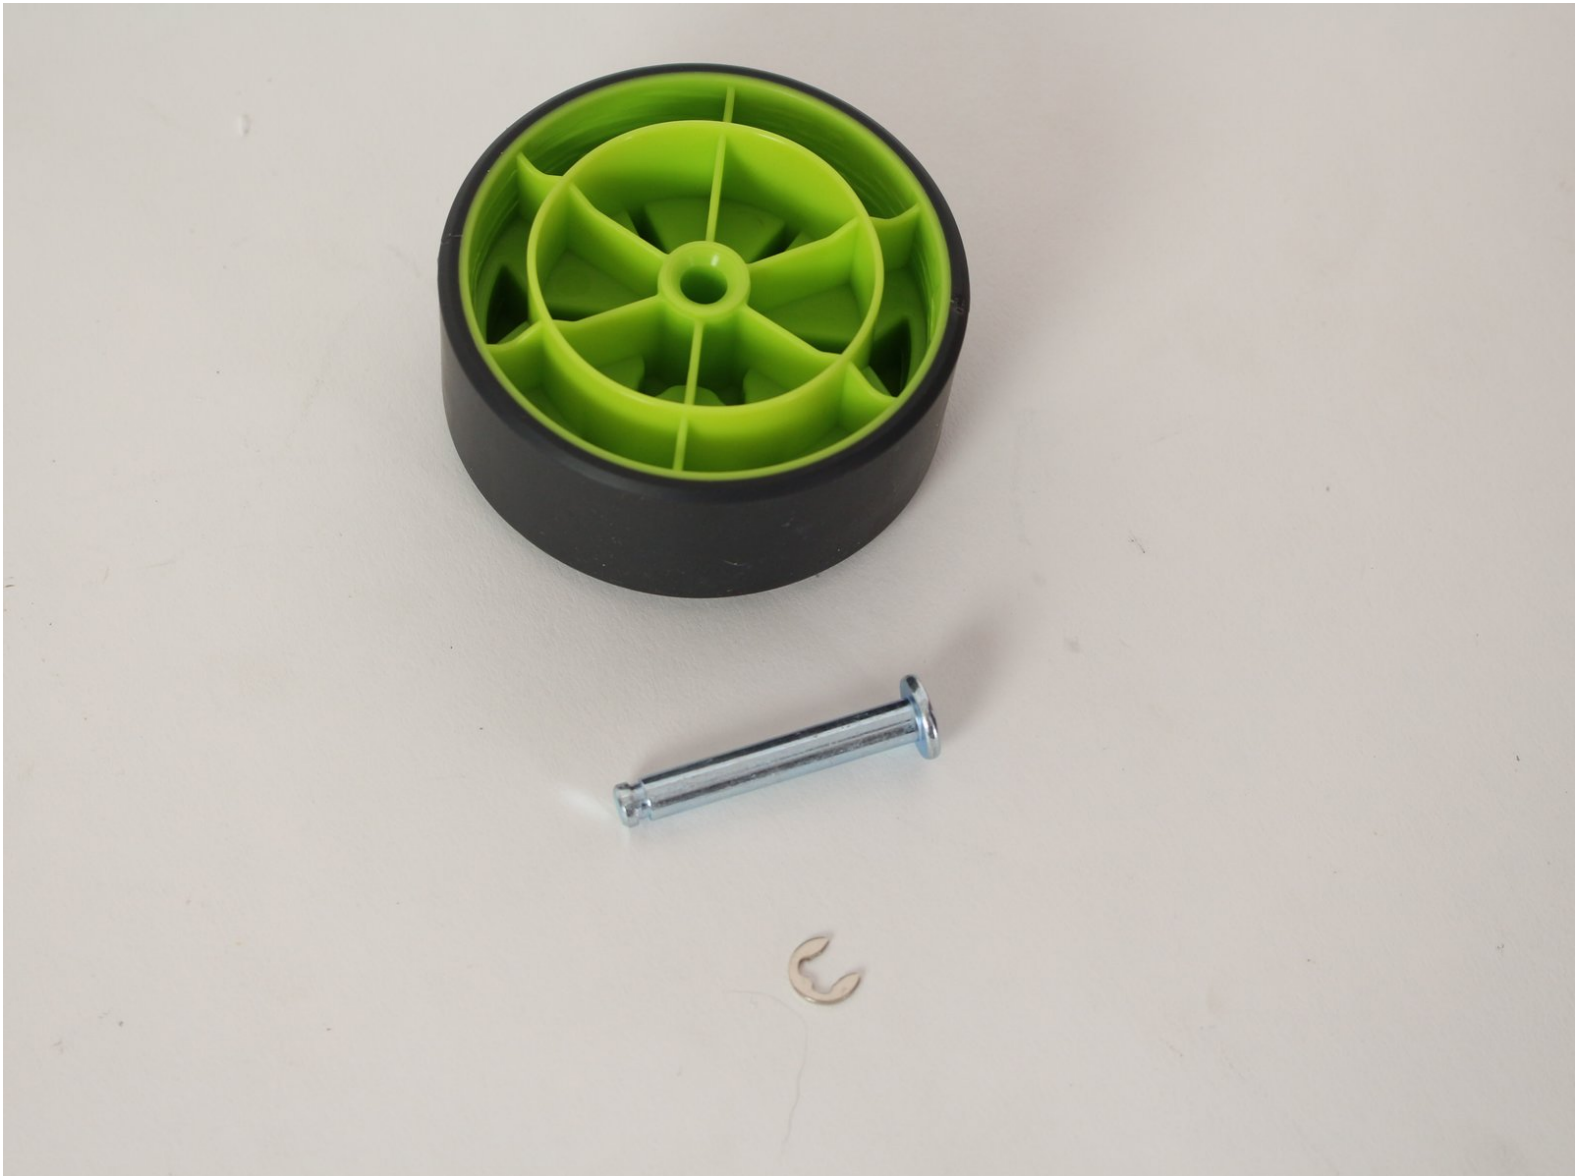

## INTRODUCTION

This guide will demonstrate proper removal of old or broken wheels and replacement with new wheels



### TOOLS:

- [Large Needle Nose Pliers](#) (1)



### PARTS:

 
 
- [Hoover rear wheel part no. #38522077](#)  
(1)

## Step 1 — Wheel



- Lay the vacuum flat on the ground, then flip it over 180 degrees so that you can see the inside of the wheel.

## Step 2

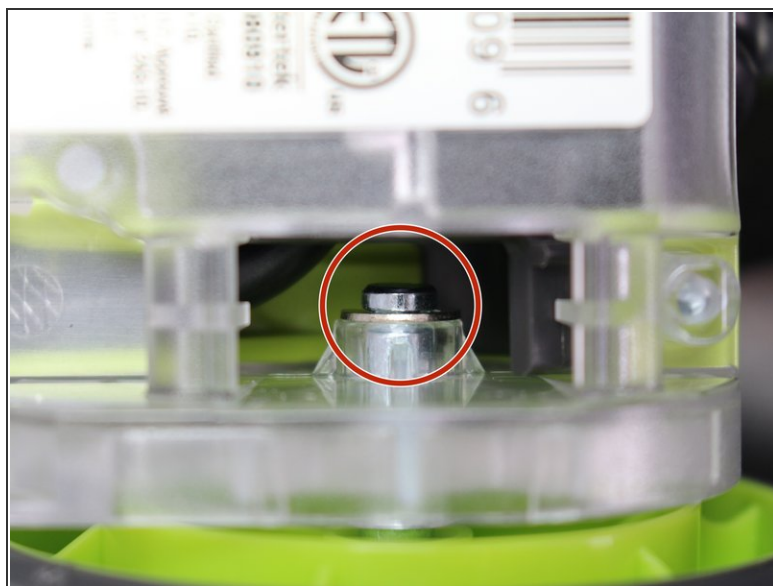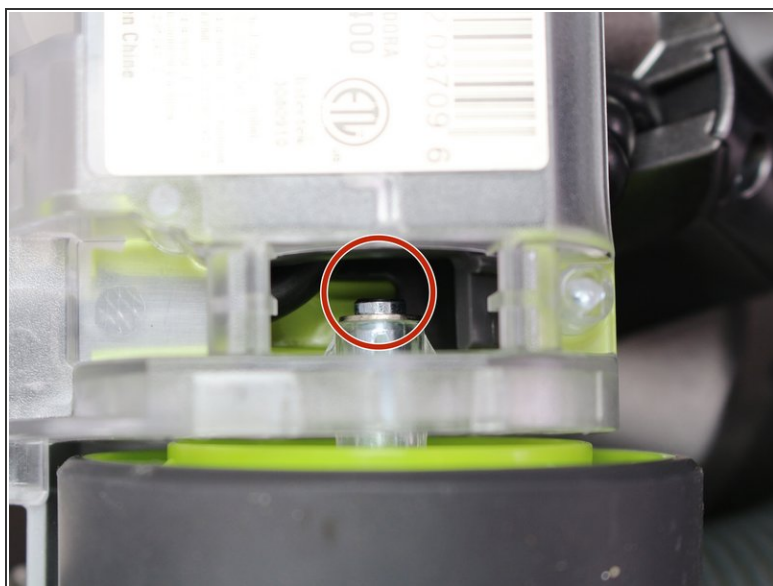


- Locate the small metal pin and bolt holding the wheel in place.

### Step 3



 - Take the needle nose pliers and stick them in the rectangular hole.
- With the pliers, firmly grasp the metal pin that holds the bolt for the wheel in place.
- Slide the pin off the bolt by pushing the pliers forward.
- Carefully remove the pin from the rectangular hole and keep it in a safe place.

### Step 4

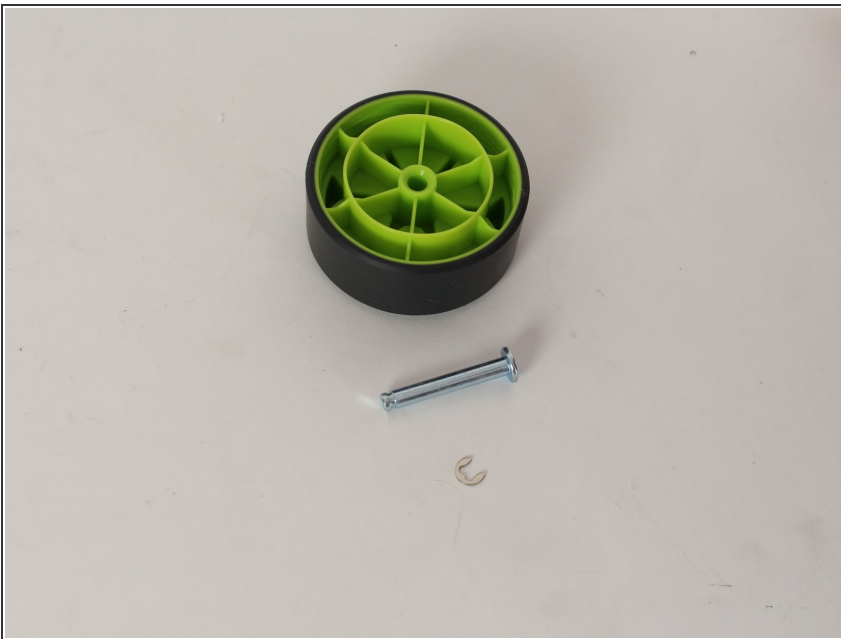

- Now, remove the wheel by pulling it away from the vacuum.
- The bolt will come out with the wheel since the pin is gone.