



# Hoover Windtunnel Air Steerable Upright Belt Replacement

Remove the bottom plate of the vacuum head and replace the belt

Written By: Sangmin Jung



## INTRODUCTION

Damaged belt may be the reason for the vacuum not picking up debris properly. This guide will show you how to open the bottom plate of the machine and replace the belt underneath.



### TOOLS:

- [Phillips #3 Screwdriver](#) (1)



### PARTS:

- [Hoover Belt #562535001](#) (1)

## Step 1 — Belt



⚠ Unplug power cord before you begin.

- Remove the 4 phillips 3/4" screws.

## Step 2




- Lift off the plate.

## Step 3



- Separate the belt from the brush roll.

## Step 4

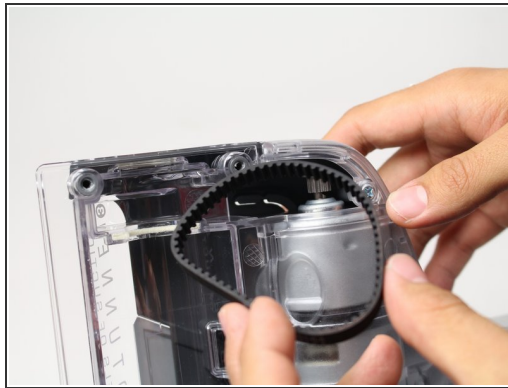

- Remove the belt from the gear.

To reassemble your device, follow these steps in reverse order.