



Xbox One Elite Controller (Model 1698)

Thumbstick Replacement

The Xbox One Elite Wireless Controller has...

Written By: Cara



INTRODUCTION

The Xbox One Elite Wireless Controller has easily removable thumbsticks. The controller comes with three interchangeable sets of two thumbsticks: standard, tall, and domed. If your controller's thumbsticks get stuck, there may be residue underneath them. Here are instructions to help you remove and replace your thumbsticks.

TOOLS:

Fingers (1)

Step 1 — Thumbsticks



- Remove each thumbstick by grabbing the knob and pulling up on it

To reassemble your device, follow these instructions in reverse order.