 




BenQ HT1075 Projector Lamp Replacement

This guide demonstrates how to properly replace the projector's lamp.

Written By: Gabriela Remulla

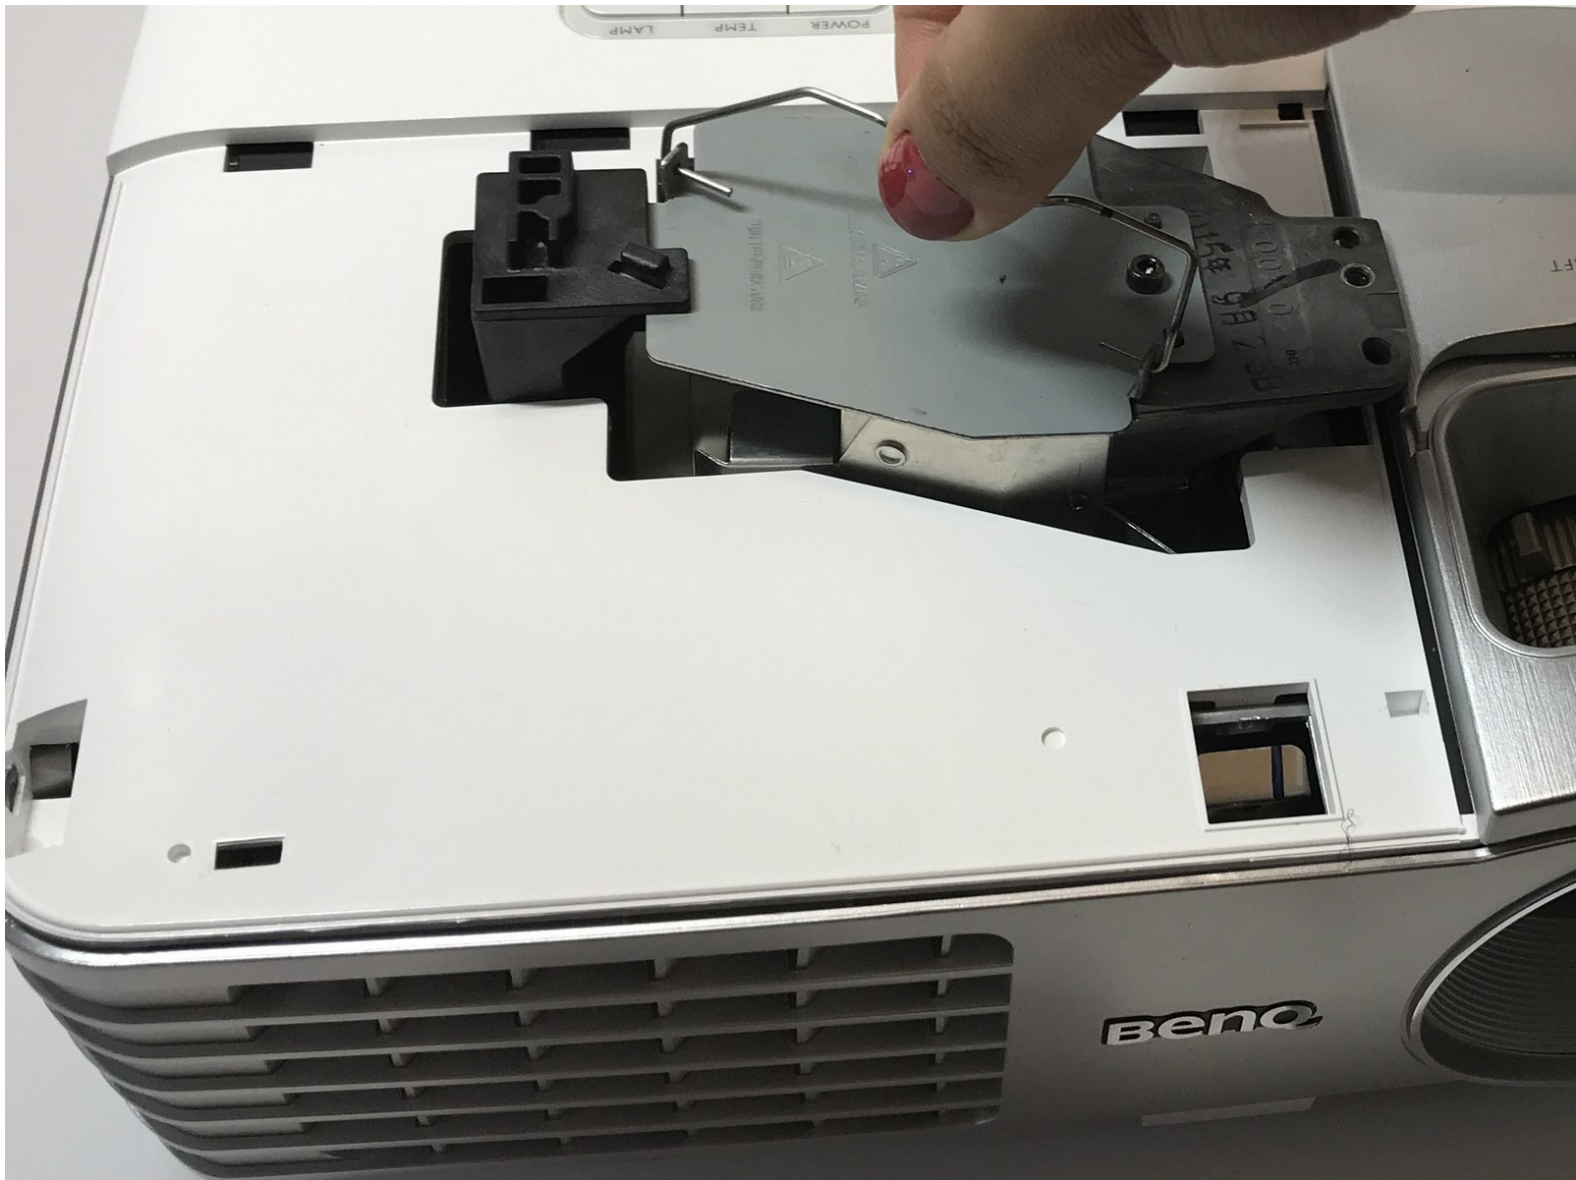

INTRODUCTION

The projector's lamp is key to maintaining optimal image quality, and its periodic replacement is one of the most common tasks associated with owning a projector. All this replacement needs is a single screwdriver and about 5 minutes of your time.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Lamp



 
- Loosen the 2.5 mm Phillips #1 screw that holds the top assembly in place using a Philips #1 (PH1) screwdriver. This will enable you to lift and slide off the top cover.
- Fully remove the top cover in order to get to the lamp housing.

Step 2



- Carefully peel off the adhesive film covering the lamp housing.

Step 3

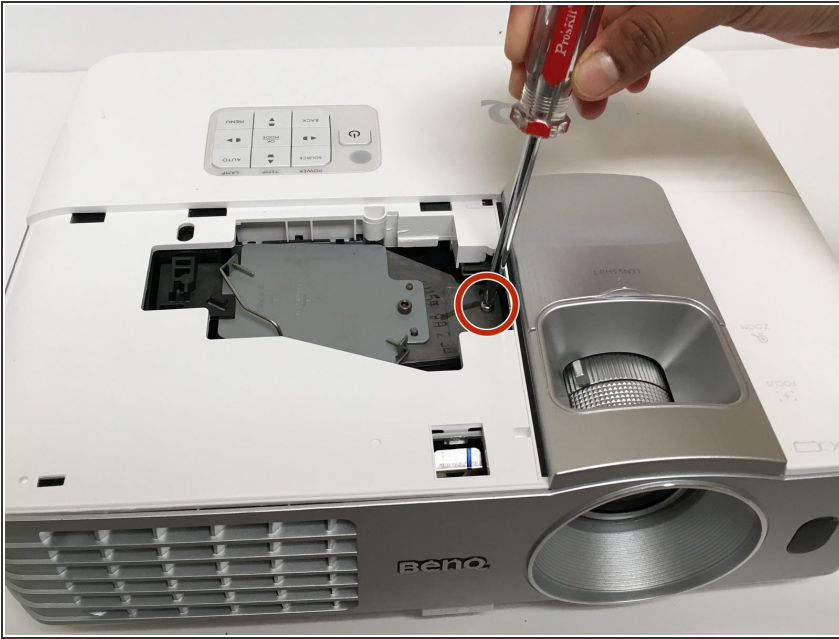

- Using a Phillips #1 (PH1) screwdriver, loosen and remove the single 2.5 mm Phillips #1 screw that secures the lamp housing to the projector.

Step 4



- Remove the lamp from the projector by pulling on the lamp handle.
- Apply more force on the side opposite of the newly removed screw as you pull the lamp out.

To reassemble your device, follow these instructions in reverse order.