



# Eureka SuctionSeal 2.0 Pet Filters Replacement

How to replace the exhaust filter and dust cup filter in the Eureka SuctionSeal 2.0 Pet vacuum.

Written By: Anna Snyder



## INTRODUCTION

This guide walks you through removing the exhaust and dust cup filters in the Eureka SuctionSeal 2.0 Pet vacuum. Refer to this guide if you notice a bad smell coming from your vacuum or you are experiencing poor suction.

## Step 1 — Dust Cup



- Place the device upright with the brush roller closest to you.
- Pull up on the latch at the top of the dust cup.
- Tilt the top of the dust cup forward and pull towards yourself, removing the container from the device.

## Step 2 — Filters



- Locate the gray exhaust filter cover at the top of the vacuum's base.
- Grip the two tabs in the middle of the filter cover and rotate it counter-clockwise.
- Lift the cover away from the vacuum.

## Step 3



- Grab the tab on the exhaust filter.
- Lift the filter straight up from the vacuum's base.



## Step 4



- Locate the lid at the top of the previously removed dust cup.
- Lift the latch and lay the cover back.

## Step 5



- Pull up on the tag and remove the filter.

To reassemble your device, follow these instructions in reverse order.