



Handspring Visor Deluxe PDA Back Cover Replacement

How to attach the back cover and motherboard to the front screen.

Written By: Robert



INTRODUCTION

Use this guide to separate the back cover from the front.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Outside cover and stylus




- Remove the outer screen cover by releasing the top clip from the main body of the device.

Step 2




- Pull out the stylus from the top right corner of the device.

Step 3

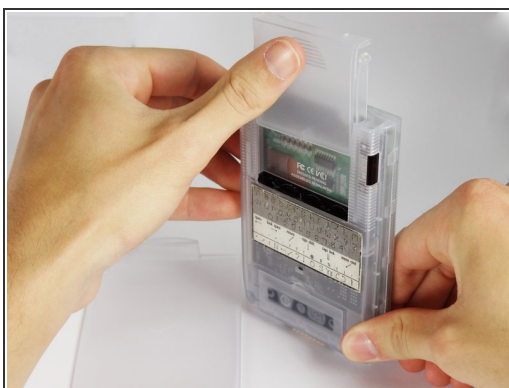


- Slide the memory cartridge cover up and off the device.

Step 4 — Batteries

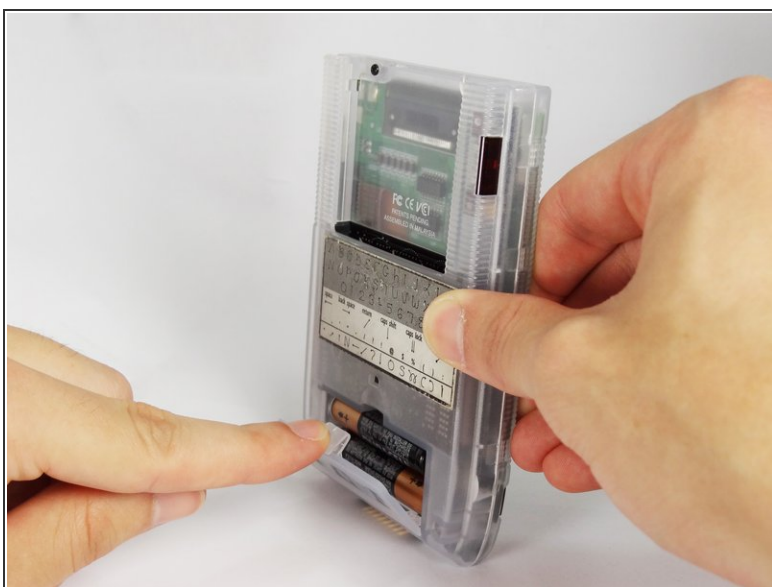


- Remove the battery cover by releasing the clip from the main body of the device.

Step 5

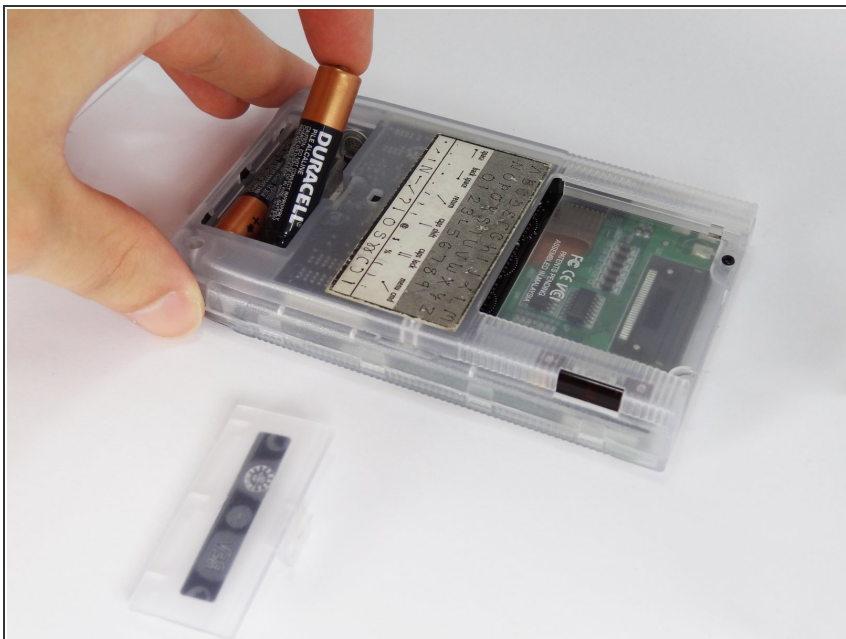


- Remove the batteries from the device.

Step 6 — Back Cover

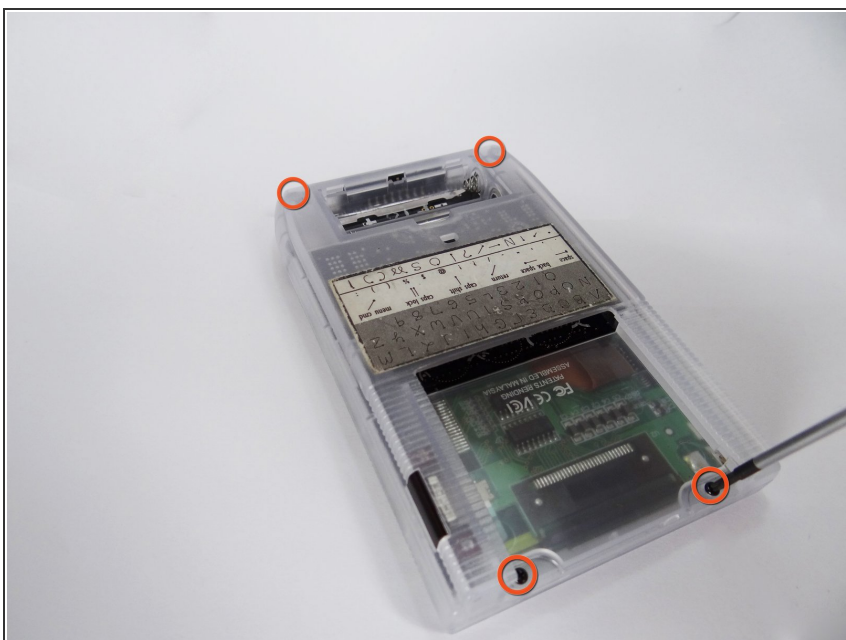

- Unscrew the four 2.94mm screws with a #00 Phillips screwdriver.
- ⓘ One end of the OEM stylus can unscrew and contains a mini #00 Phillips screwdriver.

Step 7

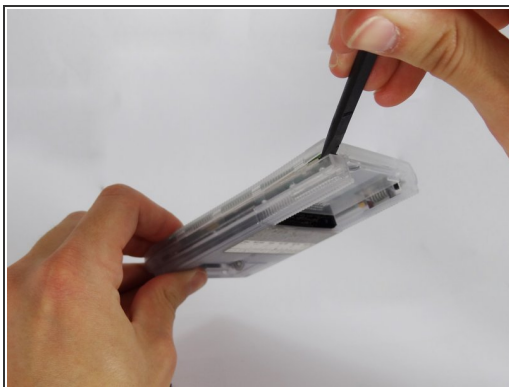

- Use the spudger to pry open the casing by applying pressure at 4 clips on both sides of the device.

⚠ Be careful while opening the casing as there is a flex strip connecting the two halves.

Step 8



- Disconnect the flex strip from the motherboard with tweezers.

To reassemble your device, follow these instructions in reverse order.