



Acer Aspire R7-371T-72CF Battery Replacement

Use this guide to replace the battery in your Acer Aspire R7-371T-72CF.

Written By: Dylan Meintser



INTRODUCTION

This guide will walk you through how to replace a dead or dying battery in your Acer Aspire R7-371T-72CF.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery




- Turn off your laptop and disconnect the power adapter.
- Locate and remove all 12 Phillips #00 6mm screws on the backside of the laptop.

Step 2




- Use a plastic opening tool to carefully remove the back panel.

Step 3

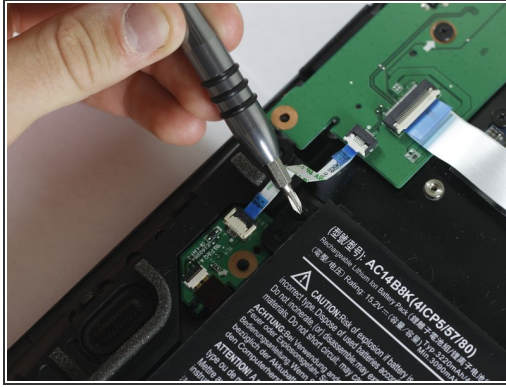

- Remove the Phillips #00 5mm securing screws using your screwdriver.

Step 4

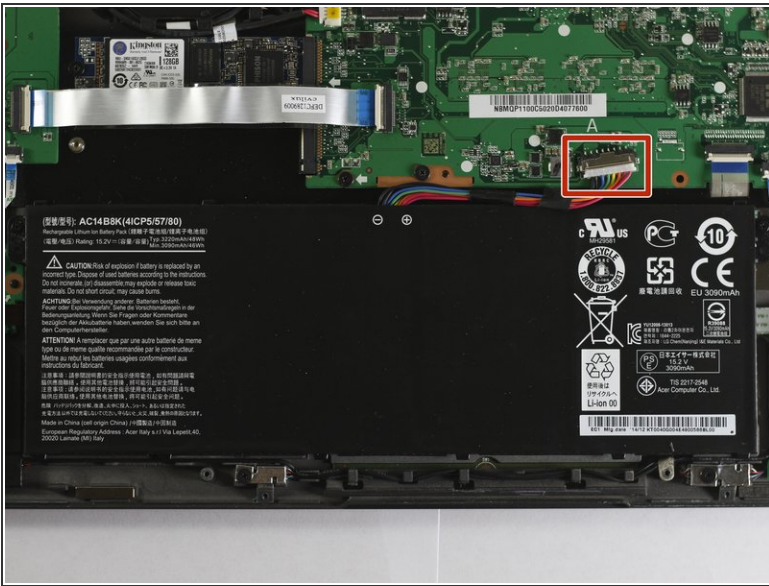

- Disconnect the battery from the motherboard by simply pulling the wires down towards the battery until the adapter dislodges.

To reassemble your device, follow these instructions in reverse order.