



# Acer Aspire R7-371T-72CF Hard Drive Replacement

Use this guide to replace the hard drive in your Acer Aspire R7-371T-72CF.

Written By: Dylan Meintser



---

## INTRODUCTION

This guide will show you how to replace the hard drive in your Acer Aspire R7-371T-72CF.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Hard Drive



- Turn off your laptop and disconnect the power adapter.
- Locate and remove all 12 Phillips #00 6mm screws on the backside of the laptop.


## Step 2



- Using your prying tool, carefully remove the back panel.




### Step 3

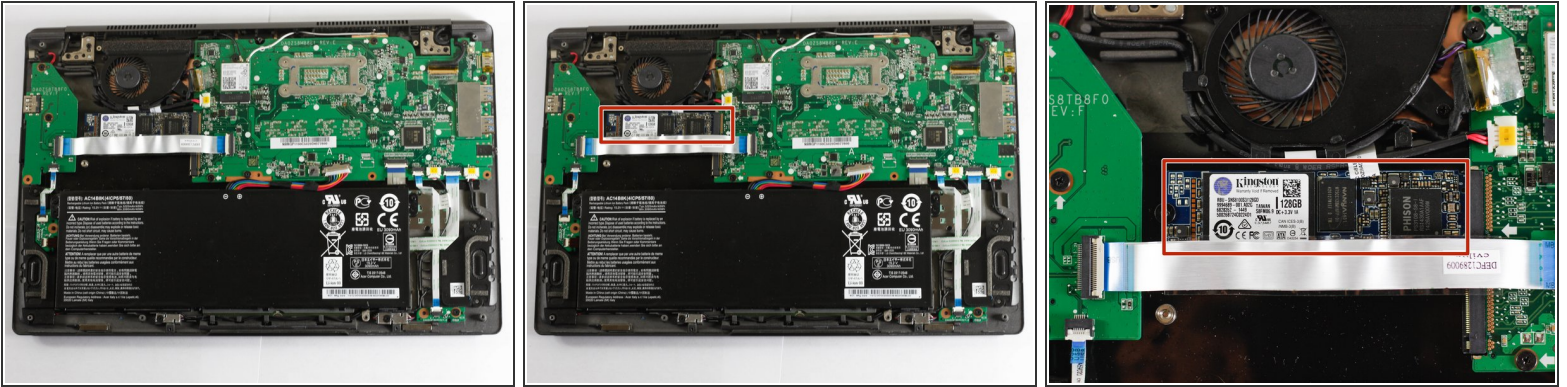

- Locate the hard drive, as shown to the left. This can be identified by its location underneath the cooling fan and above the ribbon cable (the long horizontal white strip).

### Step 4

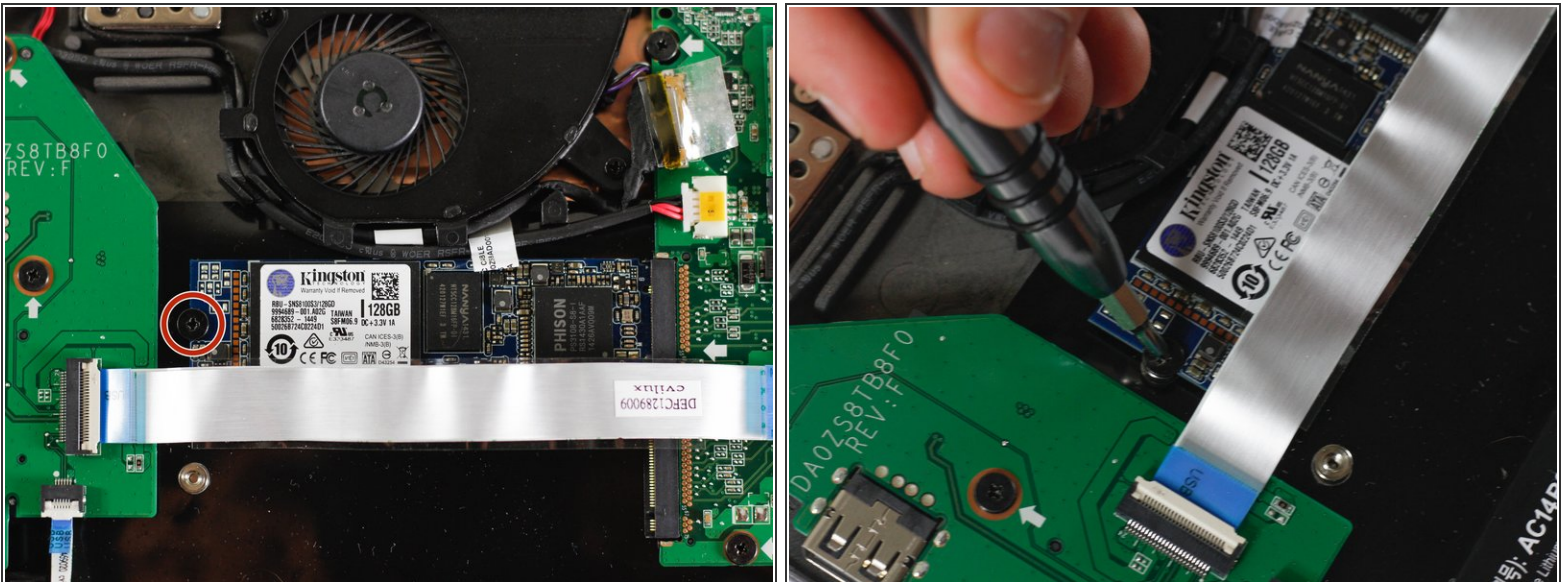

- Remove the Phillips #00 4mm securing screw using your screwdriver.

## Step 5



- Remove the hard drive by pulling towards the side that was secured by the screw.

To reassemble your device, follow these instructions in reverse order.