



# Sony PS-LX300USB Dust Cover Replacement

If your dust cover for your Sony PS-LX300USB turntable has fallen off of or is broken, you can repair it in just a few quick steps.

Written By: Sean



---

## INTRODUCTION

The dust cover is one of the key components of a PS-LX300USB Turntable. The dustcover keeps all of the fragile components safe from dust and other potential hazards. The repair is relatively easy and can be important in maintaining your turn table.



### TOOLS:


- [Flathead Screwdriver](#) (1)
-

## Step 1 — Dust Cover



- Turn the turntable around so that the back side is visible.


## Step 2

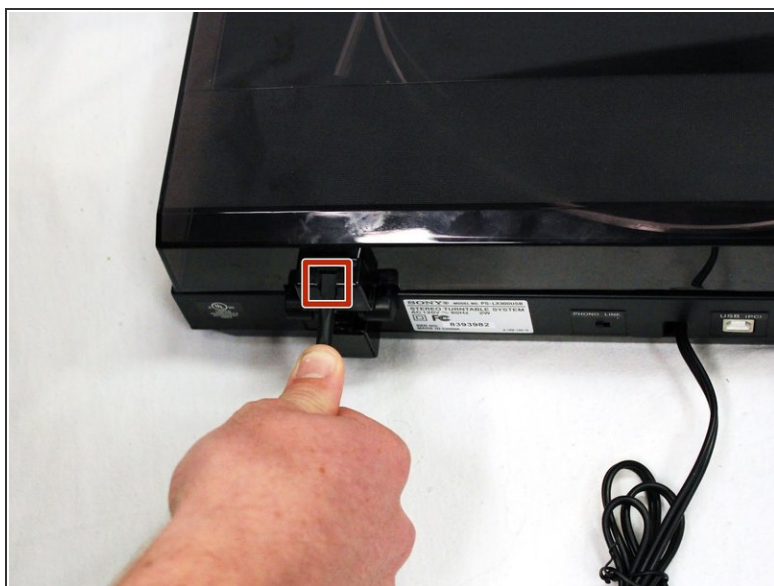

- Begin by releasing the left latch. Apply downward pressure to the square, black button using a flathead screw driver.
- Once the latch is released, lift upward.
- Use your left hand to hold the left side of the dust cover above the latch. This ensures the latch does not reconnect.



### Step 3

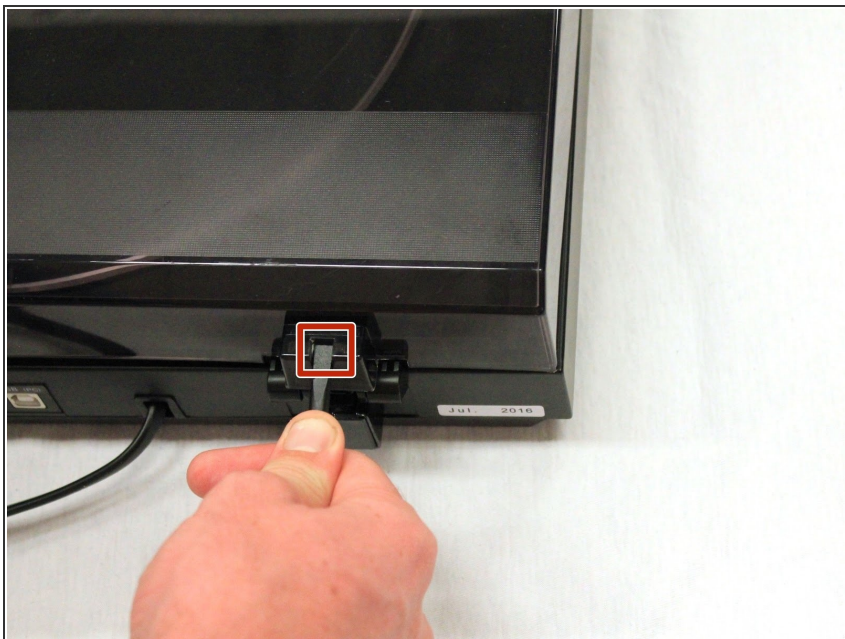

- Use a flat head screw driver to apply pressure to the black square button on the right side.

### Step 4



- Once both the right and left buttons are released, pull the dust cover upwards.
- The dust cover is now disconnected and ready for replacement.

To reassemble your device, follow these instructions in reverse order.