




# Zebra ZP 505 Peel and Present System Replacement

Follow the steps of this guide to replace the ZP 505's peel and present system.

Written By: Brian Jagger

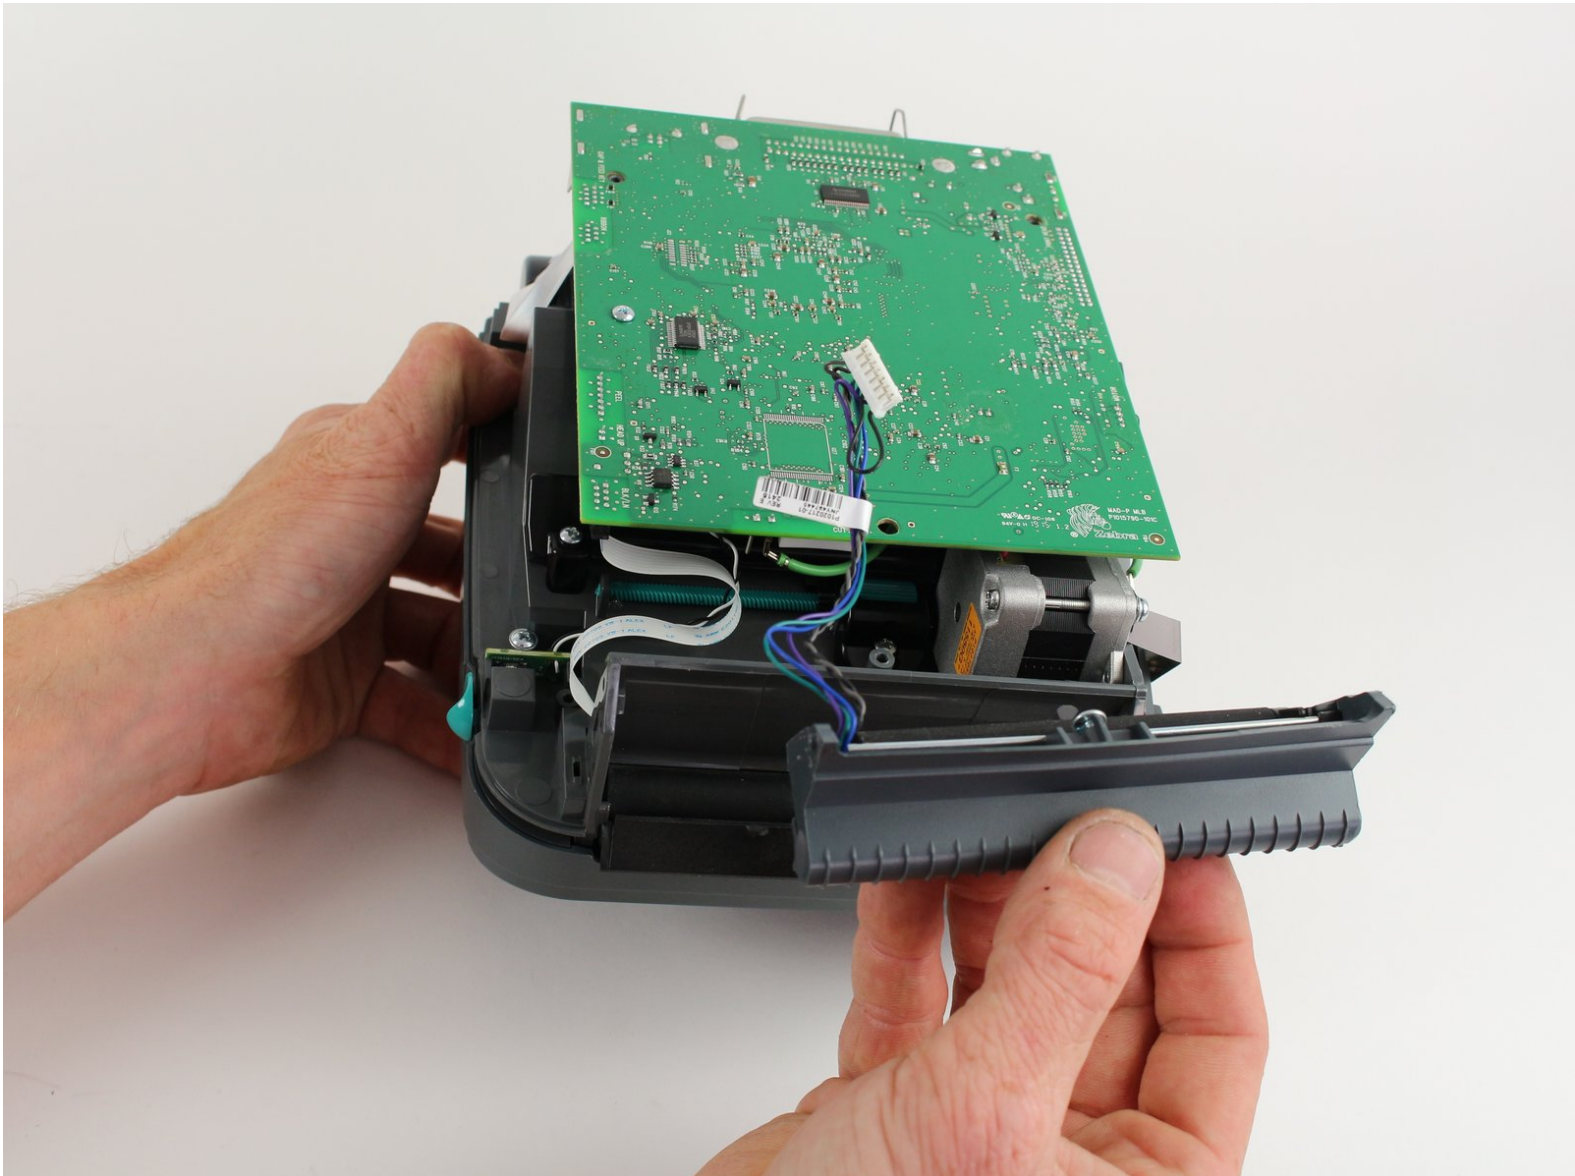

---

## INTRODUCTION

Use the guide to safely replace the peel and present system with the help of a phillips head screwdriver set.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
  - [Metal Spudger](#) (1)
-

## Step 1 — Peel and Present System




- Orient the printer so that the bottom is facing up.
- Remove the three P1 9mm screws located on the bottom of the printer and remove the lower unit.

## Step 2




- Remove the P0 9mm screw.
- Proceed to remove the cover.

### Step 3

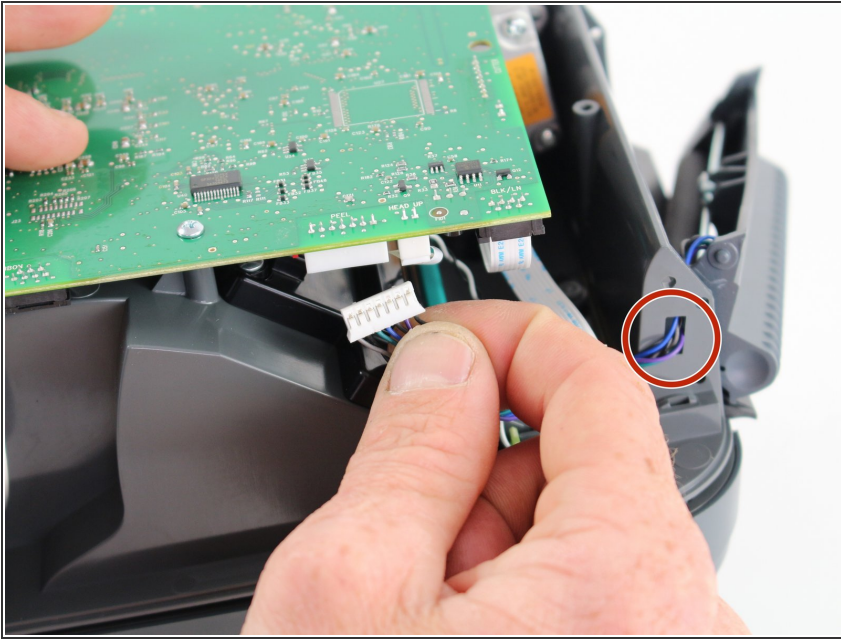

- Disconnect the harness.
- Thread the harness through the hole on the right hand side.


### Step 4

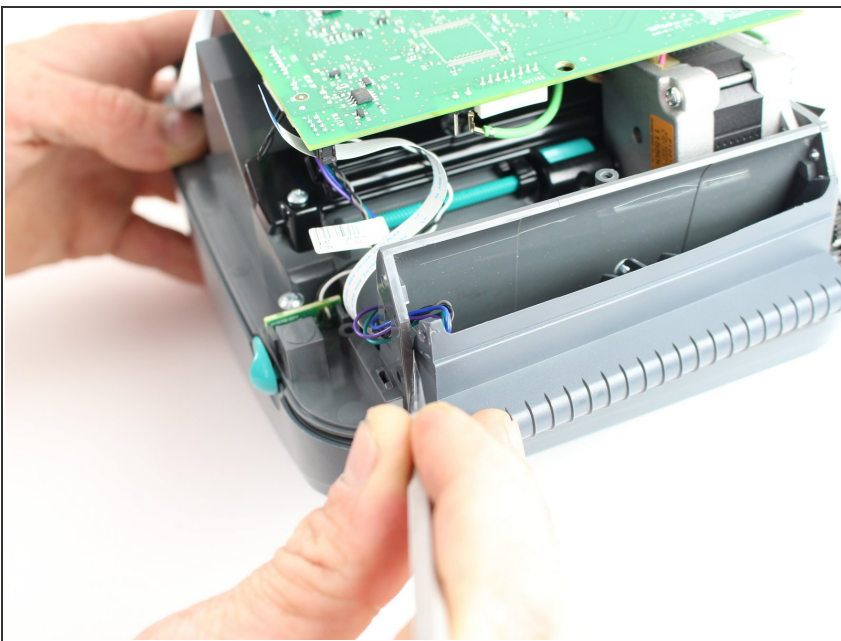

- Remove the peel and present system by utilizing a metal spudger.



## Step 5

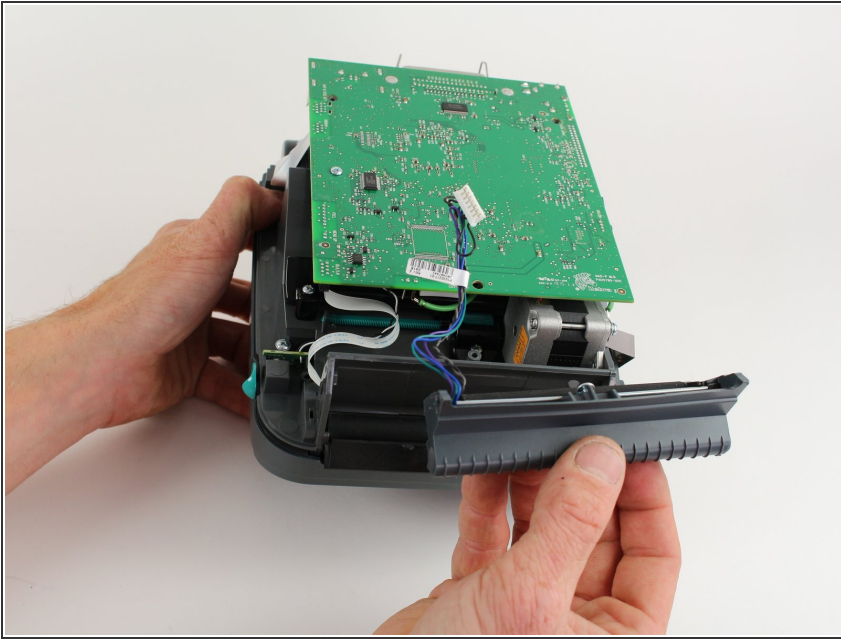

- Remove the peel and present system.

To reassemble your device, follow these instructions in reverse order.