




# Zebra ZP 505 Printhead Replacement

Follow these steps to replace the ZP 505's printhead.

Written By: Brian Jagger

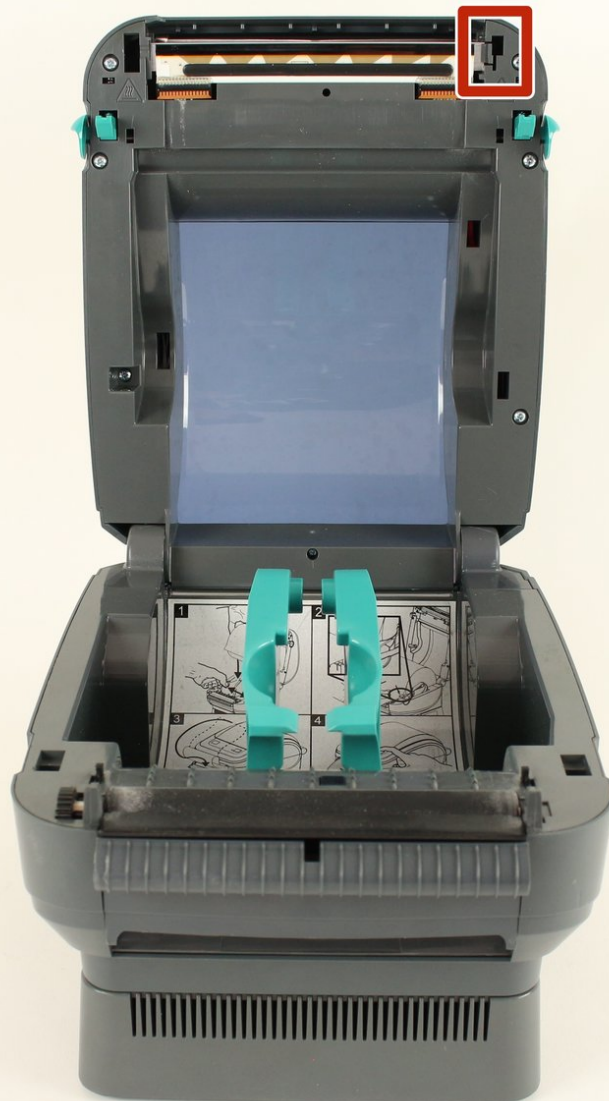

---

## INTRODUCTION


Use the following guide to remove the printhead safely without the use of tools.



### TOOLS:

- [Spudger](#) (1)
-

## Step 1 — Printhead

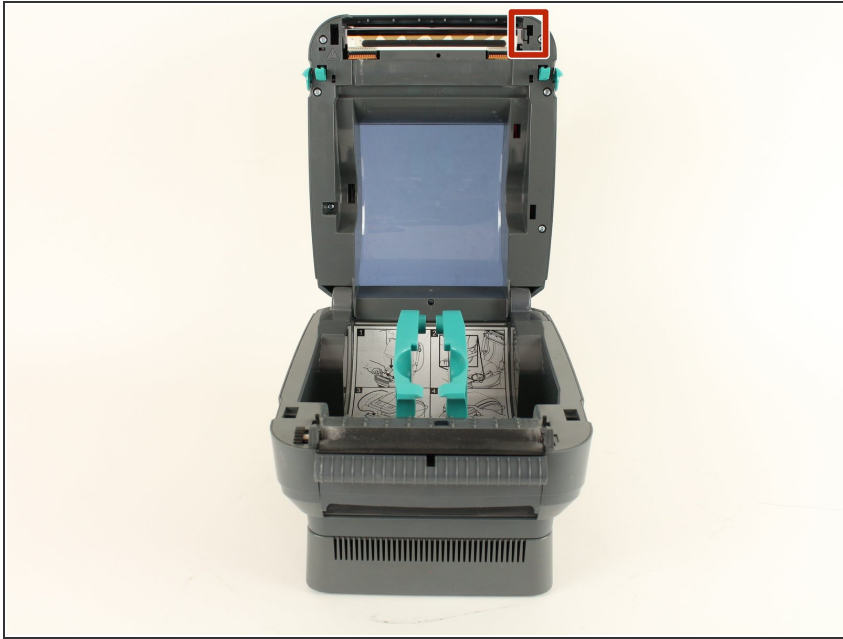

- Locate a tab securing the printhead on the right hand side of the printer.

## Step 2



- Push the tab to the right. The thermal head should release outward.

### Step 3



- Hold the thermal head and pull out gently.

### Step 4



- Disconnect the two (tan) harnesses located on opposite sides of the thermal head and remove the printhead.

To reassemble your device, follow these instructions in reverse order.