



Acer Chromebook C710-2856 Hard Drive Replacement

Replacing the hard drive of the chromebook.

Written By: Josh Rowell



INTRODUCTION

Once your hard drive fails, it's pretty simple to replace! Just follow this guide to replace the hard drive in your device.

TOOLS:


- [Phillips #000 Screwdriver](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Removing Back Cover



- Remove the one 4.3mm Phillips #1 screw holding the back cover on.

Step 2 — Unscrewing the Drive

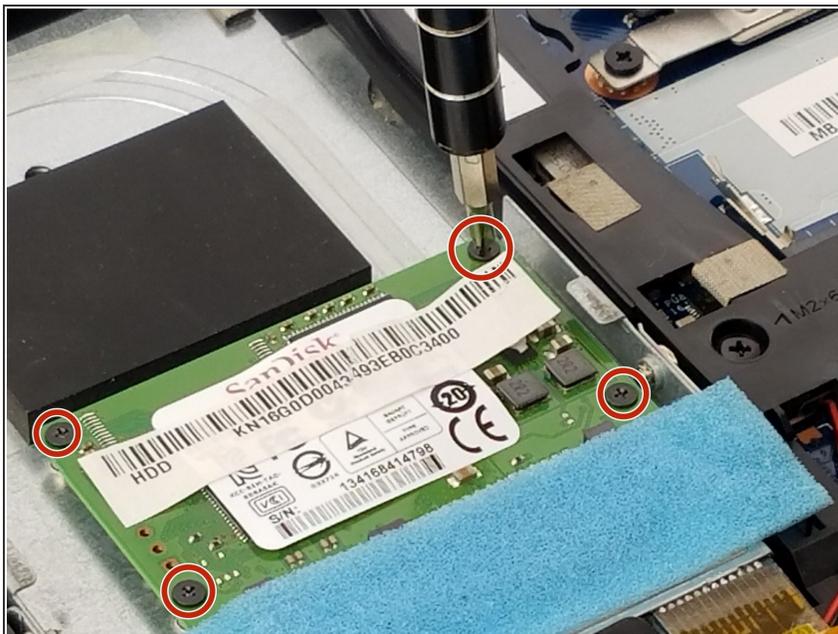

- Remove the four 2.8mm Phillips #000 screws holding the drive onto the case.

Step 3 — Uncovering the Pins



- Gently pull the foam protector away from the pin connectors

Step 4 — Disconnecting the Drive



- Gently pull the drive up and away to disconnect the hard drive from its seat

Step 5 — Removed Drive and Pieces



- Fully removed hard drive, screws, and foam cover

To reassemble your device, follow these instructions in reverse order.