



3DR Solo Propeller Disassembly

This guide will show how to remove the propellers on top of the device.

Written By: Lauren Hays



INTRODUCTION

This guide shows how to remove the propellers on top of the drone.

Step 1 — Propeller



- Grip the arm, which is located underneath the propeller, with one hand, and with your dominant hand grip the center of the propeller.

Step 2



- Twist the propeller from the locked to unlocked position as indicated by the images of the lock.
- ⓘ You will need to twist in this direction for 2-3 full rotations before the propeller will detach.

Step 3



- Lift the propeller off the motor.
- ⓘ To remove the silver-top propellers, repeat these steps, turning the propellers in the opposite direction of the black-top propellers.

To reassemble your device, follow these instructions in reverse order.