



Dyson DC56 Battery Replacement

This guide will show you steps to remove the battery from the Dyson DC56.

Written By: Vu Nguyen



INTRODUCTION

The battery is what makes this vacuum handheld and portable. It can keep the vacuum operational for approximately 3.5 hours.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)

PARTS:

- [Dyson DC56 Replacement Battery](#) (1)

Step 1 — Battery



- Make sure the vacuum is unplugged from charger.

 **Warning:** Avoid pressing red trigger because the vacuum will turn on the device and begin suction.

Step 2



- Locate the purple button at the top of the device.

Step 3



- Separate the device with the purple button.

Step 4



- Take out the filter.

Step 5



- Locate and remove the 10mm Phillips head screw using a Phillips #1 screw driver.

Step 6 — Battery screw 2



- Locate and remove #000 25mm phillips screw on the reverse side of the vacuum

Step 7



- Pull the battery pack down and away from the main body and remove it from the device.

To reassemble your device, follow these instructions in reverse order.