



# Dyson DC56 Motor Replacement

This will display how to remove and replace the Dyson digital motor of the DC56.

Written By: John Czerkowski



---

## INTRODUCTION

The motor is the most important part of the DC56. If the vacuum stops working completely you could need to replace the motor.

---


### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery



- Make sure the vacuum is unplugged from charger.

 **Warning:** Avoid pressing red trigger because the vacuum will turn on the device and begin suction.

## Step 2




- Locate the purple button at the top of the device.

### Step 3



- Separate the device with the purple button.

### Step 4

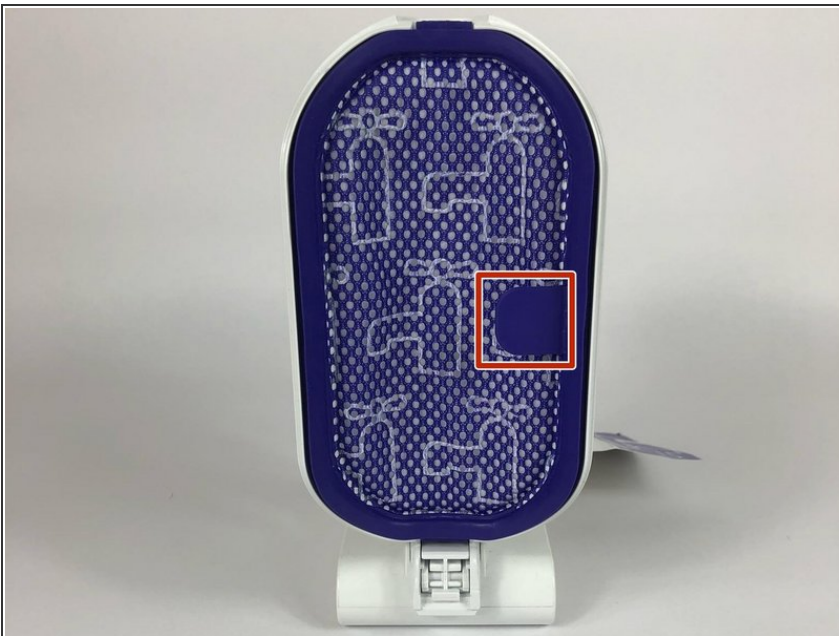

- Take out the filter.



## Step 5



- Locate and remove the 10mm Phillips head screw using a Phillips #1 screw driver.

## Step 6 — Battery screw 2



- Locate and remove #000 25mm phillips screw on the reverse side of the vacuum

## Step 7



- Pull the battery pack down and away from the main body and remove it from the device.

## Step 8 — Motor



- Take out the 10mm screw using a Phillips #1 screwdriver.

## Step 9



- Use a spudger to separate the back plate covering the motor.
- ⚠ Be careful when trying to remove the motor with a metal spudger. Be sure your battery is removed before trying to fully remove the motor.

## Step 10



- Use a flat spudger to loosen and remove the motor out of the vacuum.

To reassemble your device, follow these instructions in reverse order.