



Acer Chromebook C710-2833 Battery Replacement

The battery of the laptop dies over time. Replace the battery with this guide.

Written By: Nicholas Latorre



INTRODUCTION

The battery of the laptop dies over time. Replace the battery with this guide.



TOOLS:

- [Spudger](#) (1)
Optional



PARTS:

- [4400 mAh 6 Cell Lithium Ion Battery](#) (1)

Step 1 — Battery



- Flip the laptop over so the bottom is facing up.
- Locate the battery release slider.

Step 2



- Using the spudger or your finger, slide the battery release slider and hold in place as shown.
- ★ When reassembling, holding of the slider is not needed.

Step 3



- While holding the slider, pull out the old battery.
- ★ When reassembling, holding of the slider is not needed.

To reassemble your device, follow these instructions in reverse order.