



# Acer Aspire TimelineX 1830T-68U118 Hard Drive Replacement

Replace your laptop's hard drive to speed up its slow processing.

Written By: Brenna Waterbury



---

## INTRODUCTION

The hard drive is the storage location for the laptop's memory and processing, the data compartment. This guide offers step by step instructions to replace the hard drive.


---



### TOOLS:

- [Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-


## Step 1 — Hard Drive

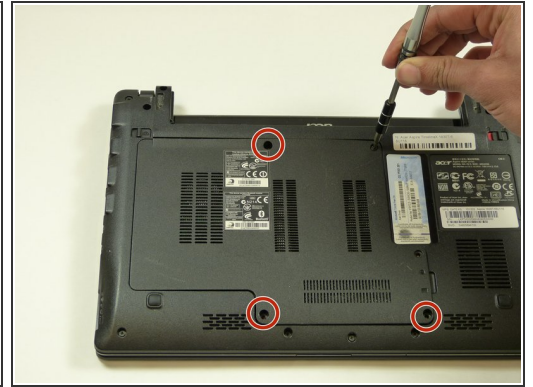

⚠ Remove the device's battery before beginning.



- Turn laptop so under side is facing up.
- Locate the hard drive door and unscrew the 5 screws using PH0 mm Phillips Head.

## Step 2

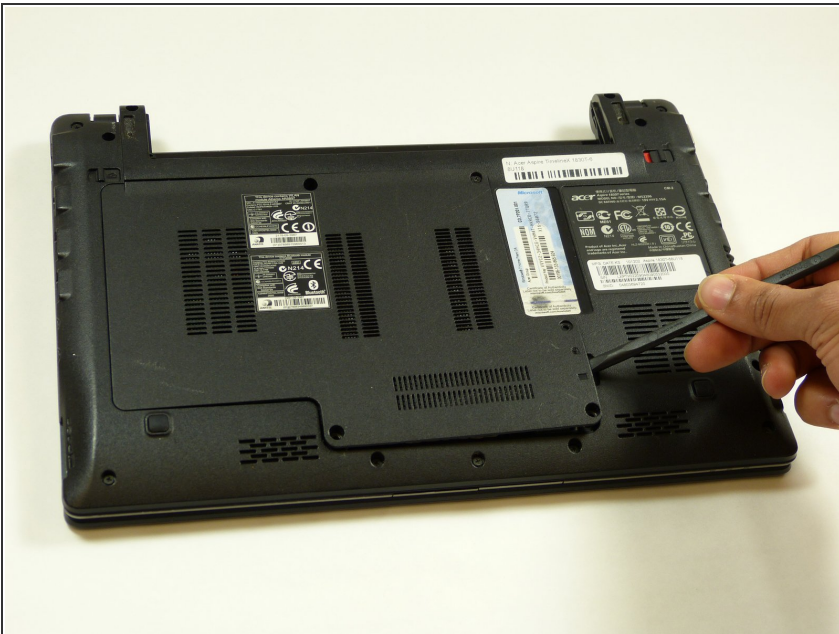

- Pry open hard drive cover using the Spudger tool.

## Step 3

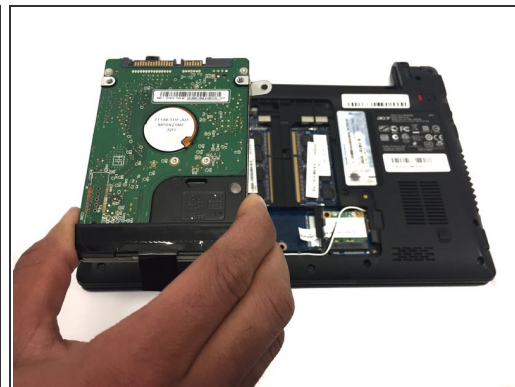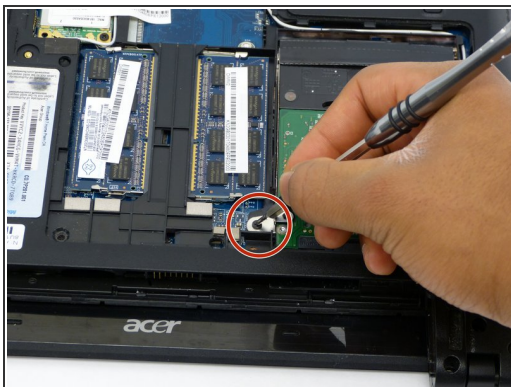

- Remove screw attached to the hard drive using the PH0 mm Phillips Head.
- The hard drive can now be removed from the device.

To reassemble your device, follow these instructions in reverse order.