



# Fugoo Style XL Fabric Case Replacement

The Fugoo Style has a fabric case that can...

Written By: James Gifford



## INTRODUCTION

The Fugoo Style has a fabric case that can be removed for cleaning, replacement, or to begin accessing the interior of the speaker.

## Step 1 — Fabric Case



- Using your hand, unscrew the large screws underneath the speaker.

## Step 2



- Using your hand, gently lift the large plastic tab secured to the rubber holding.
  - After lifting the tab, slide the speaker out of its case.

**⚠ Ensure the tab is lifted only slightly above the rubber holding. Bending the plastic tab too far could result in damage to the case.**

To reassemble your device, follow these instructions in reverse order.