



LG K7 T-Mobile Back Controls Replacement

The control buttons on the back of the smartphone are stuck depressed or are not responsive.
Replace the back controls to regain functionality.

Written By: Nam Pham



INTRODUCTION

Remove the battery before removing the back controls to avoid electric shock. Do not lose any screws or the middle button of the back controls.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Flip the LG K7 over so that the back of the phone is facing up.
- Locate the small notch on the bottom left side of the phone.

Step 2




- Insert a plastic opening tool into the notch and lift the back cover upward while holding the bottom portion of the phone down to remove it.

Step 3



- Remove the battery.

Step 4 — Back Controls

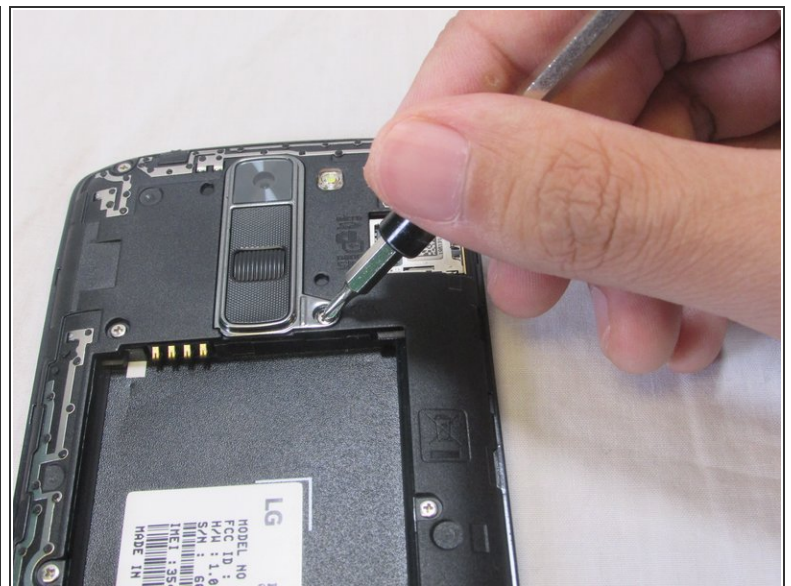

- Locate the screw keeping the back controls in place.
- Use a Phillips 00 screwdriver to remove the 3.4 mm screw.

Step 5



- Using the plastic opening tool create a space between the chrome bezel of the back buttons and the phone's casing.
- Using the plastic opening tool pry the back buttons upward to remove them from the phone's casing.

To reassemble your device, follow these instructions in reverse order.