



Asus Chromebook C300MA-DH02 Keyboard Panel Replacement

This guide will briefly take you through the steps necessary to remove the keyboard panel of an Asus Chromebook C300MA-DH02.

Written By: Juan Pericas



 
INTRODUCTION

For this model computer removing the keyboard panel is always going to be the first step because it is the only way to access all the key parts.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Keyboard Panel

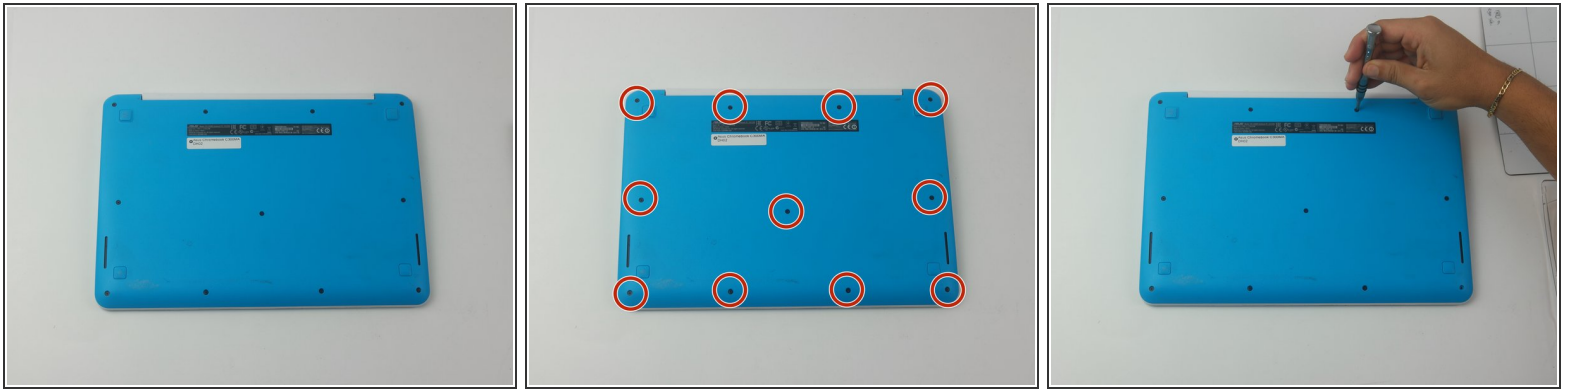


- Flip the Chromebook over so that the underside is facing up.
- Using the Phillips PH #000 screwdriver, remove the 11 "4mm" screws on the back of the device.

Step 2



- Wedge the plastic opening tool between the bottom cover of the laptop and the keyboard panel.
- Apply pressure and move the plastic opening tool around the border of the laptop until it pops out.

 Step 3

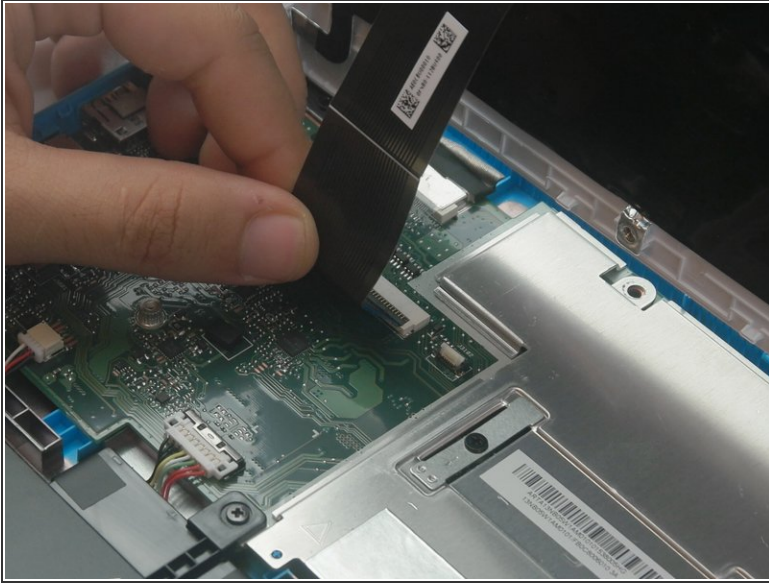

- Once the keyboard panel pops out, slowly move it upwards so that the keyboard connection is visible.
- Remove the keyboard connection from the motherboard by pulling it outwards from the connector.

To reassemble your device, follow these instructions in reverse order.