


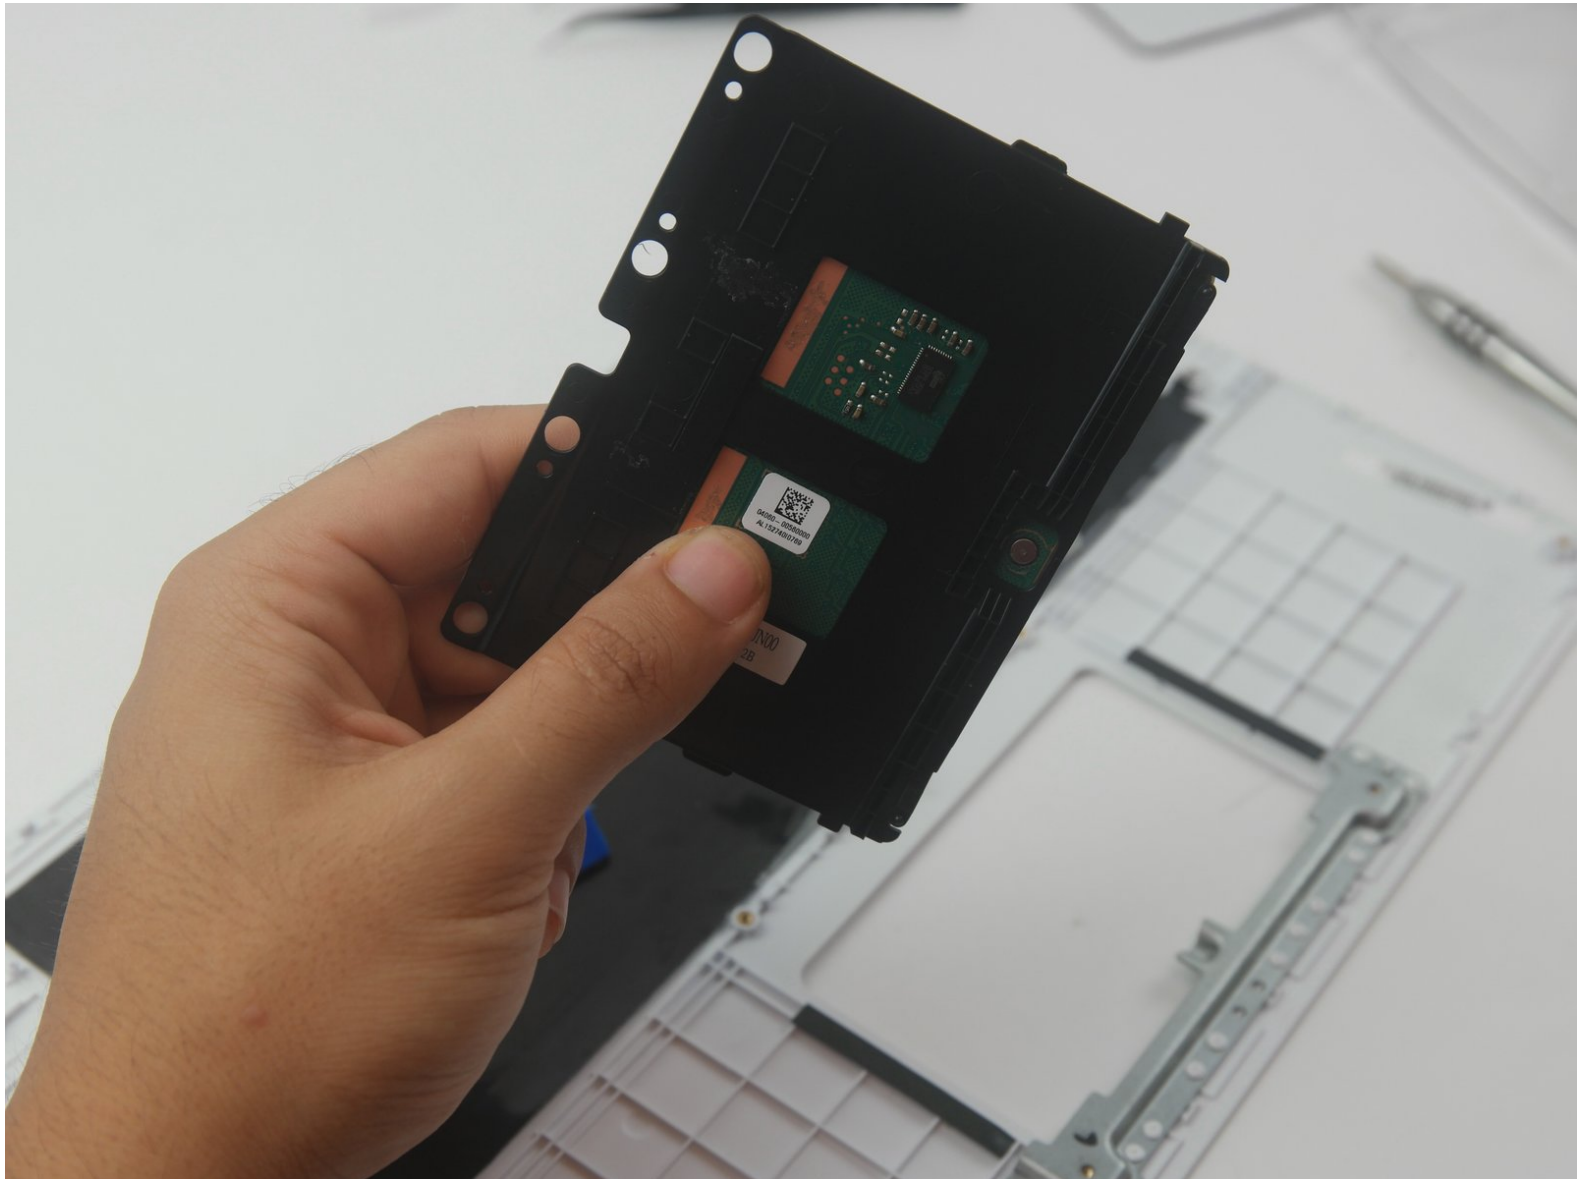

Asus Chromebook C300MA-DH02 Trackpad Replacement

In this guide you will find steps to replacing the trackpad for your device.

Written By: Raaefazer



INTRODUCTION

The track pad is small part that controls the motion of the mouse on your computer.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)



PARTS:

- [ASUS Chromebook C300MA Touchpad, White](#) (1)

Step 1 — Keyboard Panel




- Flip the Chromebook over so that the underside is facing up.
- Using the Phillips PH #000 screwdriver, remove the 11 "4mm" screws on the back of the device.

Step 2





- Wedge the plastic opening tool between the bottom cover of the laptop and the keyboard panel.
- Apply pressure and move the plastic opening tool around the border of the laptop until it pops out.

Step 3

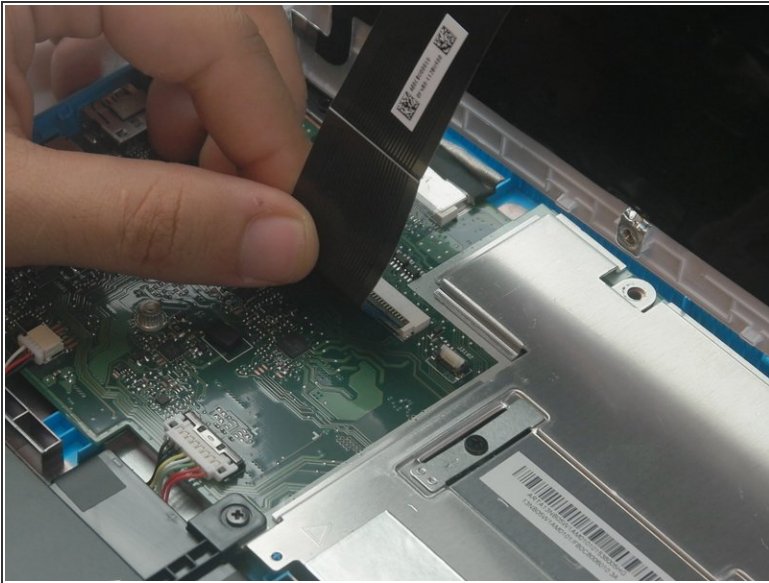


- Once the keyboard panel pops out, slowly move it upwards so that the keyboard connection is visible.
- Remove the keyboard connection from the motherboard by pulling it outwards from the connector.

Step 4 — Trackpad

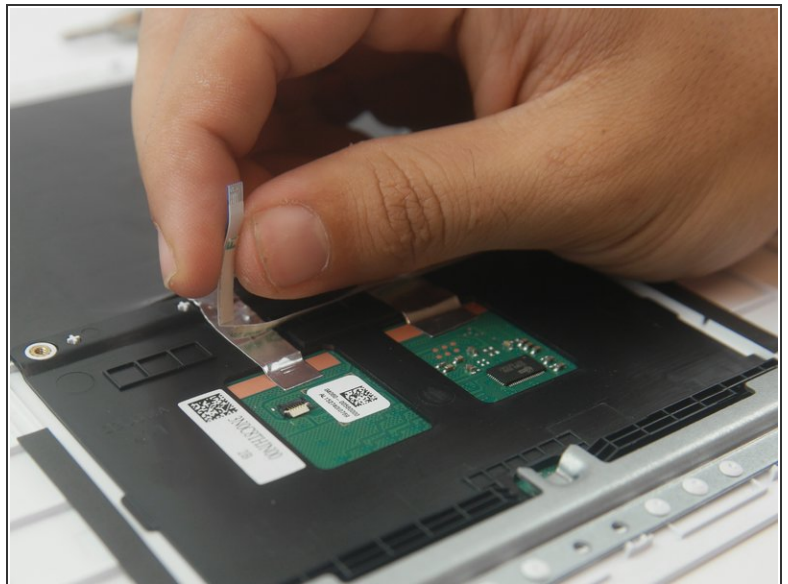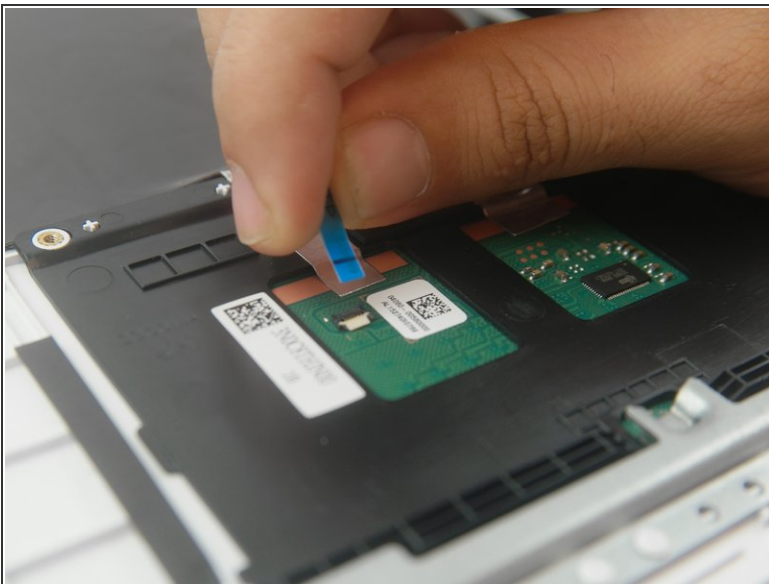



- Unplug the blue wire that connects trackpad to the keyboard.

Step 5

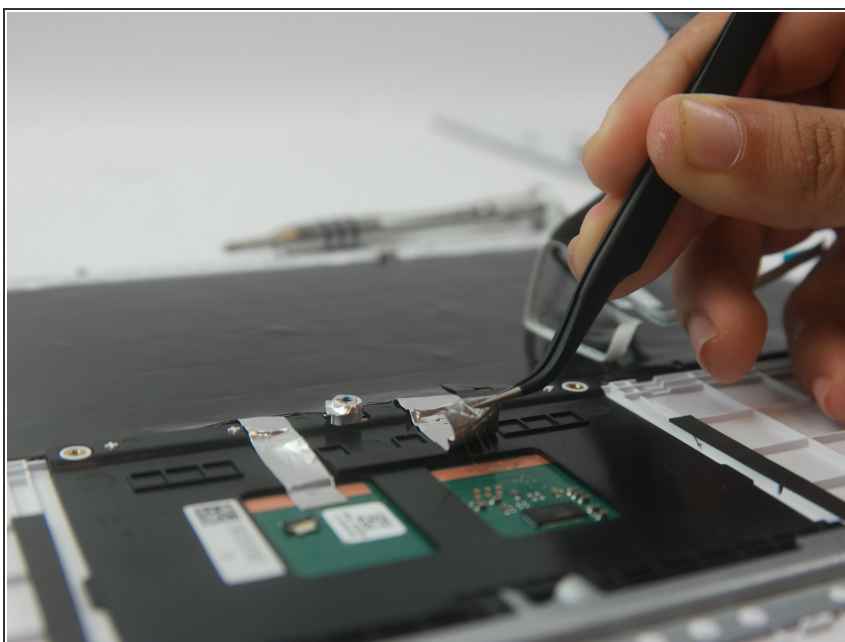


- Remove the aluminum tape that secures the trackpad. Use tweezers if necessary.

Step 6

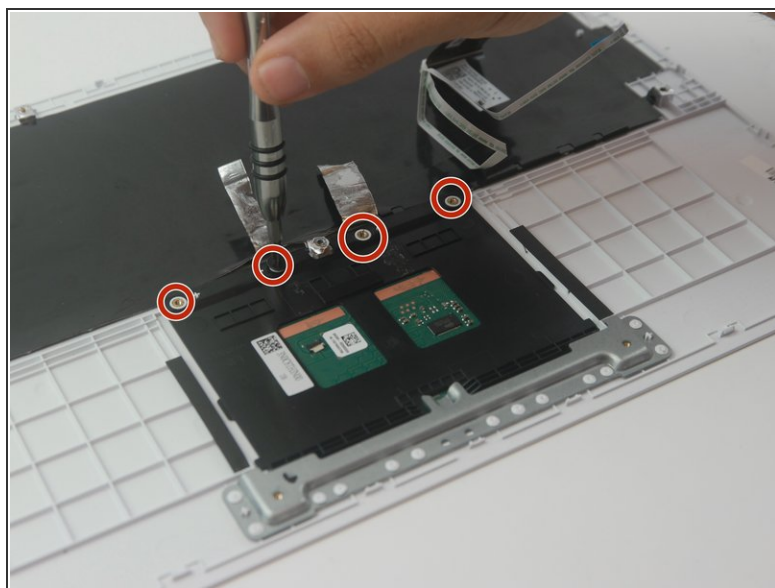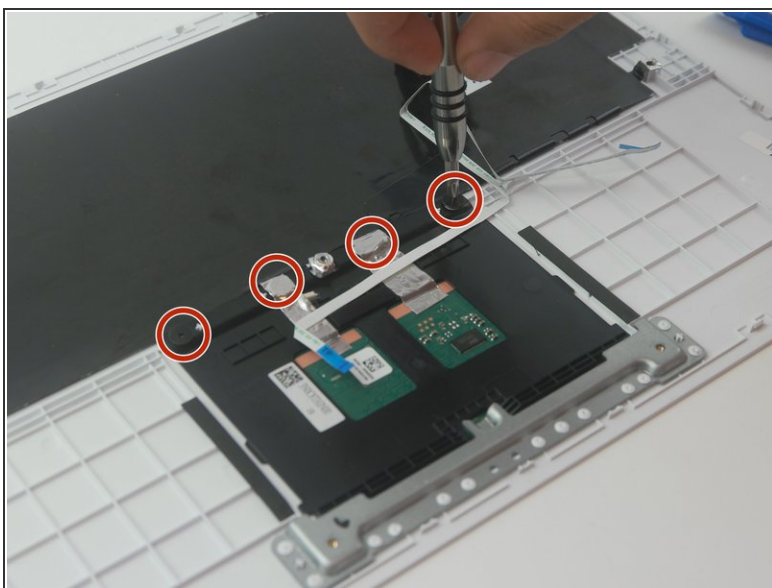

- Using the Phillips #000 screwdriver, remove the (4) four "4 mm" screws that secure trackpad onto keyboard.

Step 7

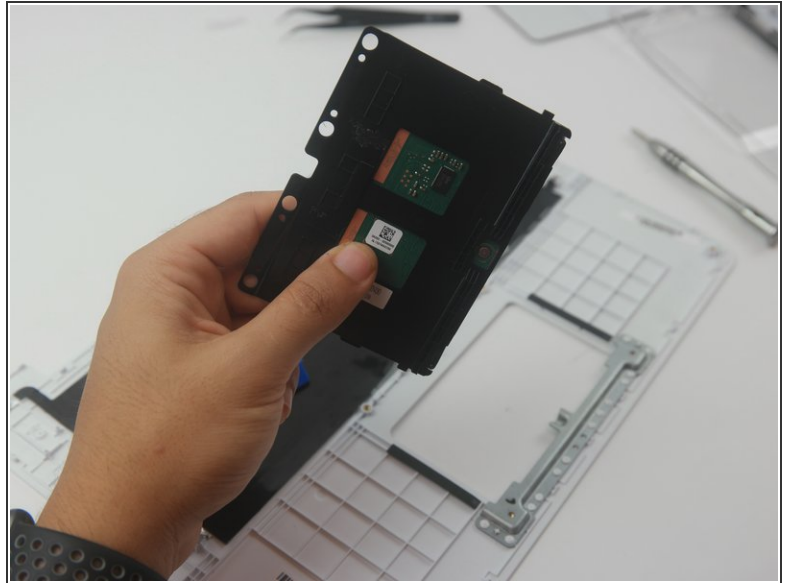

- Using a plastic opening tool, pry out the touchpad from the metal securing bracket.

To reassemble your device, follow these instructions in reverse order.